



2012 - Mazda6 - Body and Accessories

FRONT DOOR PAD REMOVAL/ INSTALLATION

1. To access the glass installation bolt, position the front door glass so that the distance from the top of the front door glass to the upper part of the front beltline molding is **approx. 80 mm { 3.1 in}** .

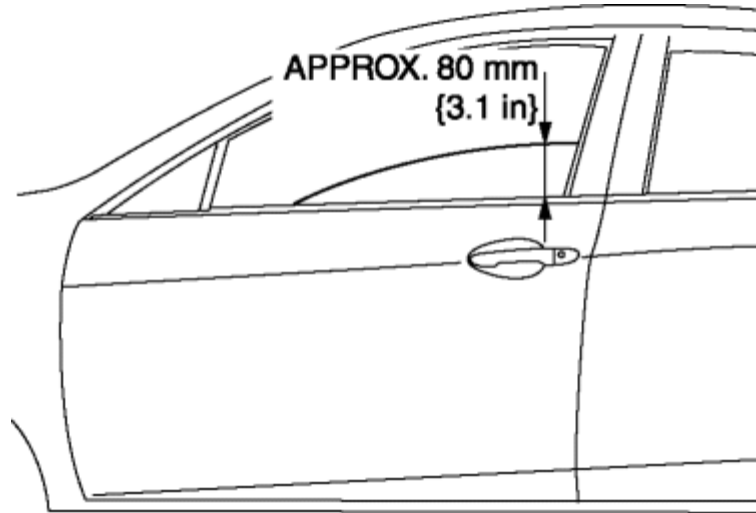

2. Disconnect the negative battery cable.
3. Remove the following parts:
 - a. Inner garnish (See [INNER GARNISH REMOVAL/ INSTALLATION.](#))
 - b. Front door trim (See [FRONT DOOR TRIM REMOVAL/ INSTALLATION.](#))
 - c. Front door speaker (See [FRONT DOOR SPEAKER REMOVAL/ INSTALLATION.](#))
 - d. Front door glass (See [FRONT DOOR GLASS REMOVAL/ INSTALLATION.](#))
 - e. Pressure sensor connector (See [PRESSURE SENSOR REMOVAL/ INSTALLATION.](#))
 - f. Front door module panel (See [FRONT DOOR MODULE PANEL REMOVAL/ INSTALLATION.](#))
4. Remove the fasteners.

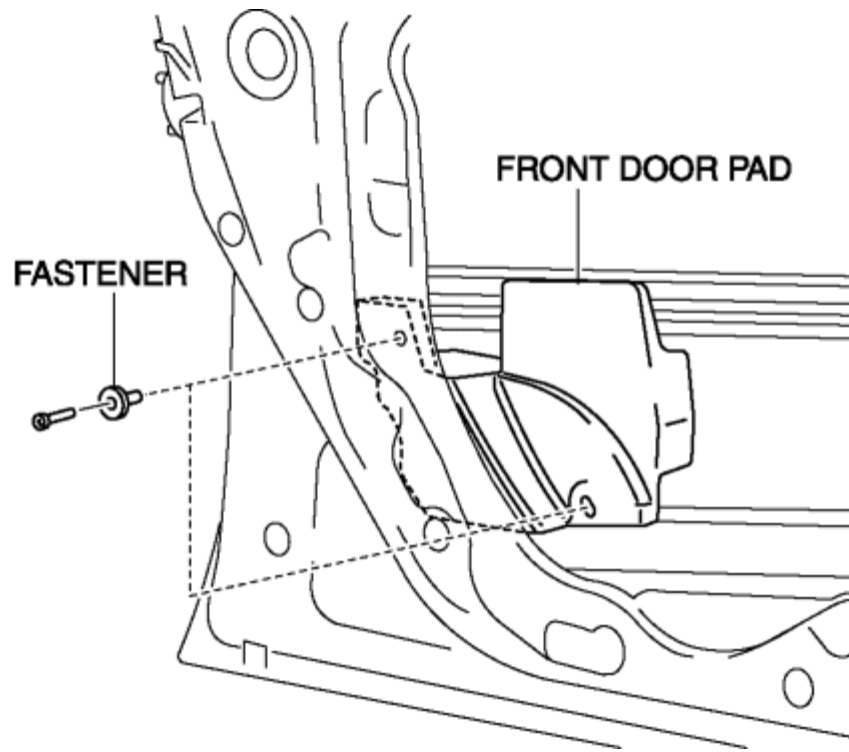

5. Remove the front door pad.
6. Install in the reverse order of removal.


[< Previous](#) [Next >](#)

[Back to Top](#)


2012 - Mazda6 - Body and Accessories

FRONT DOOR PAD REMOVAL/ INSTALLATION

1. To access the glass installation bolt, position the front door glass so that the distance from the top of the front door glass to the upper part of the front beltline molding is **approx. 80 mm { 3.1 in}** .

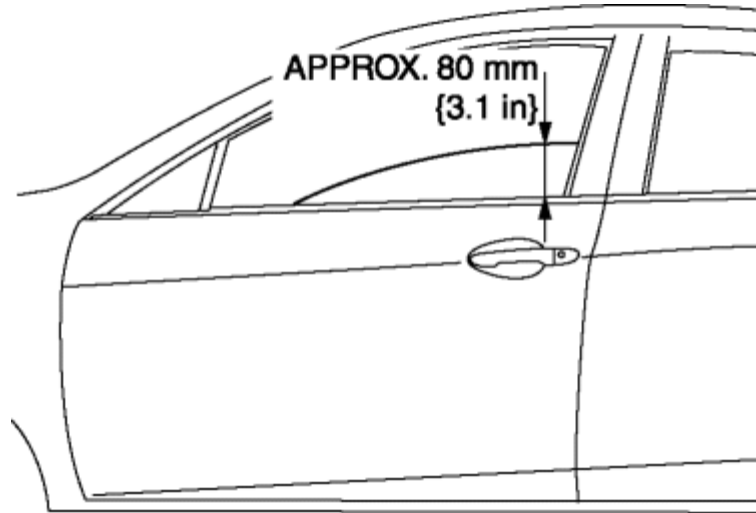

2. Disconnect the negative battery cable.
3. Remove the following parts:
 - a. Inner garnish (See [INNER GARNISH REMOVAL/ INSTALLATION.](#))
 - b. Front door trim (See [FRONT DOOR TRIM REMOVAL/ INSTALLATION.](#))
 - c. Front door speaker (See [FRONT DOOR SPEAKER REMOVAL/ INSTALLATION.](#))
 - d. Front door glass (See [FRONT DOOR GLASS REMOVAL/ INSTALLATION.](#))
 - e. Pressure sensor connector (See [PRESSURE SENSOR REMOVAL/ INSTALLATION.](#))
 - f. Front door module panel (See [FRONT DOOR MODULE PANEL REMOVAL/ INSTALLATION.](#))
4. Remove the fasteners.

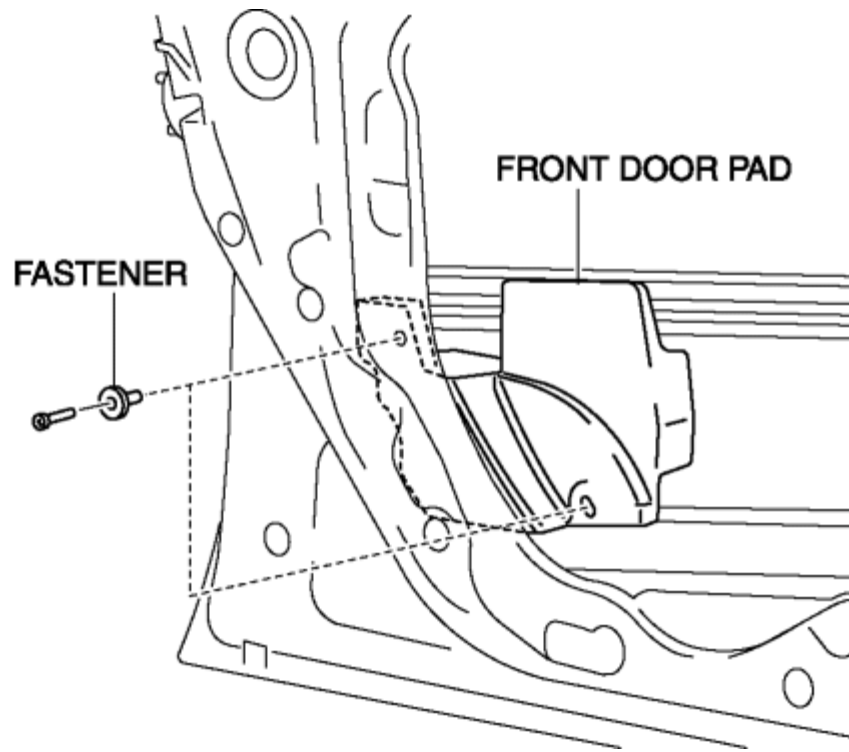

5. Remove the front door pad.
6. Install in the reverse order of removal.

[< Previous](#) [Next >](#)

[Back to Top](#)