


2012 - Mazda6 - Body and Accessories


FRONT DOOR CHECKER REMOVAL/ INSTALLATION

1. Fully close the front door glass.
2. Disconnect the negative battery cable.
3. Remove the inner garnish. (See [INNER GARNISH REMOVAL/ INSTALLATION](#).)
4. Remove the front door trim. (See [FRONT DOOR TRIM REMOVAL/ INSTALLATION](#).)
5. Remove the front door speaker. (See [FRONT DOOR SPEAKER REMOVAL/ INSTALLATION](#).)
6. Remove the bolt.

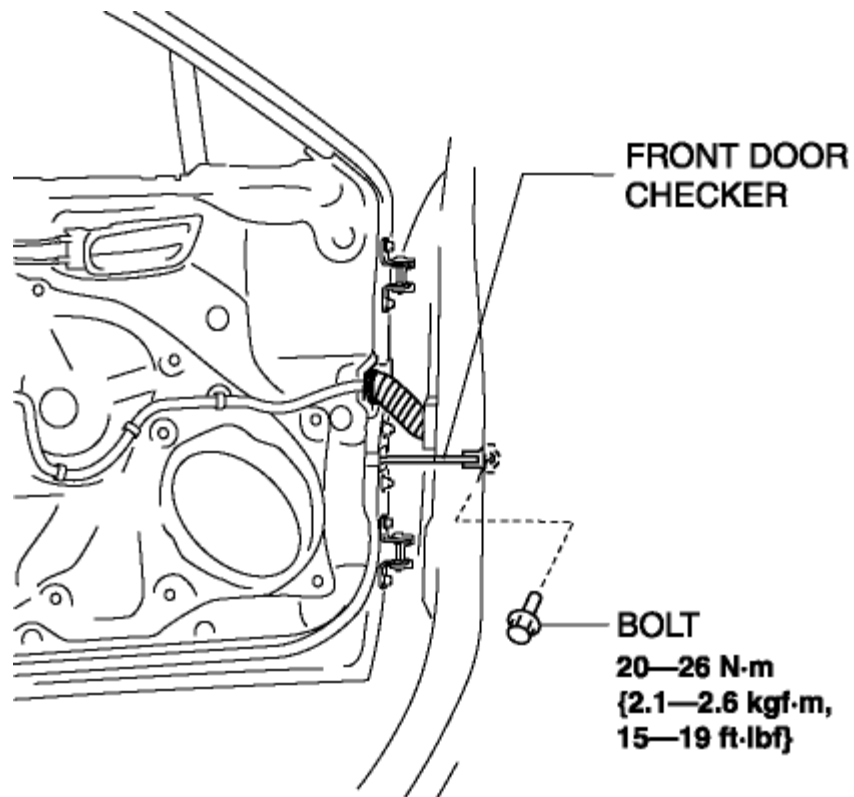

7. Remove the nut.

FRONT DOOR CHECKER

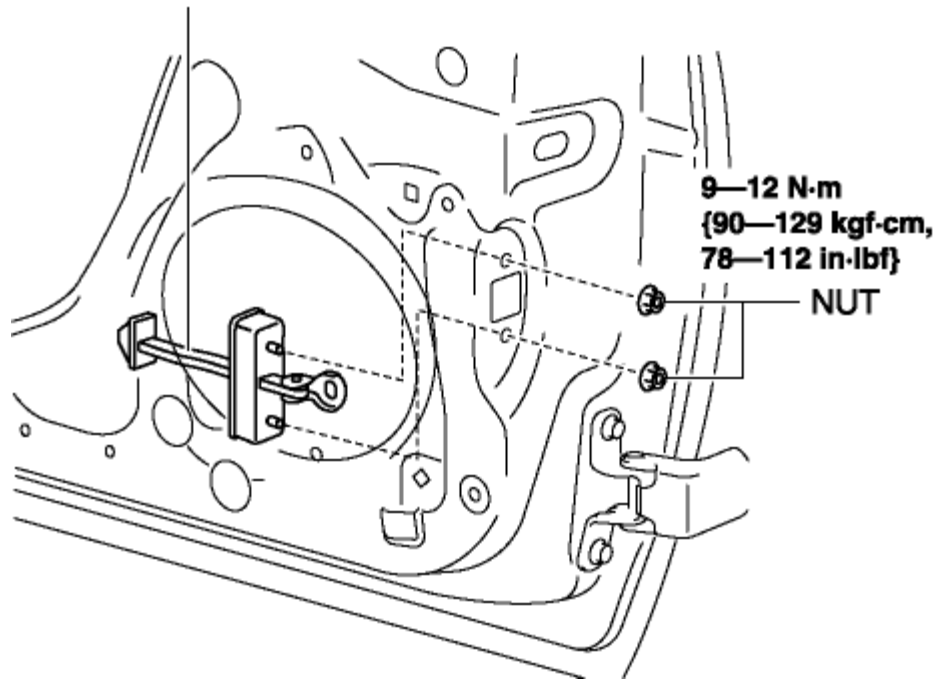

8. Pull out the front door checker from the front speaker installation hole.
9. Install in the reverse order of removal.

[< Previous](#) [Next >](#)


[Back to Top](#)

© 2012 Mazda North American Operations, U.S.A.

2012 - Mazda6 - Body and Accessories


FRONT DOOR CHECKER REMOVAL/ INSTALLATION

1. Fully close the front door glass.
2. Disconnect the negative battery cable.
3. Remove the inner garnish. (See [INNER GARNISH REMOVAL/ INSTALLATION](#).)
4. Remove the front door trim. (See [FRONT DOOR TRIM REMOVAL/ INSTALLATION](#).)
5. Remove the front door speaker. (See [FRONT DOOR SPEAKER REMOVAL/ INSTALLATION](#).)
6. Remove the bolt.

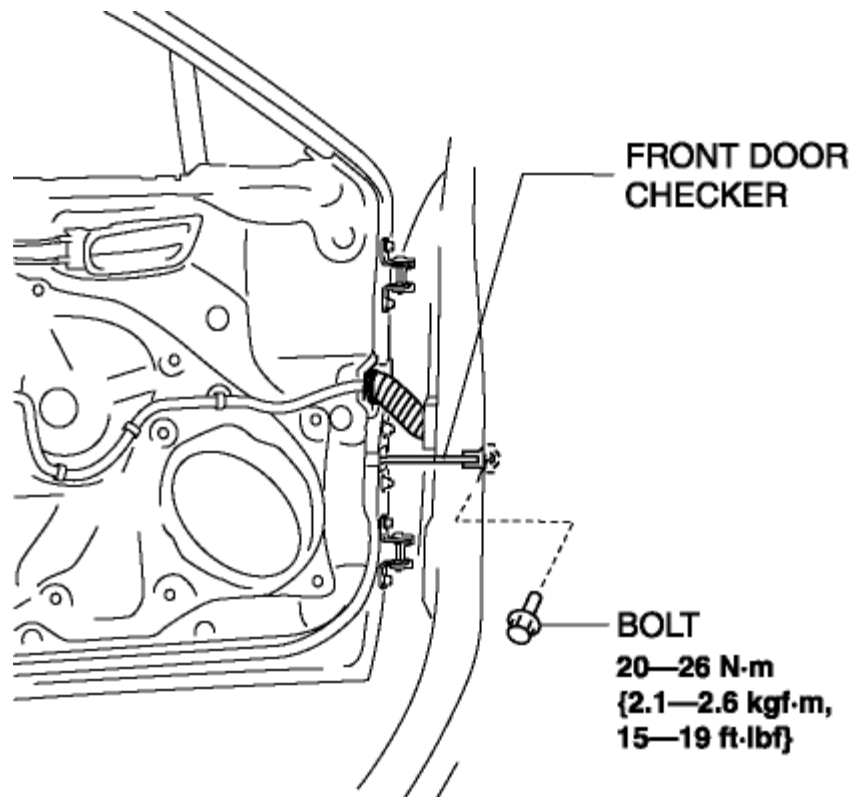

7. Remove the nut.

FRONT DOOR CHECKER

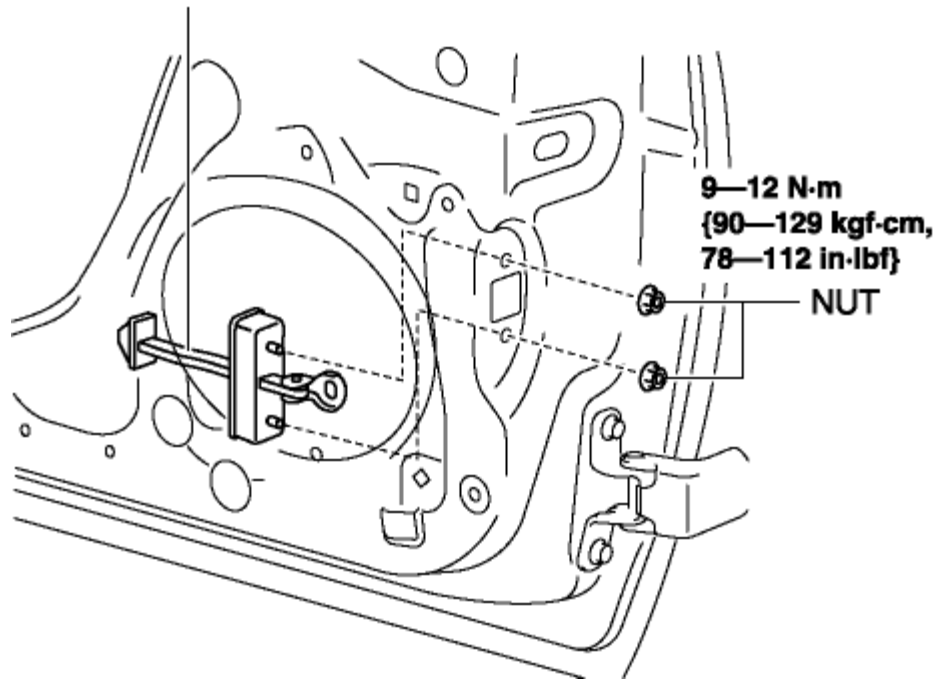

8. Pull out the front door checker from the front speaker installation hole.
9. Install in the reverse order of removal.

[< Previous](#) [Next >](#)

[Back to Top](#)

© 2012 Mazda North American Operations, U.S.A.