


2012 - Mazda6 - Body and Accessories

FRONT DOOR HINGE REMOVAL/ INSTALLATION

1. Disconnect the negative battery cable.
2. Remove the following parts:
 - a. Front bumper (See [FRONT BUMPER REMOVAL/ INSTALLATION](#).)
 - b. Front combination light (See [FRONT COMBINATION LIGHT REMOVAL/ INSTALLATION](#).)
 - c. Front fender molding (See [COWL GRILLE REMOVAL/ INSTALLATION](#).)
 - d. Side step molding (See [SIDE STEP MOLDING REMOVAL](#).) (See [SIDE STEP MOLDING INSTALLATION](#).)
 - e. Front fender panel (See [FRONT FENDER PANEL REMOVAL/ INSTALLATION](#).)
 - f. Front door (See [FRONT DOOR REMOVAL/ INSTALLATION](#).)
3. Remove in the order indicated in the table.

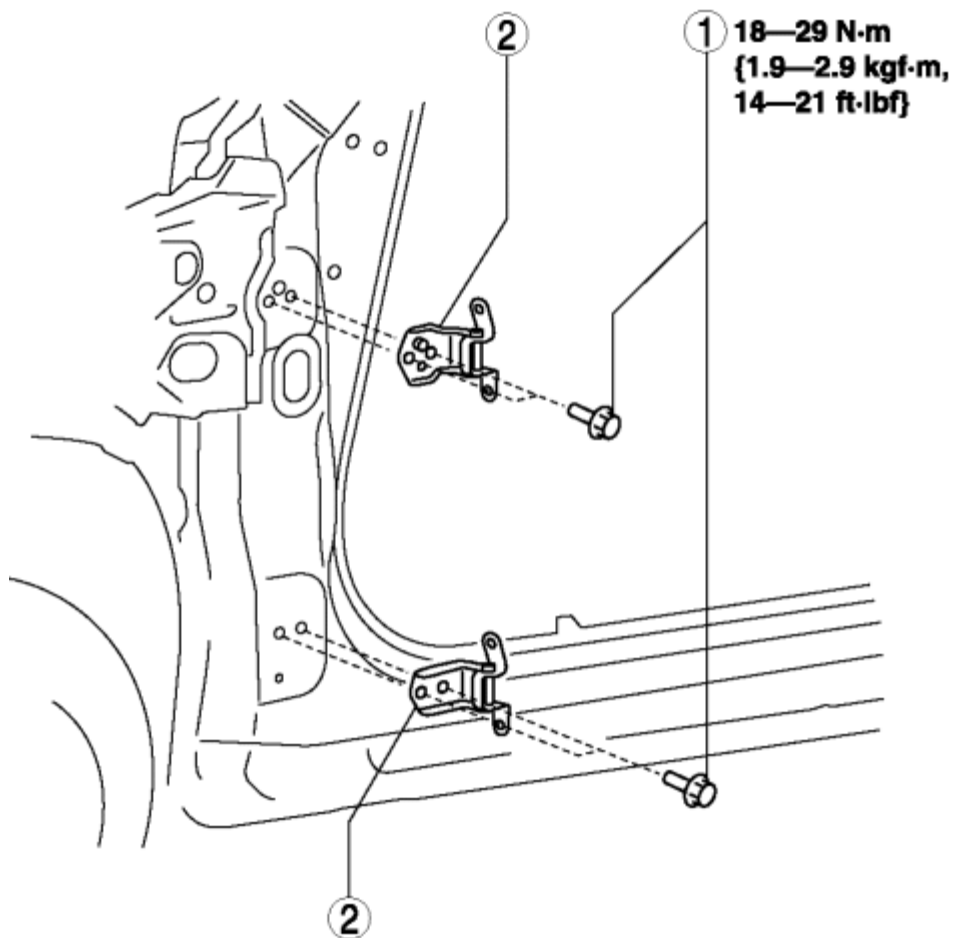

1	Bolt
2	Front door hinge

4. Install in the reverse order of removal.

[< Previous](#) [Next >](#)


[Back to Top](#)

© 2012 Mazda North American Operations, U.S.A.

2012 - Mazda6 - Body and Accessories

FRONT DOOR HINGE REMOVAL/ INSTALLATION

1. Disconnect the negative battery cable.
2. Remove the following parts:
 - a. Front bumper (See [FRONT BUMPER REMOVAL/ INSTALLATION](#).)
 - b. Front combination light (See [FRONT COMBINATION LIGHT REMOVAL/ INSTALLATION](#).)
 - c. Front fender molding (See [COWL GRILLE REMOVAL/ INSTALLATION](#).)
 - d. Side step molding (See [SIDE STEP MOLDING REMOVAL](#).)(See [SIDE STEP MOLDING INSTALLATION](#).)
 - e. Front fender panel (See [FRONT FENDER PANEL REMOVAL/ INSTALLATION](#).)
 - f. Front door (See [FRONT DOOR REMOVAL/ INSTALLATION](#).)
3. Remove in the order indicated in the table.

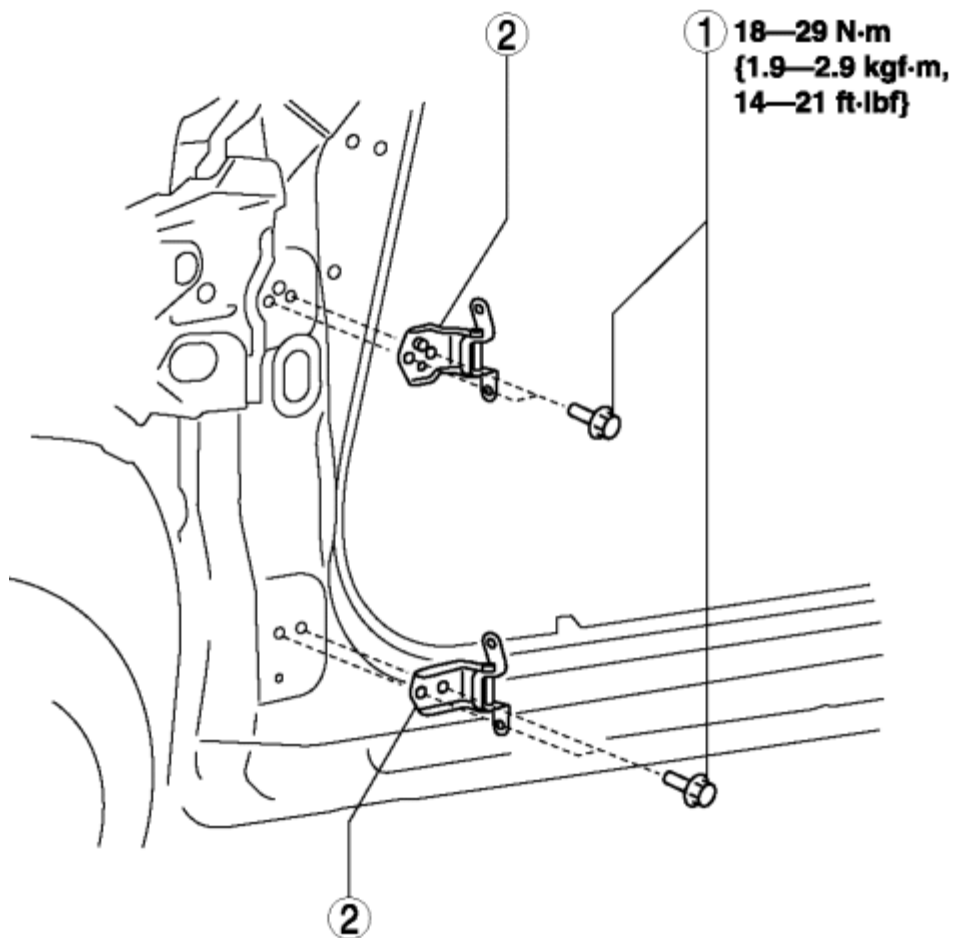

1	Bolt
2	Front door hinge

4. Install in the reverse order of removal.

[< Previous](#) [Next >](#)

[Back to Top](#)

© 2012 Mazda North American Operations, U.S.A.