


2012 - Mazda6 - Body and Accessories

REAR DOOR HINGE REMOVAL/ INSTALLATION

1. Disconnect the negative battery cable.
2. Remove the following parts:
 - a. Rear door (See [REAR DOOR REMOVAL/ INSTALLATION](#).)
 - b. Front scuff plate (See [FRONT SCUFF PLATE REMOVAL/ INSTALLATION](#).)
 - c. Rear scuff plate (See [REAR SCUFF PLATE REMOVAL/ INSTALLATION](#).)
 - d. B-pillar lower trim (See [B-PILLAR LOWER TRIM REMOVAL/ INSTALLATION](#).)
3. Remove in the order indicated in the table.

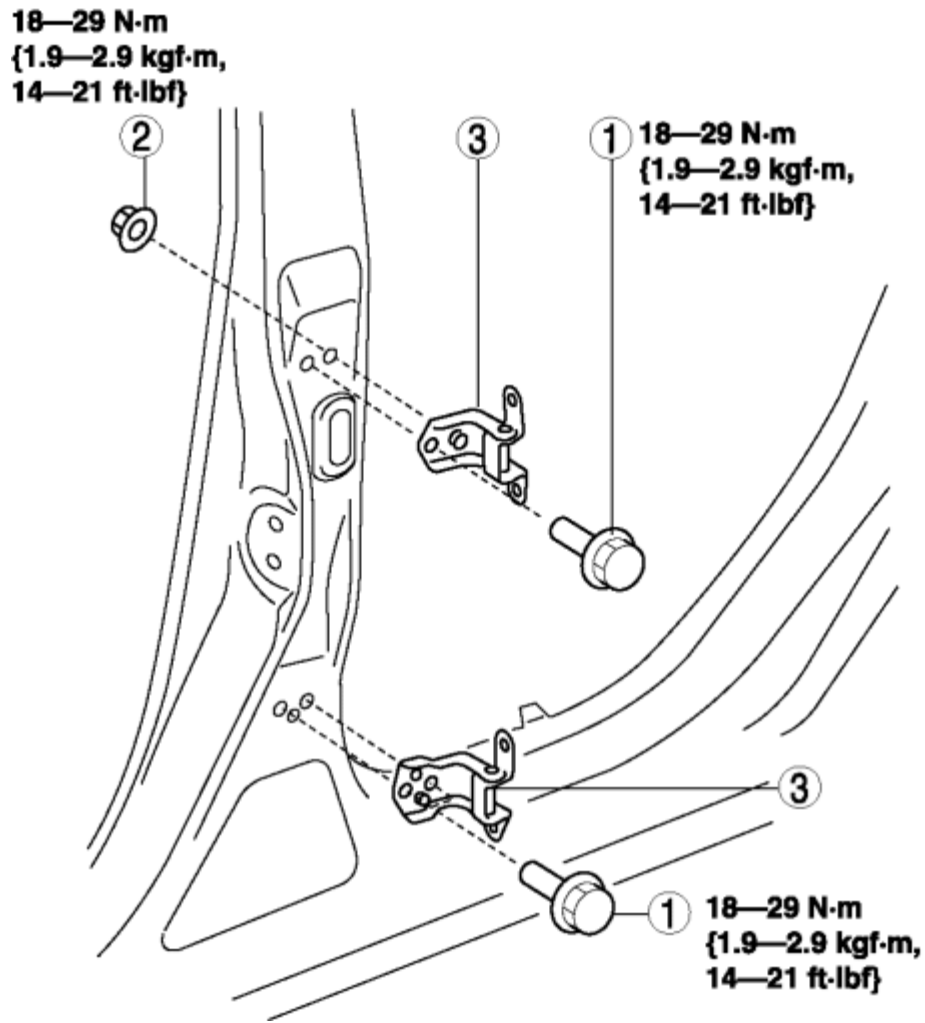

2	Nut
3	Rear door hinge

4. Install in the reverse order of removal.

[< Previous](#) [Next >](#)


[Back to Top](#)

© 2012 Mazda North American Operations, U.S.A.

2012 - Mazda6 - Body and Accessories

REAR DOOR HINGE REMOVAL/ INSTALLATION

1. Disconnect the negative battery cable.
2. Remove the following parts:
 - a. Rear door (See [REAR DOOR REMOVAL/ INSTALLATION](#).)
 - b. Front scuff plate (See [FRONT SCUFF PLATE REMOVAL/ INSTALLATION](#).)
 - c. Rear scuff plate (See [REAR SCUFF PLATE REMOVAL/ INSTALLATION](#).)
 - d. B-pillar lower trim (See [B-PILLAR LOWER TRIM REMOVAL/ INSTALLATION](#).)
3. Remove in the order indicated in the table.

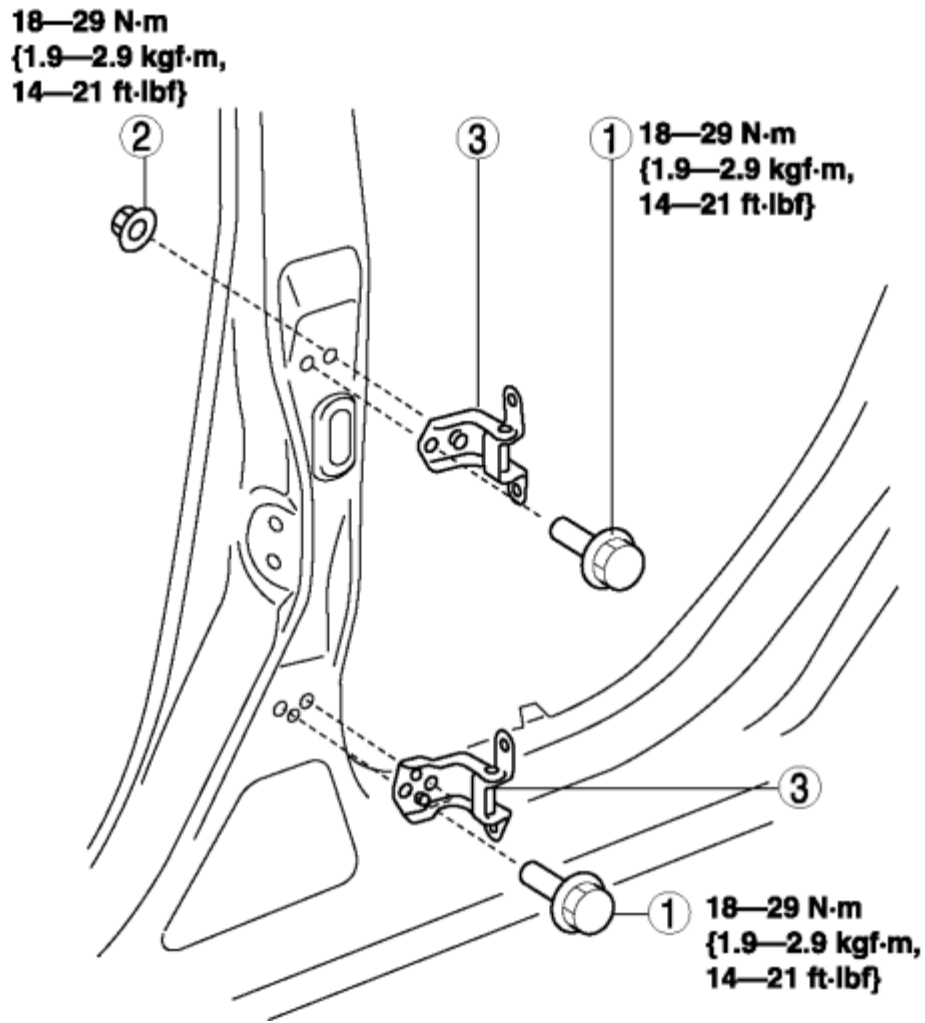

2	Nut
3	Rear door hinge

4. Install in the reverse order of removal.

[< Previous](#) [Next >](#)

[Back to Top](#)

© 2012 Mazda North American Operations, U.S.A.