



2012 - Mazda6 - Body and Accessories

REAR DOOR MODULE PANEL REMOVAL/ INSTALLATION

1. Fully open the rear door glass.
2. Disconnect the negative battery cable.
3. Remove the following parts:
 - a. Rear door trim (See [REAR DOOR TRIM REMOVAL/ INSTALLATION](#).)
 - b. Rear door speaker (See [REAR DOOR SPEAKER REMOVAL/ INSTALLATION](#).)
 - c. Rear door quarter glass (See [REAR DOOR QUARTER GLASS REMOVAL/ INSTALLATION](#).)
 - d. Rear door glass (See [REAR DOOR GLASS REMOVAL/ INSTALLATION](#).)
4. Remove the clips securing the rear door wiring harness from the rear door module panel.

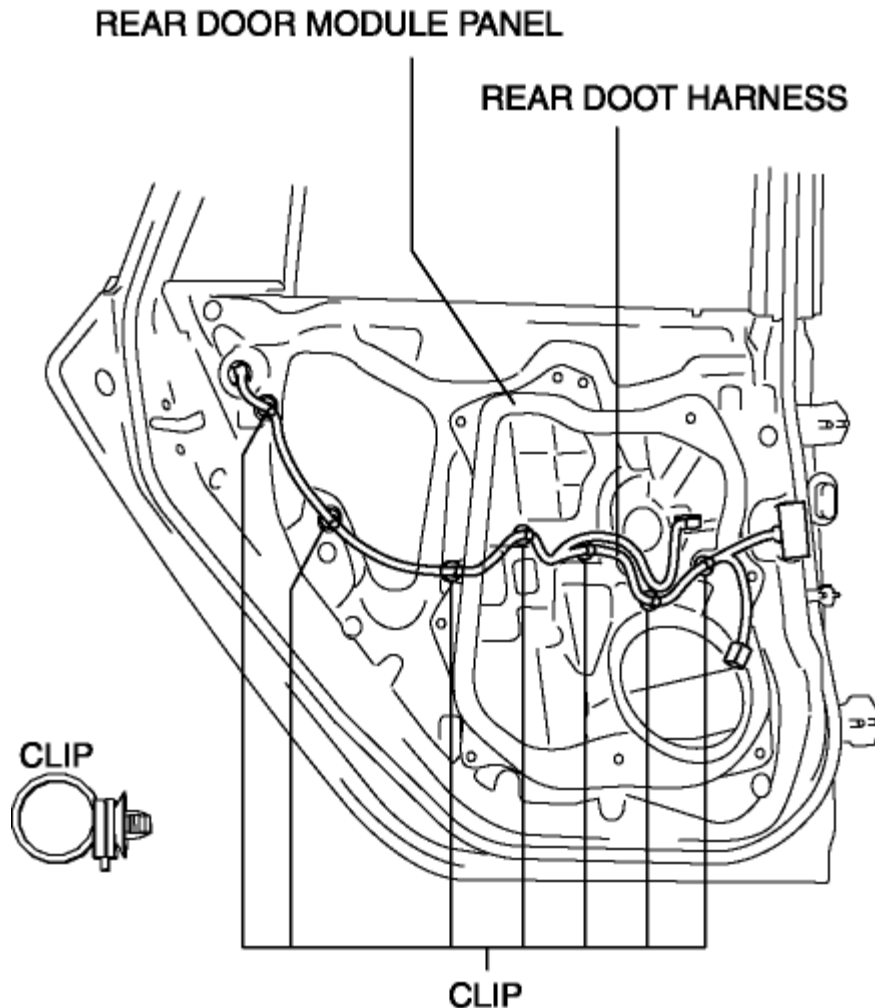

5. Remove the bolts.

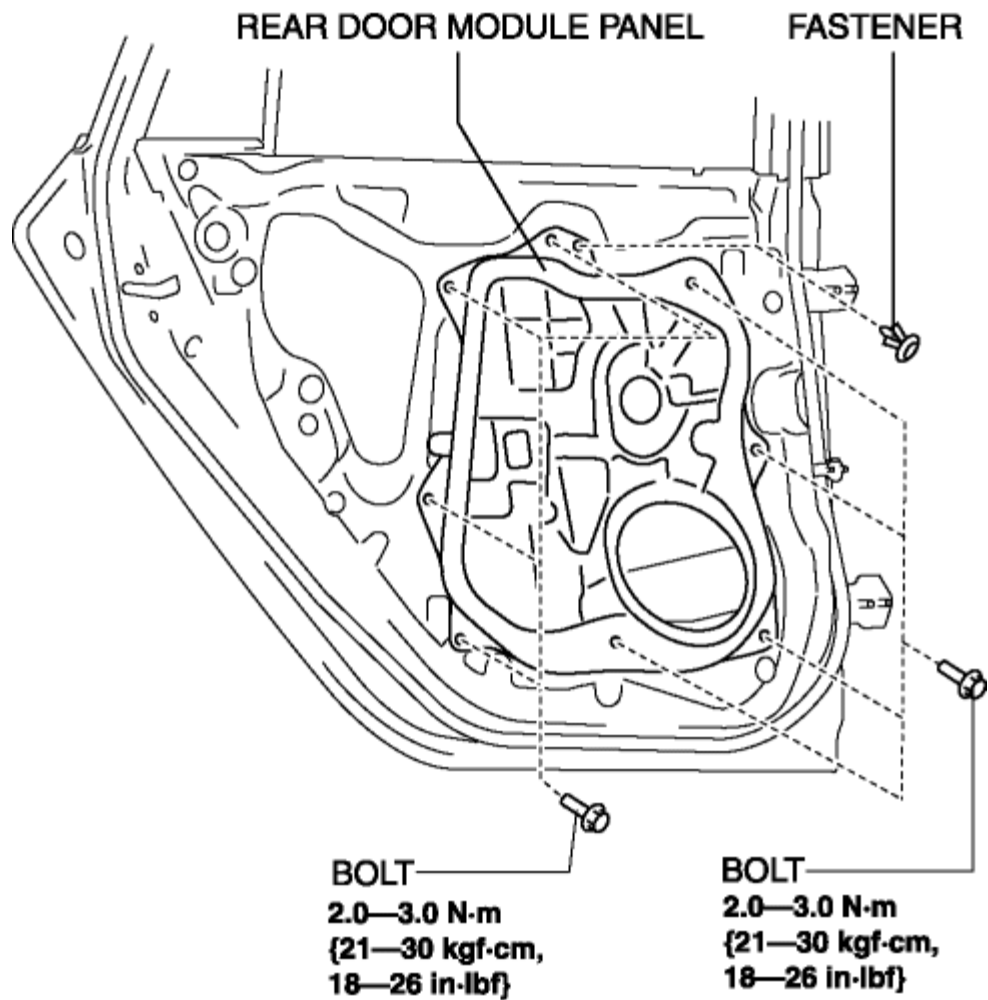

6. Remove the fastener.
7. Remove the rear door module panel.
8. Remove the rear power window motor. (See [POWER WINDOW MOTOR REMOVAL/ INSTALLATION.](#))
9. Remove the rear power window regulator. (See [REAR POWER WINDOW REGULATOR REMOVAL/ INSTALLATION.](#))
10. Install in the reverse order of removal.


[< Previous](#) [Next >](#)

[Back to Top](#)


2012 - Mazda6 - Body and Accessories

REAR DOOR MODULE PANEL REMOVAL/ INSTALLATION

1. Fully open the rear door glass.
2. Disconnect the negative battery cable.
3. Remove the following parts:
 - a. Rear door trim (See [REAR DOOR TRIM REMOVAL/ INSTALLATION](#).)
 - b. Rear door speaker (See [REAR DOOR SPEAKER REMOVAL/ INSTALLATION](#).)
 - c. Rear door quarter glass (See [REAR DOOR QUARTER GLASS REMOVAL/ INSTALLATION](#).)
 - d. Rear door glass (See [REAR DOOR GLASS REMOVAL/ INSTALLATION](#).)
4. Remove the clips securing the rear door wiring harness from the rear door module panel.

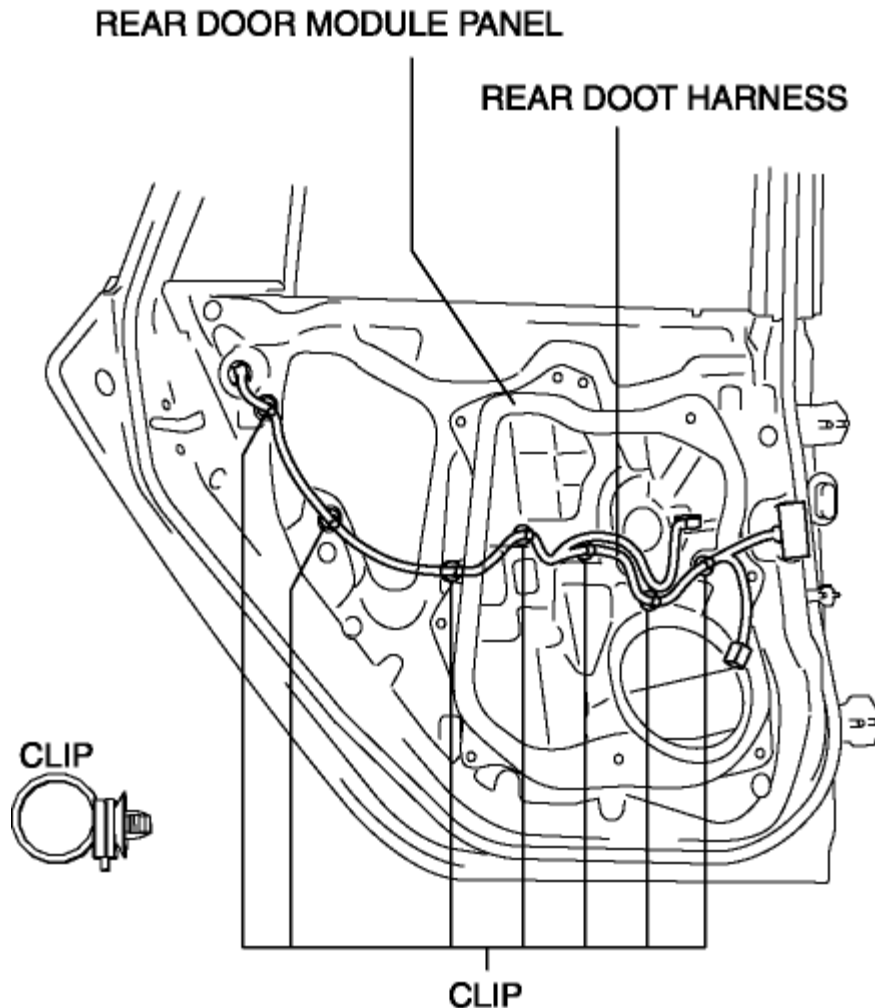

5. Remove the bolts.

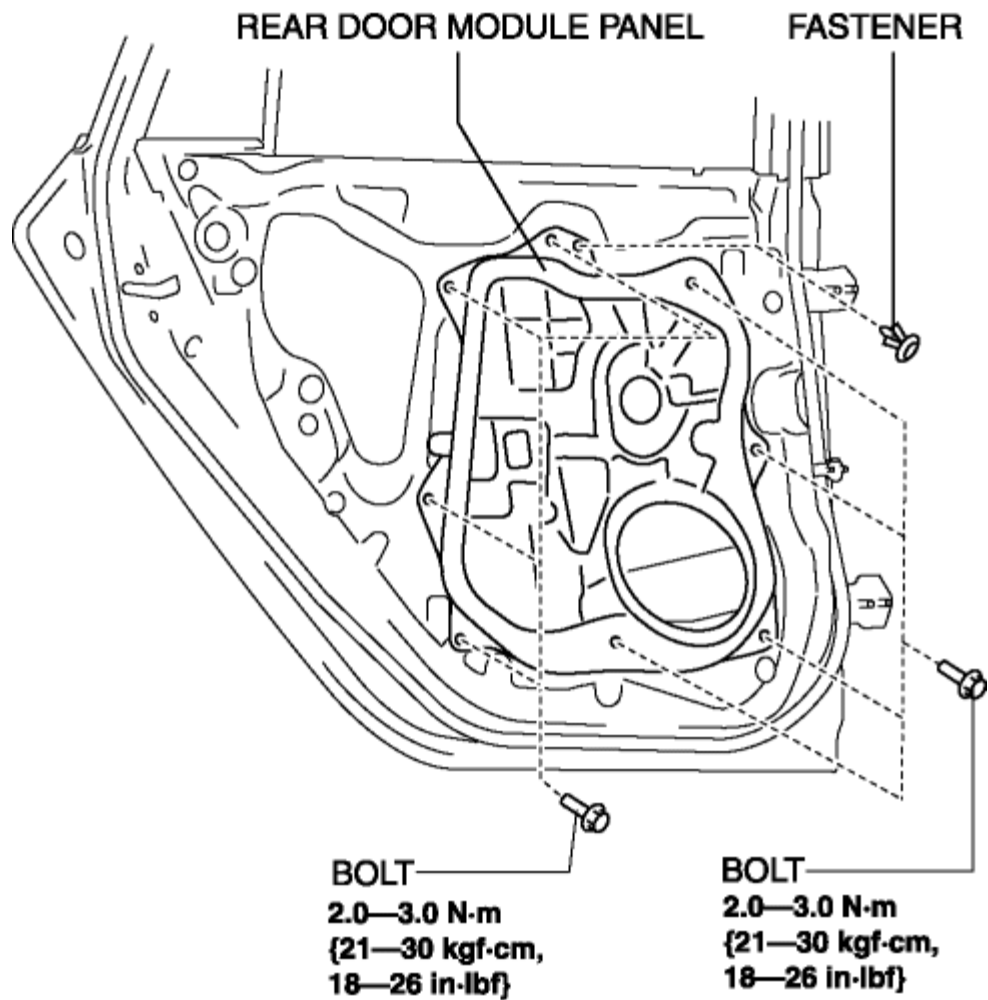

6. Remove the fastener.
7. Remove the rear door module panel.
8. Remove the rear power window motor. (See [POWER WINDOW MOTOR REMOVAL/ INSTALLATION.](#))
9. Remove the rear power window regulator. (See [REAR POWER WINDOW REGULATOR REMOVAL/ INSTALLATION.](#))
10. Install in the reverse order of removal.

[< Previous](#) [Next >](#)

[Back to Top](#)