
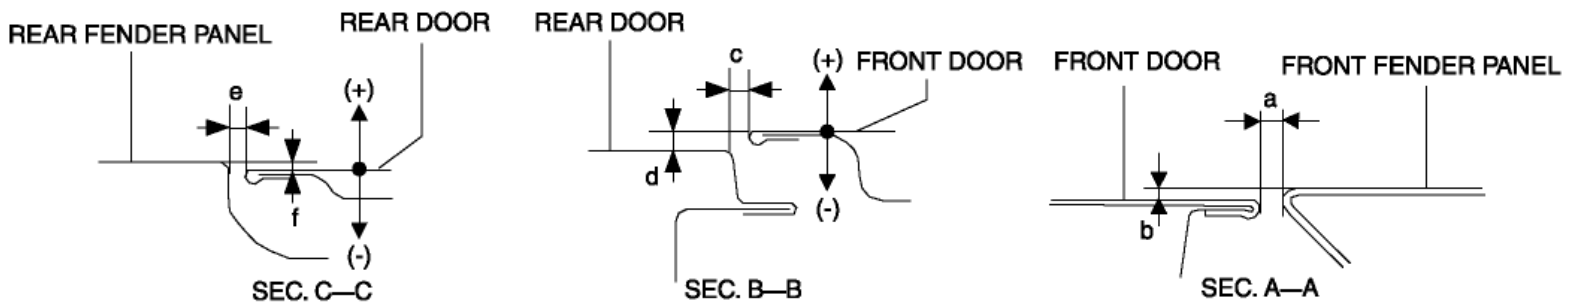


2012 - Mazda6 - Body and Accessories

DOOR ADJUSTMENT

1. Loosen the door hinge installation bolts.
2. Adjust the gap and height difference to the standard range by moving the door back and forth, left and right.

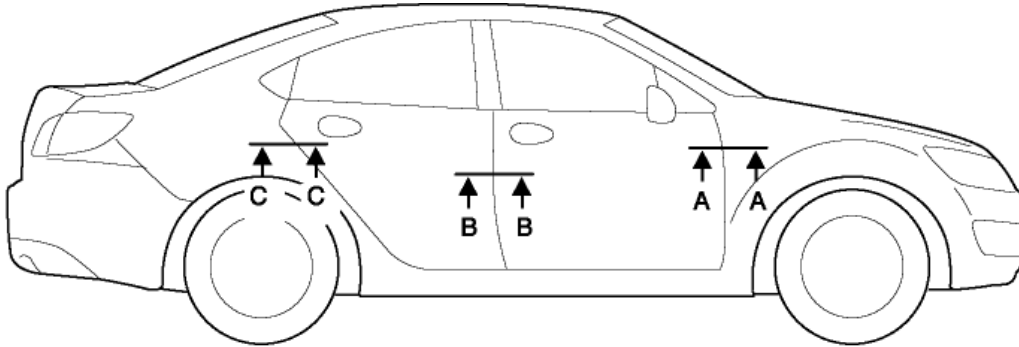



Standard range

- a: 2.5–4.9 mm {0.10–0.19 in}
 - b: -1.2–1.2 mm {-0.047–0.047 in}
 - c: 2.5–4.5 mm {0.10–0.17 in}
 - d: -1.0–1.0 mm {-0.039–0.039 in}
 - e: 2.5–4.5 mm {0.10–0.17 in}
 - f: -1.0–1.0 mm {-0.039–0.039 in}
3. Tighten the bolts.
 4. If the door does not open/close smoothly, adjust it by loosening the door lock striker installation screw.

2012 - Mazda6 - Body and Accessories

DOOR ADJUSTMENT

1. Loosen the door hinge installation bolts.
2. Adjust the gap and height difference to the standard range by moving the door back and forth, left and right.

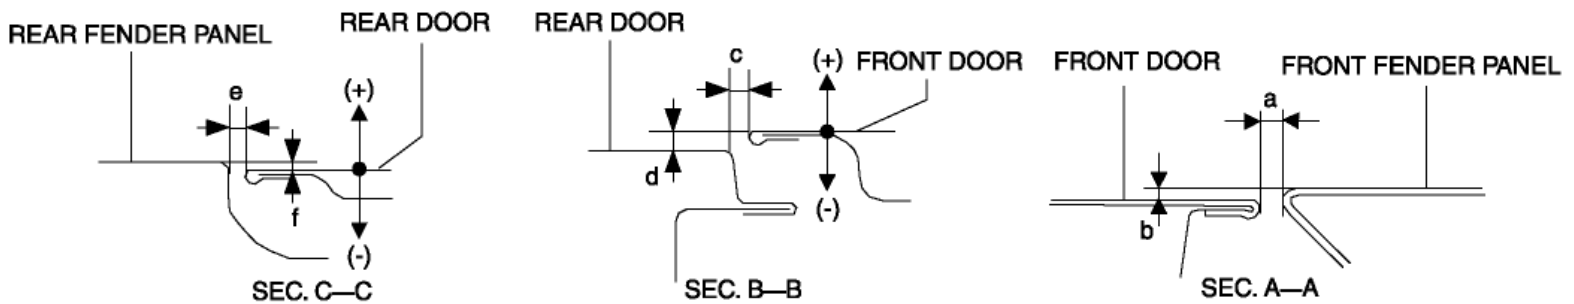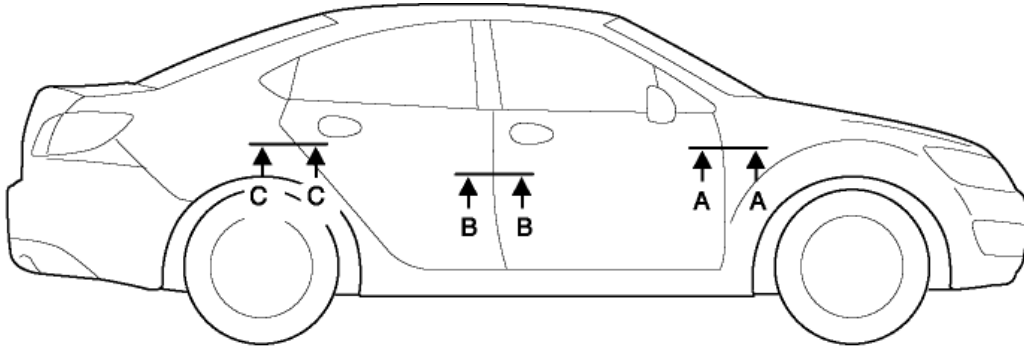

Standard range

- a: 2.5–4.9 mm {0.10–0.19 in}
 - b: -1.2–1.2 mm {-0.047–0.047 in}
 - c: 2.5–4.5 mm {0.10–0.17 in}
 - d: -1.0–1.0 mm {-0.039–0.039 in}
 - e: 2.5–4.5 mm {0.10–0.17 in}
 - f: -1.0–1.0 mm {-0.039–0.039 in}
3. Tighten the bolts.
 4. If the door does not open/close smoothly, adjust it by loosening the door lock striker installation screw.