


2012 - Mazda6 - Body and Accessories

REAR DOOR PAD REMOVAL/ INSTALLATION

1. To access the glass installation bolt, position the rear door glass so that the distance from the top of the rear door glass to the upper part of the rear beltline molding is **approx. 144 mm { 5.67 in}** .

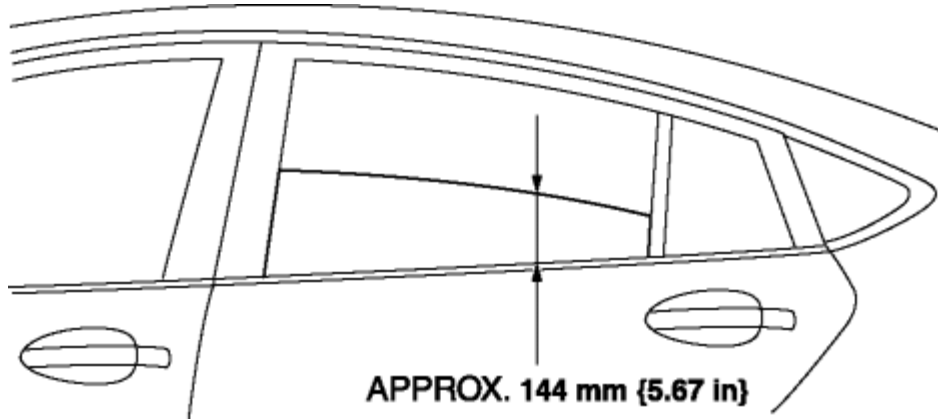


2. Disconnect the negative battery cable.

3. Remove the following parts:


- a. Rear door trim (See [REAR DOOR TRIM REMOVAL/ INSTALLATION.](#))
- b. Rear door speaker (See [REAR DOOR SPEAKER REMOVAL/ INSTALLATION.](#))
- c. Rear door glass (See [REAR DOOR GLASS REMOVAL/ INSTALLATION.](#))
- d. Rear door module panel (See [REAR DOOR MODULE PANEL REMOVAL/ INSTALLATION.](#))

4. Remove the fasteners A.

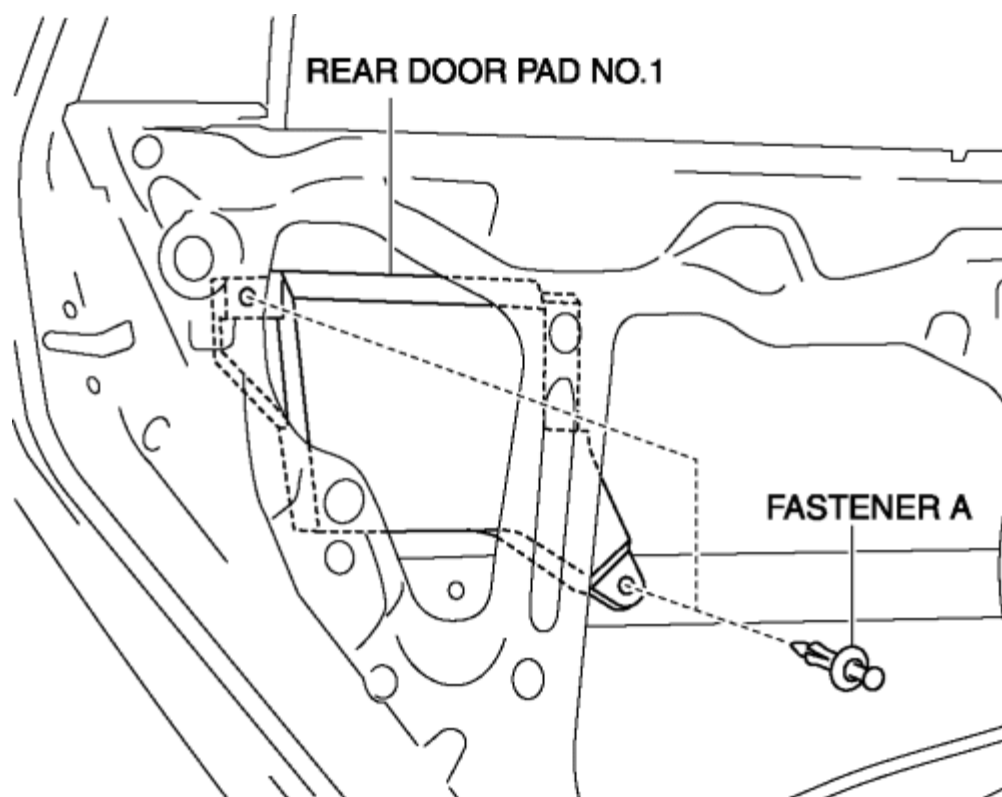

5. Remove the rear door pad No.1.

6. Remove the fasteners B.

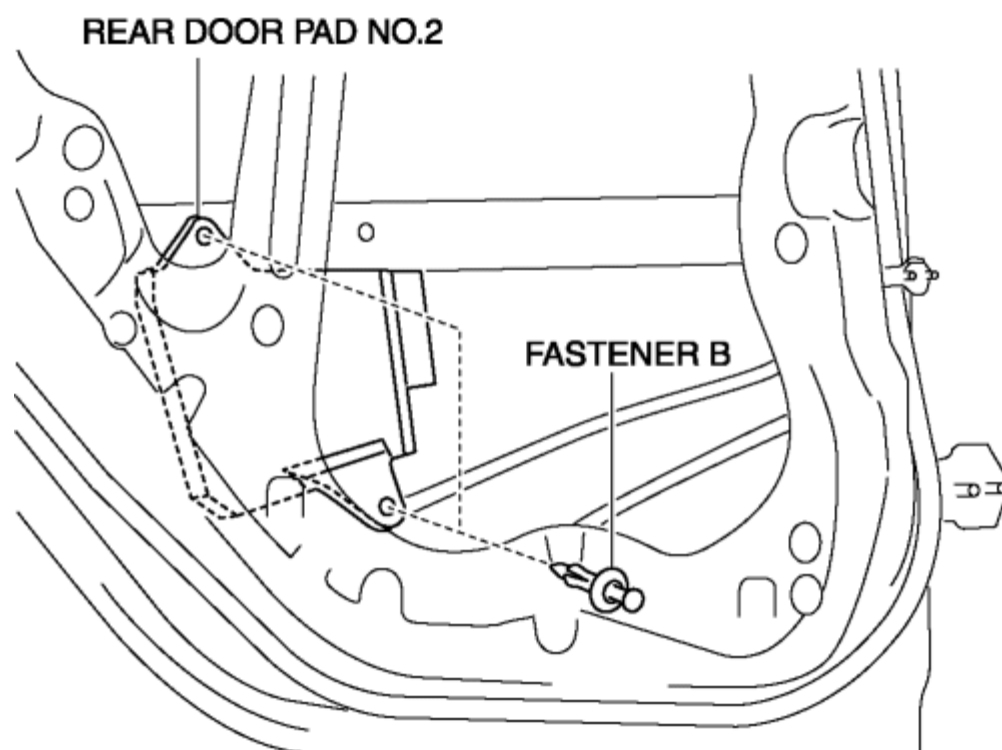


7. Remove the rear door pad No.2.

8. Install in the reverse order of removal.

2012 - Mazda6 - Body and Accessories

REAR DOOR PAD REMOVAL/ INSTALLATION

1. To access the glass installation bolt, position the rear door glass so that the distance from the top of the rear door glass to the upper part of the rear beltline molding is **approx. 144 mm { 5.67 in}** .

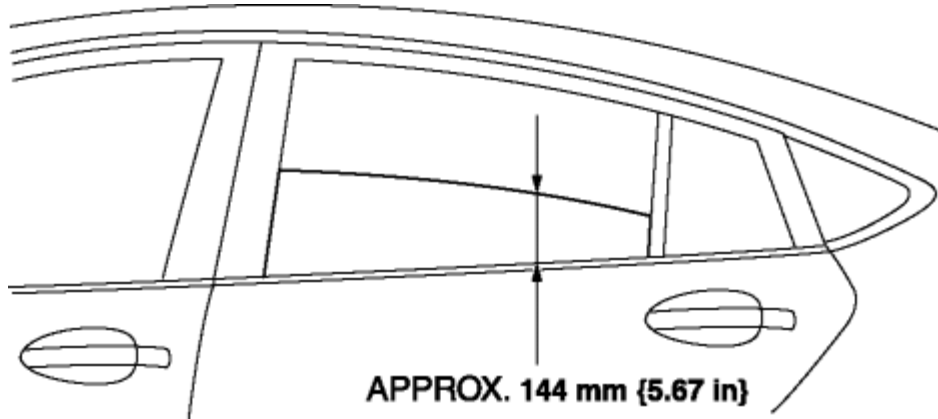


2. Disconnect the negative battery cable.

3. Remove the following parts:


- a. Rear door trim (See [REAR DOOR TRIM REMOVAL/ INSTALLATION.](#))
- b. Rear door speaker (See [REAR DOOR SPEAKER REMOVAL/ INSTALLATION.](#))
- c. Rear door glass (See [REAR DOOR GLASS REMOVAL/ INSTALLATION.](#))
- d. Rear door module panel (See [REAR DOOR MODULE PANEL REMOVAL/ INSTALLATION.](#))

4. Remove the fasteners A.

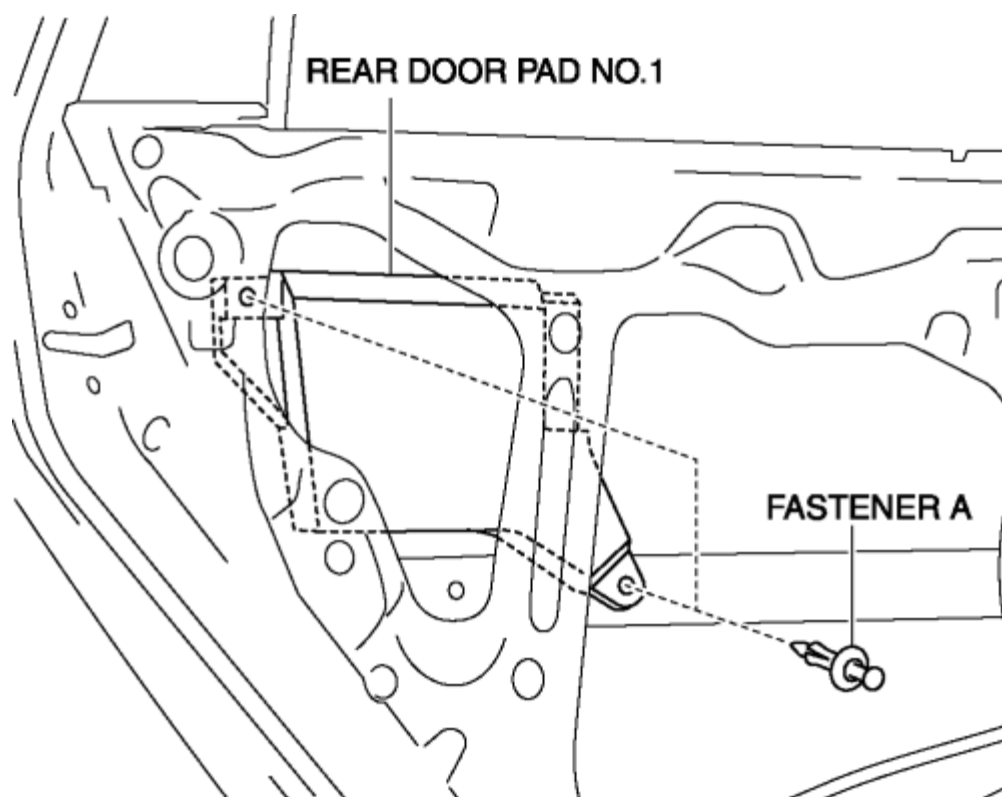

5. Remove the rear door pad No.1.

6. Remove the fasteners B.

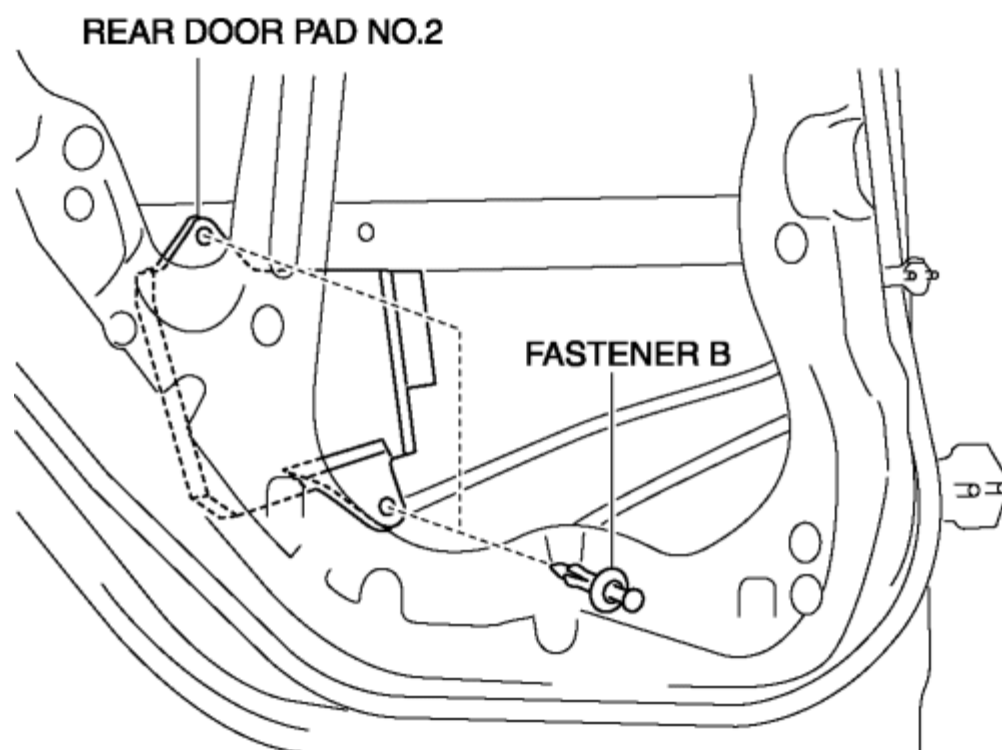

7. Remove the rear door pad No.2.

8. Install in the reverse order of removal.

