


2012 - Mazda6 - Body and Accessories

GLASS/ WINDOWS/ MIRRORS LOCATION INDEX

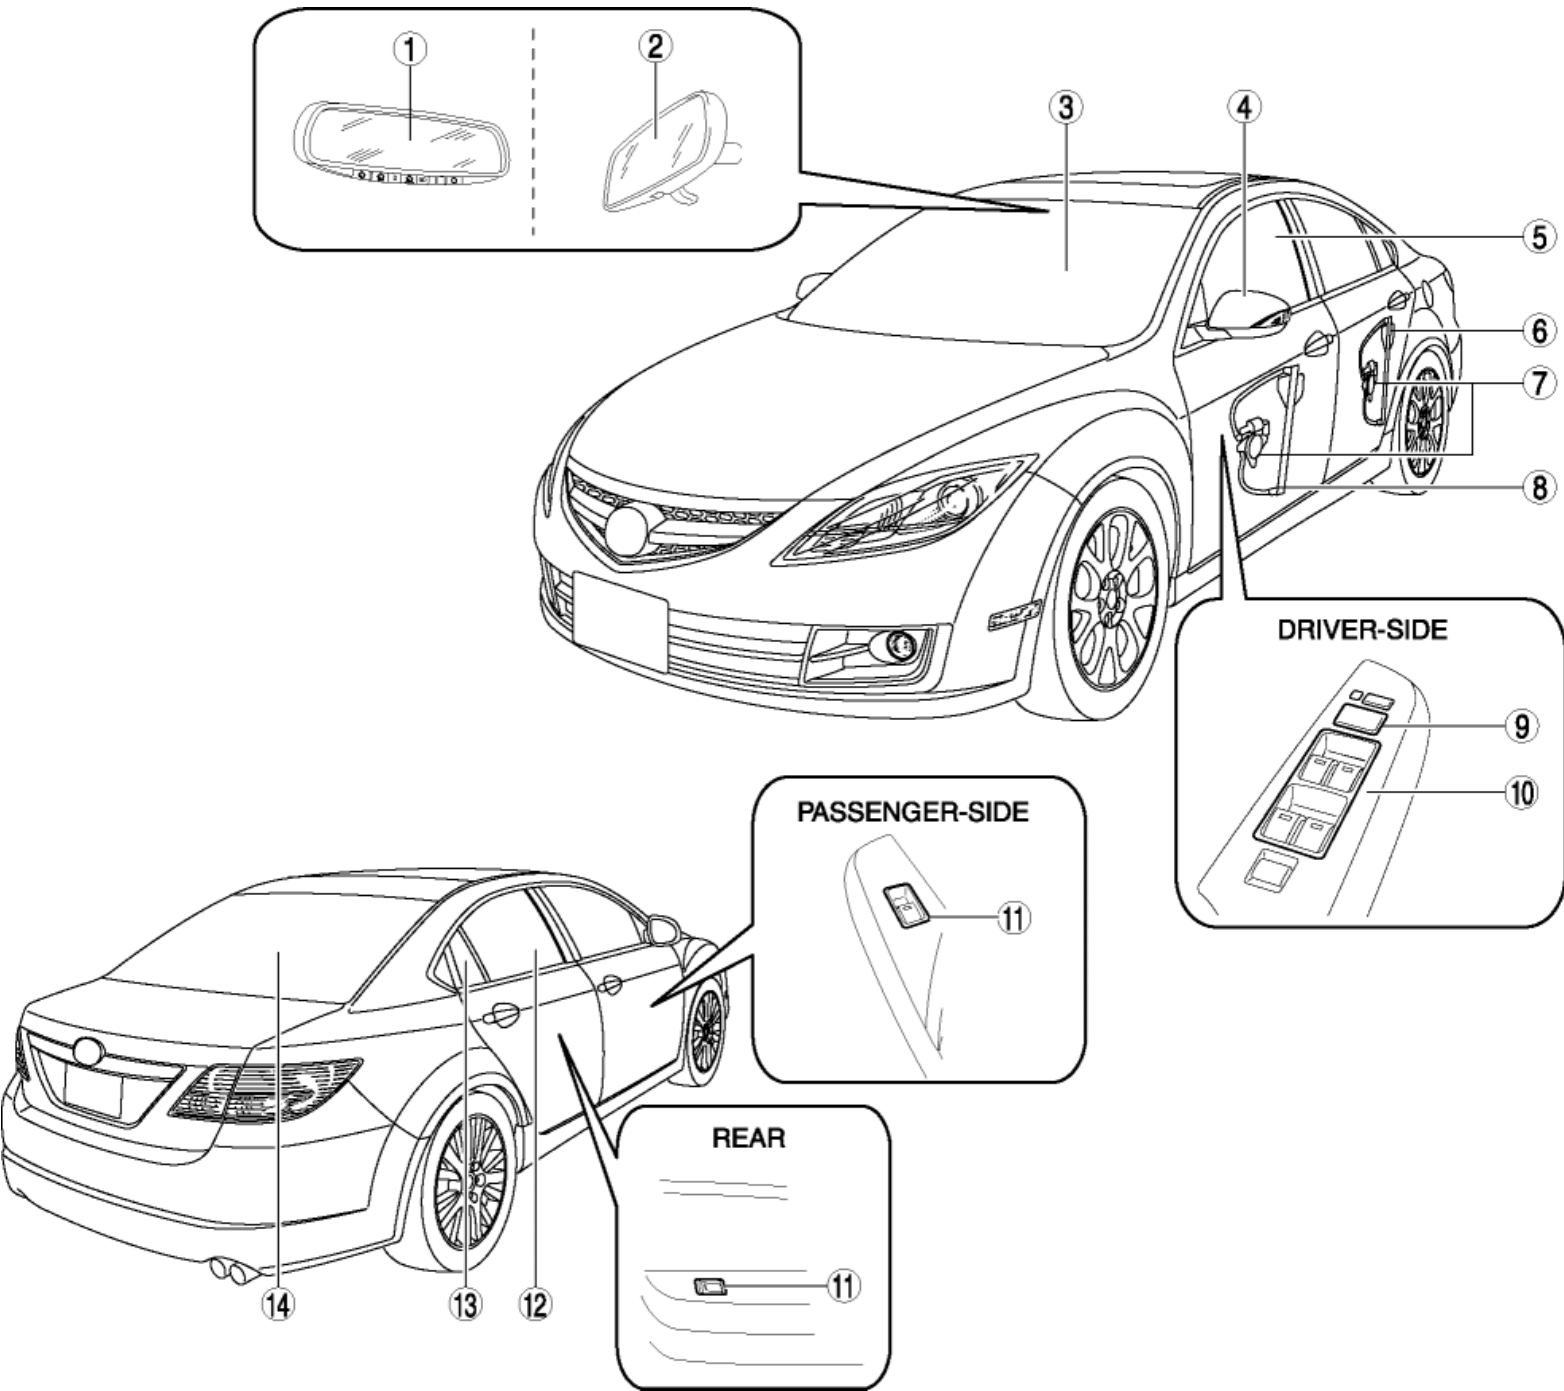


- 1 Auto-dimming mirror
- (See [AUTO-DIMMING MIRROR REMOVAL.](#))
- (See [AUTO-DIMMING MIRROR INSTALLATION.](#))
- (See [AUTO-DIMMING MIRROR INSPECTION.](#))

2	Rearview mirror (See REARVIEW MIRROR REMOVAL.) (See REARVIEW MIRROR INSTALLATION.) (See MIRROR BASE REMOVAL.) (See MIRROR BASE INSTALLATION.)
3	Windshield (See WINDSHIELD REMOVAL.) (See WINDSHIELD INSTALLATION.)
4	Power outer mirror (See POWER OUTER MIRROR REMOVAL/ INSTALLATION.) (See OUTER MIRROR GLASS REMOVAL.) (See OUTER MIRROR GLASS INSTALLATION.) (See OUTER MIRROR GARNISH REMOVAL/ INSTALLATION.) (See POWER OUTER MIRROR INSPECTION.)
5	Front door glass (See FRONT DOOR GLASS REMOVAL/ INSTALLATION.)
6	Rear power window regulator (See REAR POWER WINDOW REGULATOR REMOVAL/ INSTALLATION.)
7	Power window motor (See POWER WINDOW MOTOR REMOVAL/ INSTALLATION.) (See POWER WINDOW MOTOR INSPECTION.)
8	Front power window regulator (See FRONT POWER WINDOW REGULATOR REMOVAL/ INSTALLATION.)
9	Power outer mirror switch (See POWER OUTER MIRROR SWITCH REMOVAL/ INSTALLATION.) (See POWER OUTER MIRROR SWITCH INSPECTION.)
10	Power window main switch (See POWER WINDOW MAIN SWITCH REMOVAL/ INSTALLATION.) (See POWER WINDOW MAIN SWITCH INSPECTION.) (See POWER WINDOW SYSTEM INITIALIZATION PROCEDURE.) (See PERSONALIZATION FEATURES SETTING PROCEDURE.)
11	Power window subswitch (See POWER WINDOW SUBSWITCH REMOVAL/ INSTALLATION.) (See POWER WINDOW SUBSWITCH INSPECTION.) (See POWER WINDOW SYSTEM INITIALIZATION PROCEDURE.)
12	Rear door glass

	(See REAR DOOR GLASS REMOVAL/ INSTALLATION.)
13	Rear door quarter glass (See REAR DOOR QUARTER GLASS REMOVAL/ INSTALLATION.)
14	Rear window glass (See REAR WINDOW GLASS REMOVAL.) (See REAR WINDOW GLASS INSTALLATION.) (See FILAMENT INSPECTION.) (See FILAMENT REPAIR.)

2012 - Mazda6 - Body and Accessories

GLASS/ WINDOWS/ MIRRORS LOCATION INDEX

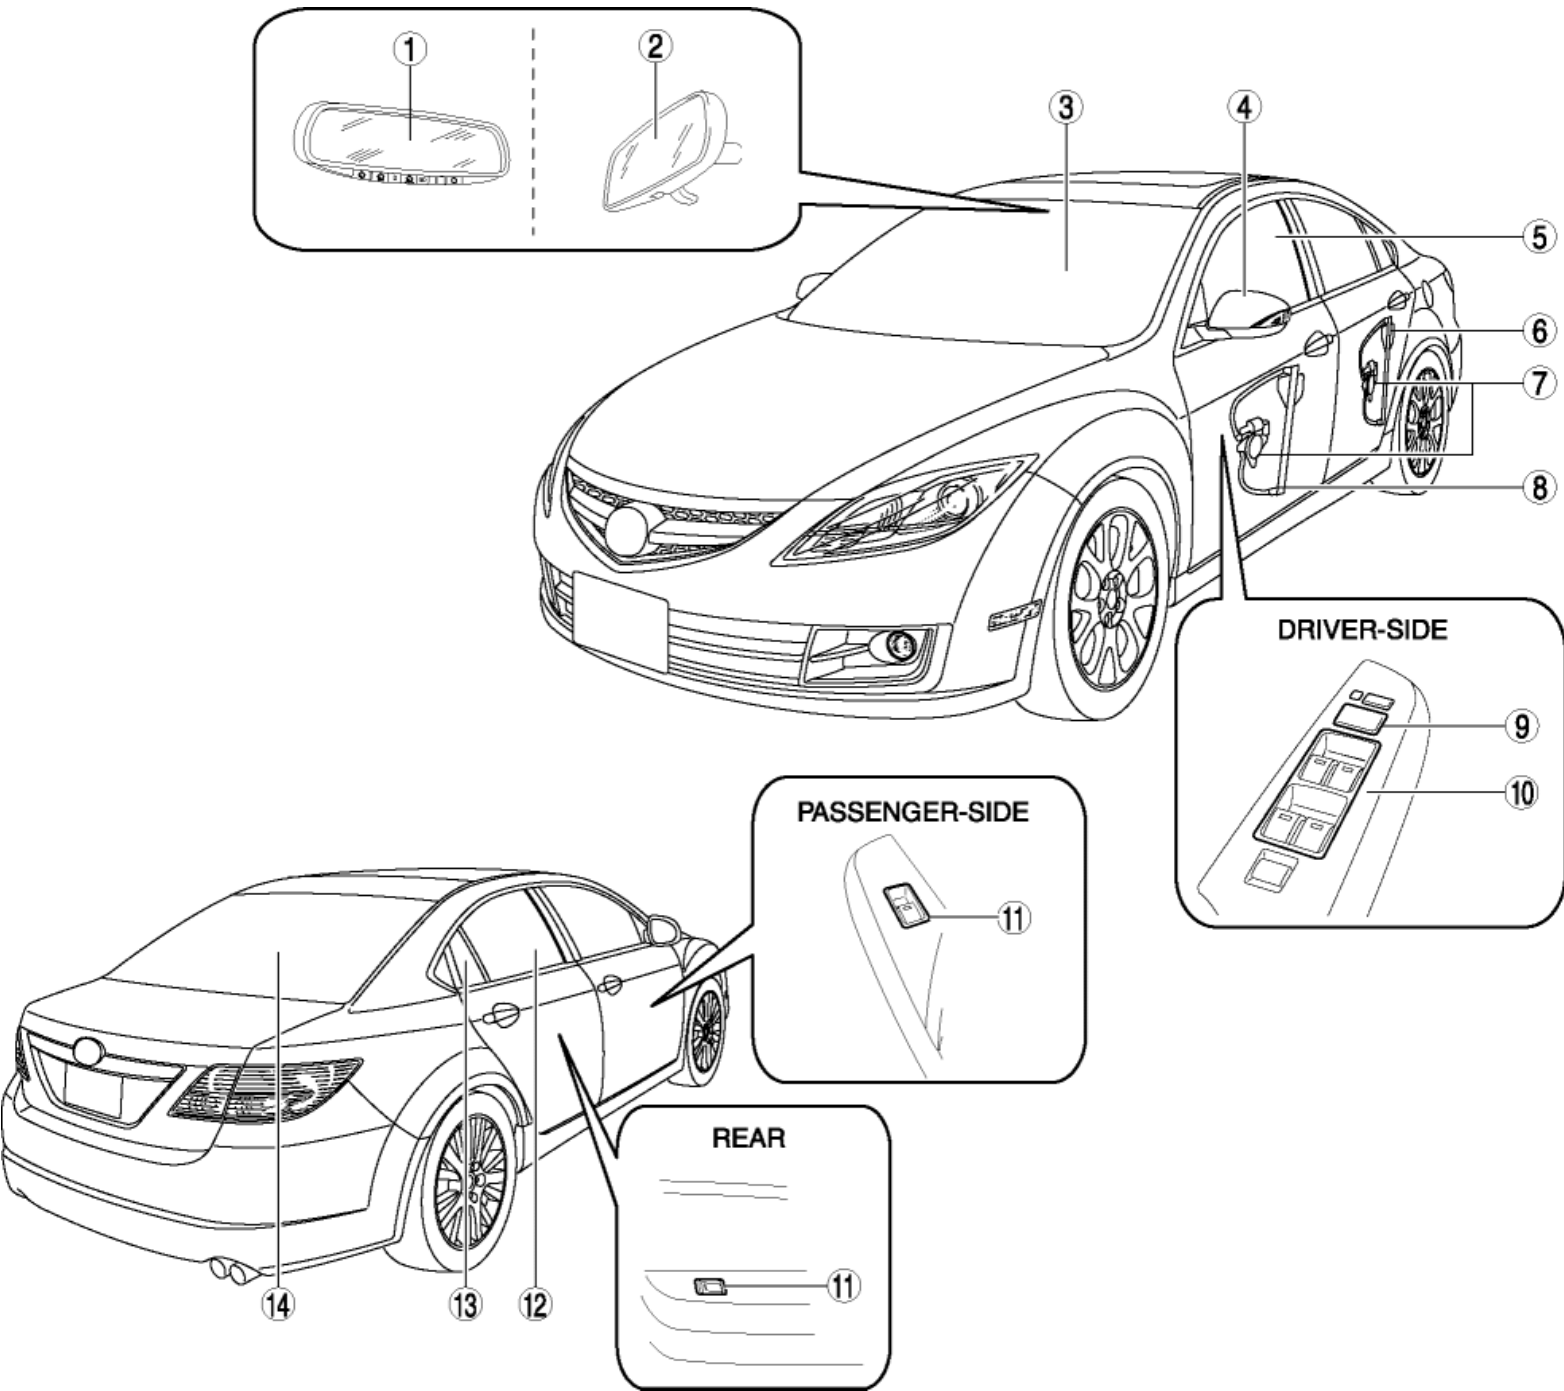

- 1 Auto-dimming mirror
- (See [AUTO-DIMMING MIRROR REMOVAL.](#))
- (See [AUTO-DIMMING MIRROR INSTALLATION.](#))
- (See [AUTO-DIMMING MIRROR INSPECTION.](#))

2	Rearview mirror (See REARVIEW MIRROR REMOVAL.) (See REARVIEW MIRROR INSTALLATION.) (See MIRROR BASE REMOVAL.) (See MIRROR BASE INSTALLATION.)
3	Windshield (See WINDSHIELD REMOVAL.) (See WINDSHIELD INSTALLATION.)
4	Power outer mirror (See POWER OUTER MIRROR REMOVAL/ INSTALLATION.) (See OUTER MIRROR GLASS REMOVAL.) (See OUTER MIRROR GLASS INSTALLATION.) (See OUTER MIRROR GARNISH REMOVAL/ INSTALLATION.) (See POWER OUTER MIRROR INSPECTION.)
5	Front door glass (See FRONT DOOR GLASS REMOVAL/ INSTALLATION.)
6	Rear power window regulator (See REAR POWER WINDOW REGULATOR REMOVAL/ INSTALLATION.)
7	Power window motor (See POWER WINDOW MOTOR REMOVAL/ INSTALLATION.) (See POWER WINDOW MOTOR INSPECTION.)
8	Front power window regulator (See FRONT POWER WINDOW REGULATOR REMOVAL/ INSTALLATION.)
9	Power outer mirror switch (See POWER OUTER MIRROR SWITCH REMOVAL/ INSTALLATION.) (See POWER OUTER MIRROR SWITCH INSPECTION.)
10	Power window main switch (See POWER WINDOW MAIN SWITCH REMOVAL/ INSTALLATION.) (See POWER WINDOW MAIN SWITCH INSPECTION.) (See POWER WINDOW SYSTEM INITIALIZATION PROCEDURE.) (See PERSONALIZATION FEATURES SETTING PROCEDURE.)
11	Power window subswitch (See POWER WINDOW SUBSWITCH REMOVAL/ INSTALLATION.) (See POWER WINDOW SUBSWITCH INSPECTION.) (See POWER WINDOW SYSTEM INITIALIZATION PROCEDURE.)
12	Rear door glass

	(See REAR DOOR GLASS REMOVAL/ INSTALLATION.)
13	Rear door quarter glass (See REAR DOOR QUARTER GLASS REMOVAL/ INSTALLATION.)
14	Rear window glass (See REAR WINDOW GLASS REMOVAL.) (See REAR WINDOW GLASS INSTALLATION.) (See FILAMENT INSPECTION.) (See FILAMENT REPAIR.)