



2012 - Mazda6 - Body and Accessories

REAR POWER WINDOW REGULATOR REMOVAL/ INSTALLATION

1. To access the glass installation bolt, position the rear door glass so that the distance from the top of the rear door glass to the upper part of the rear beltline molding is **approx. 144 mm { 5.67 in}** .

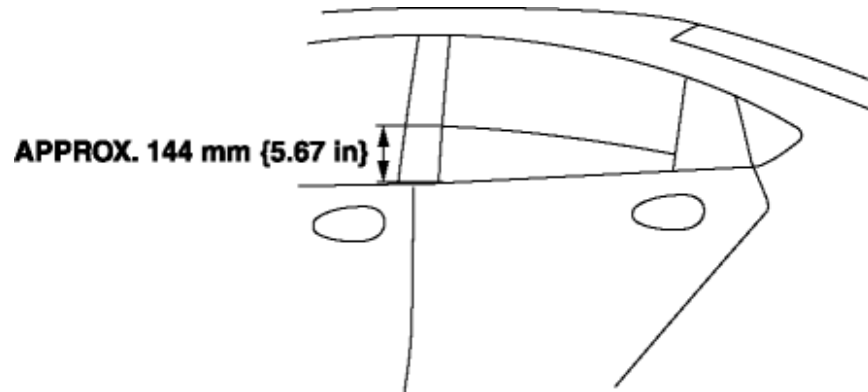


2. Disconnect the negative battery cable.
3. Remove the following parts:
 - a. Rear door trim (See [REAR DOOR TRIM REMOVAL/ INSTALLATION.](#))
 - b. Rear door speaker (See [REAR DOOR SPEAKER REMOVAL/ INSTALLATION.](#))
 - c. Rear door quarter glass (See [REAR DOOR QUARTER GLASS REMOVAL/ INSTALLATION.](#))
 - d. Rear door glass (See [REAR DOOR GLASS REMOVAL/ INSTALLATION.](#))
 - e. Rear power window motor (See [POWER WINDOW MOTOR REMOVAL/ INSTALLATION.](#))
4. Remove the nuts.

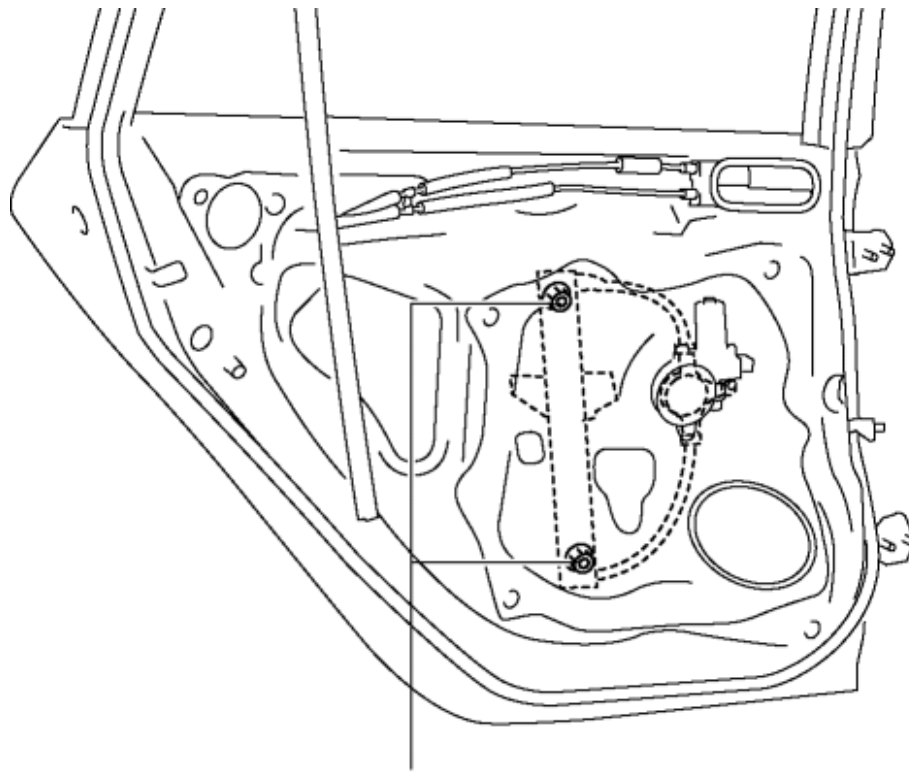


NUT

8—10 N·m {80—100 kgf·cm, 70—95 in·lbf}

5. Insert a hand through the speaker installation hole, rotate the drum housing in the direction shown in the figure to detach the tabs from the rear door module panel.

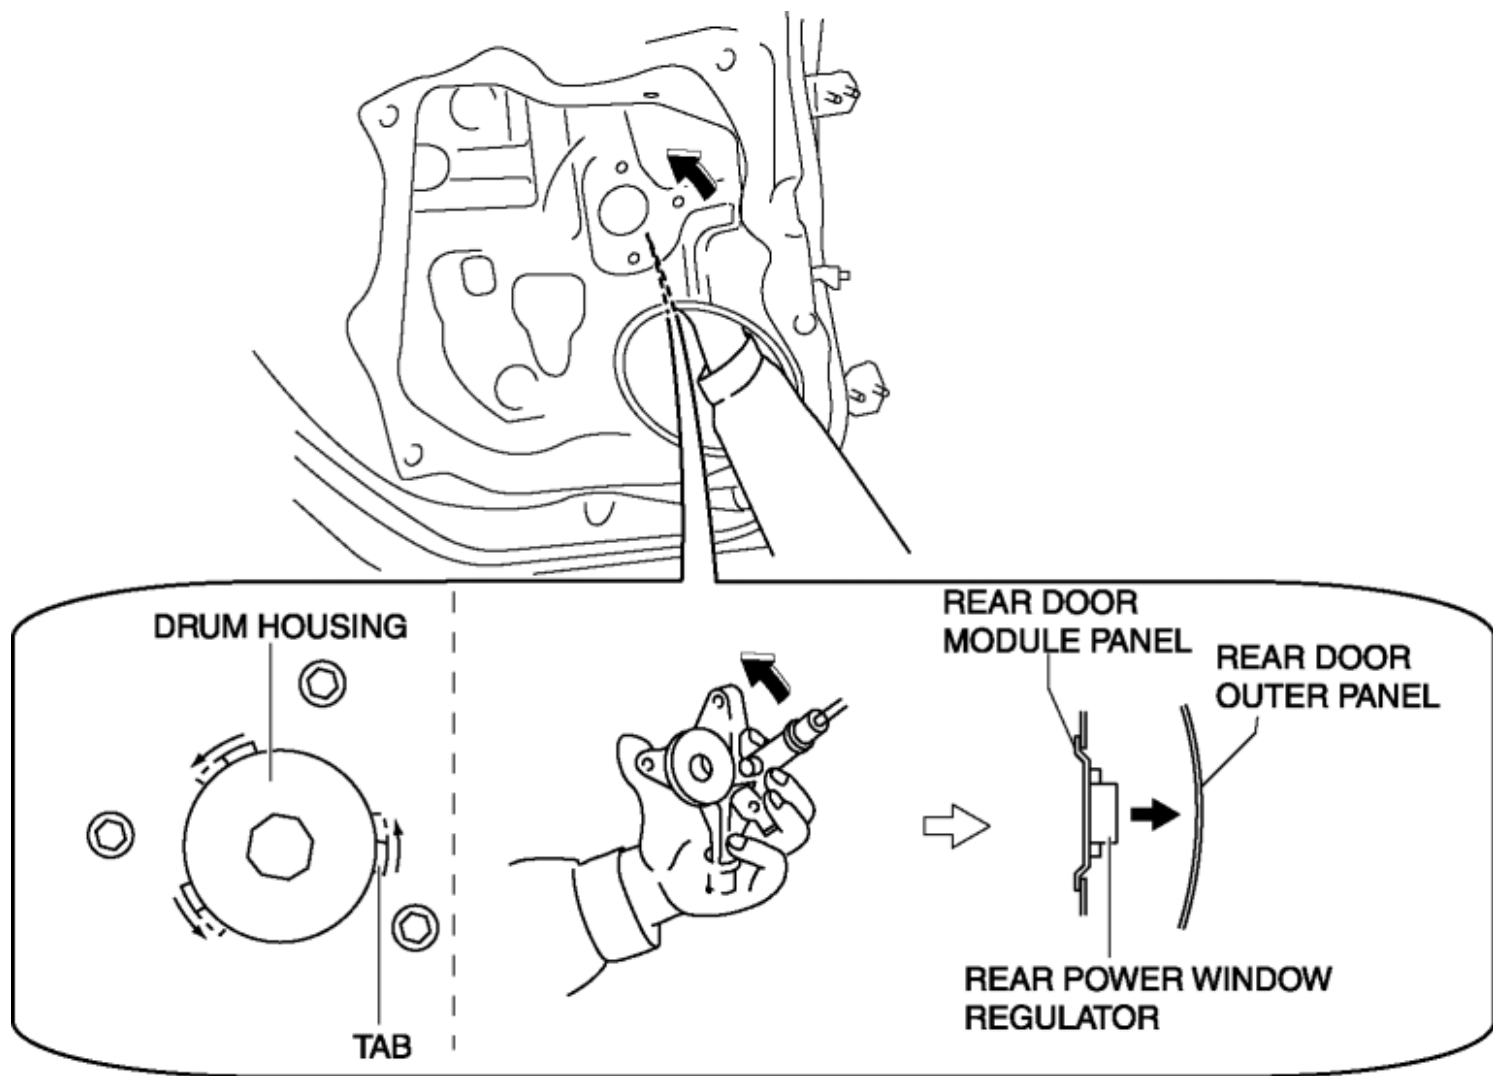

6. Remove the rear power window regulator through the speaker installation hole.

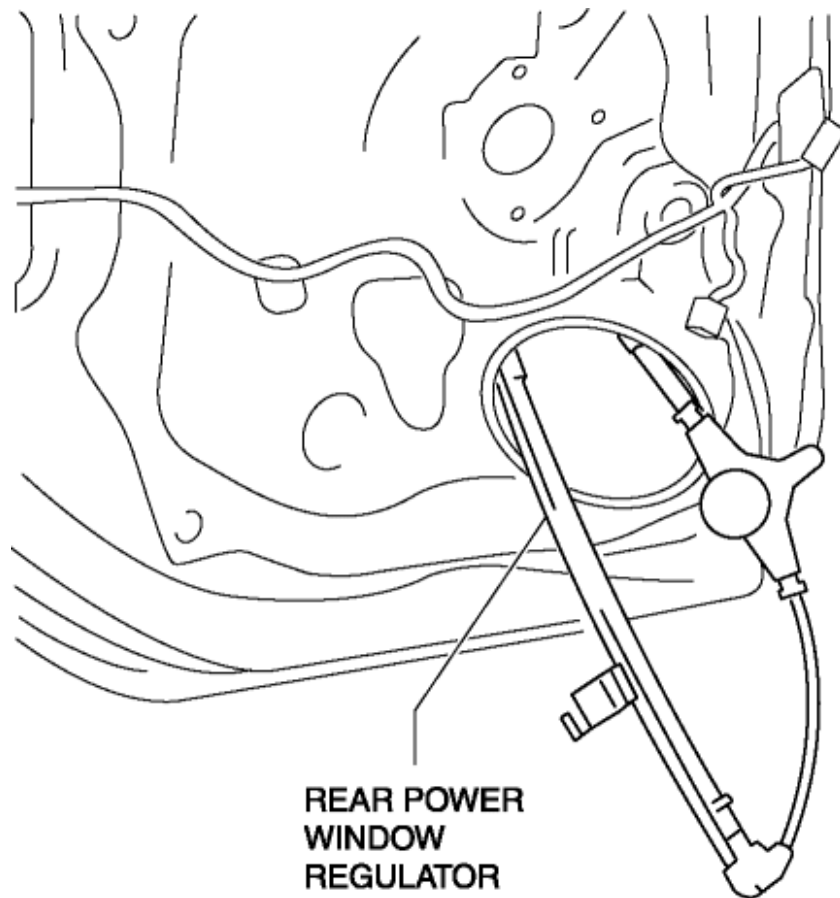

7. Install in the reverse order of removal.

CAUTION:

- Make sure the cable does not unspool from the drum housing when installing.


[< Previous](#) [Next >](#)

[Back to Top](#)


2012 - Mazda6 - Body and Accessories

REAR POWER WINDOW REGULATOR REMOVAL/ INSTALLATION

1. To access the glass installation bolt, position the rear door glass so that the distance from the top of the rear door glass to the upper part of the rear beltline molding is **approx. 144 mm { 5.67 in }** .

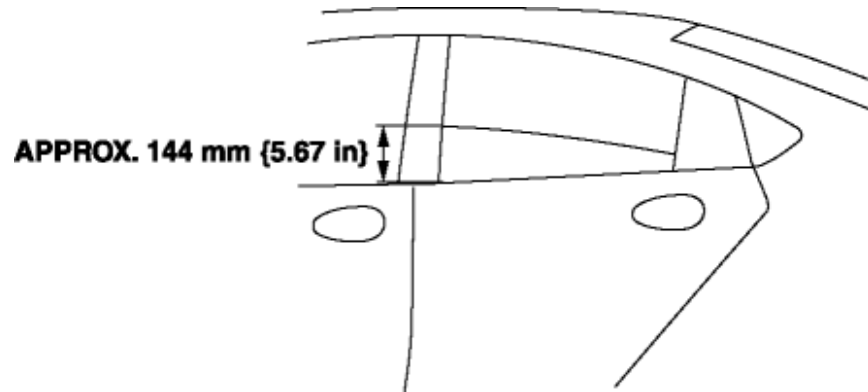


2. Disconnect the negative battery cable.
3. Remove the following parts:
 - a. Rear door trim (See [REAR DOOR TRIM REMOVAL/ INSTALLATION.](#))
 - b. Rear door speaker (See [REAR DOOR SPEAKER REMOVAL/ INSTALLATION.](#))
 - c. Rear door quarter glass (See [REAR DOOR QUARTER GLASS REMOVAL/ INSTALLATION.](#))
 - d. Rear door glass (See [REAR DOOR GLASS REMOVAL/ INSTALLATION.](#))
 - e. Rear power window motor (See [POWER WINDOW MOTOR REMOVAL/ INSTALLATION.](#))
4. Remove the nuts.

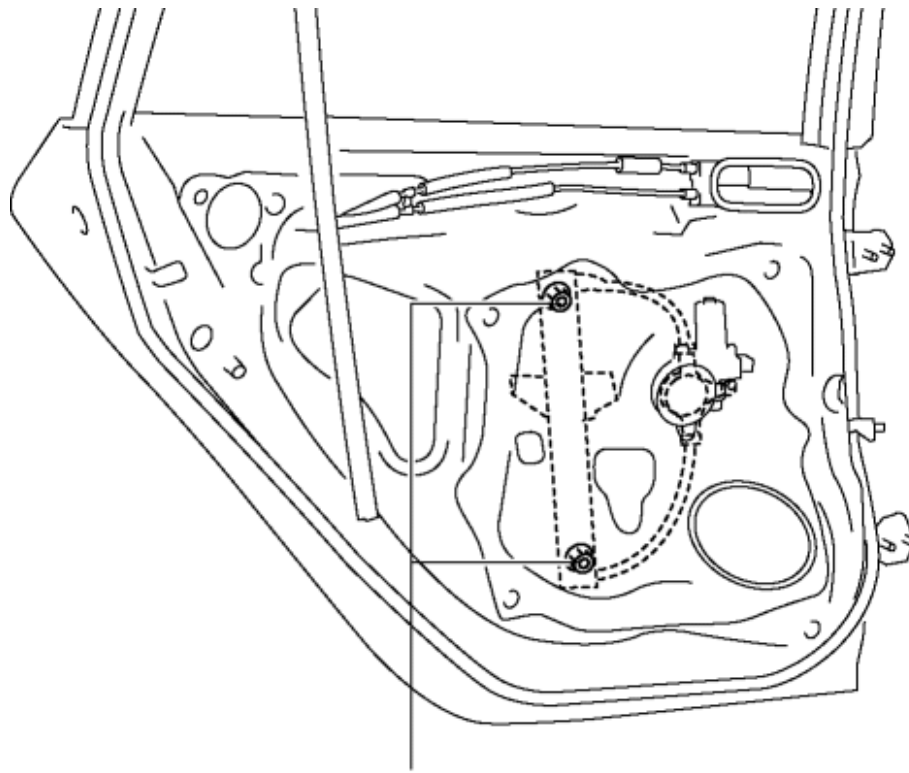


NUT

8—10 N·m {80—100 kgf·cm, 70—95 in·lbf}

5. Insert a hand through the speaker installation hole, rotate the drum housing in the direction shown in the figure to detach the tabs from the rear door module panel.

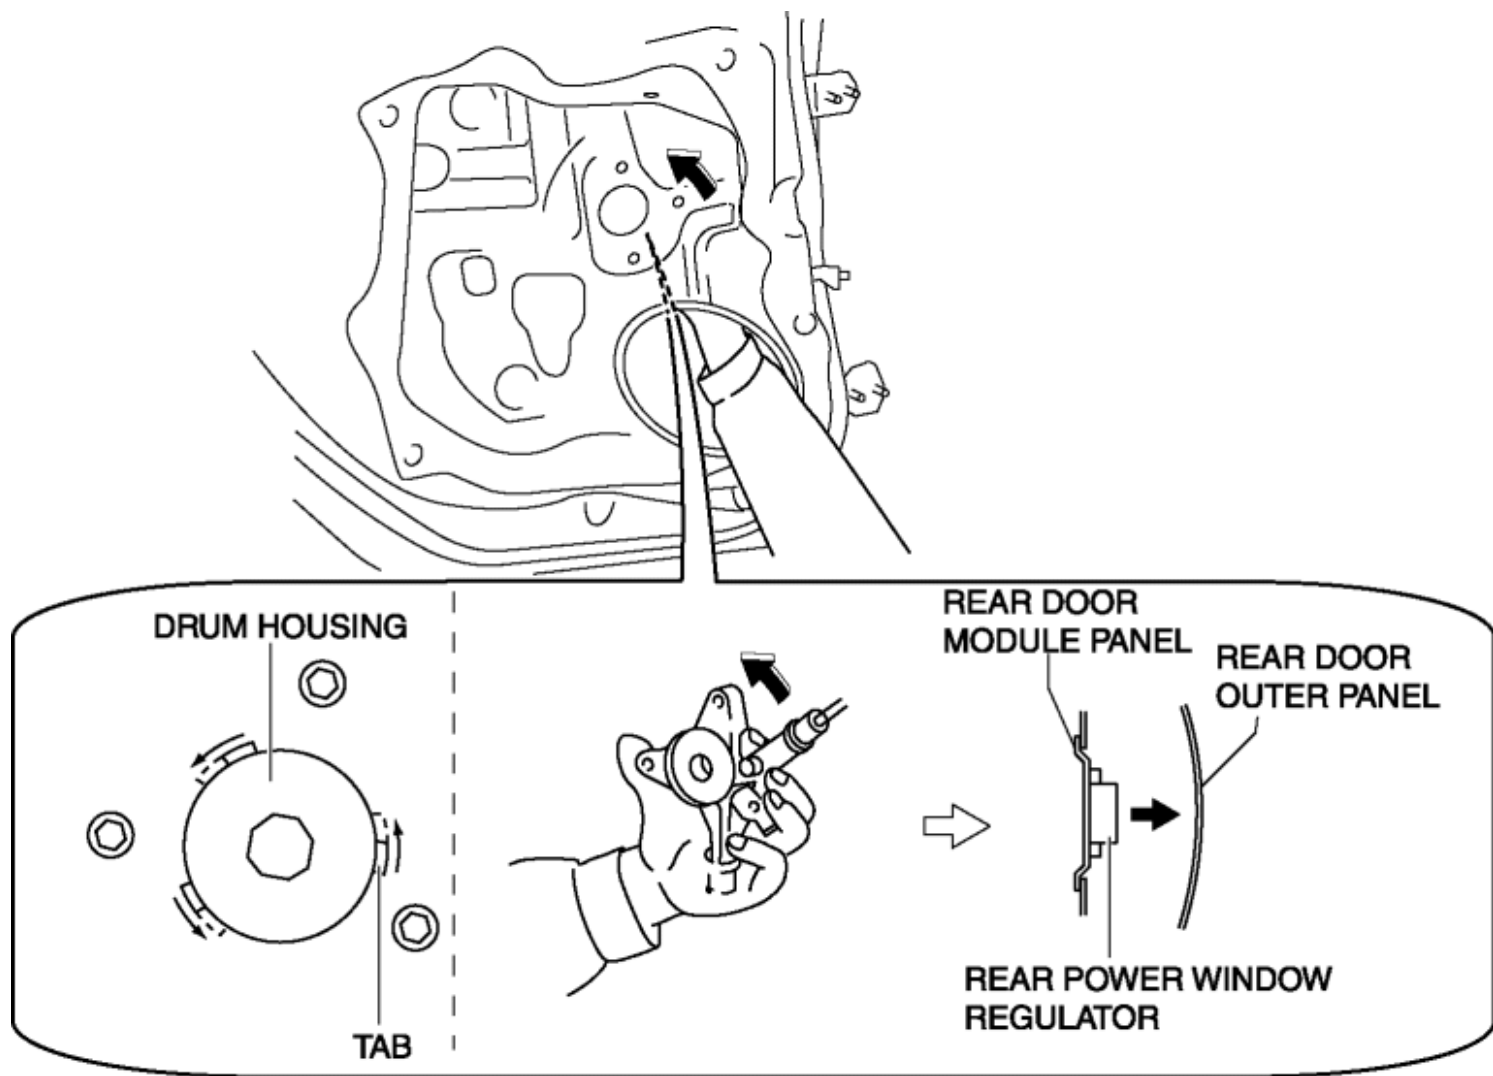

6. Remove the rear power window regulator through the speaker installation hole.

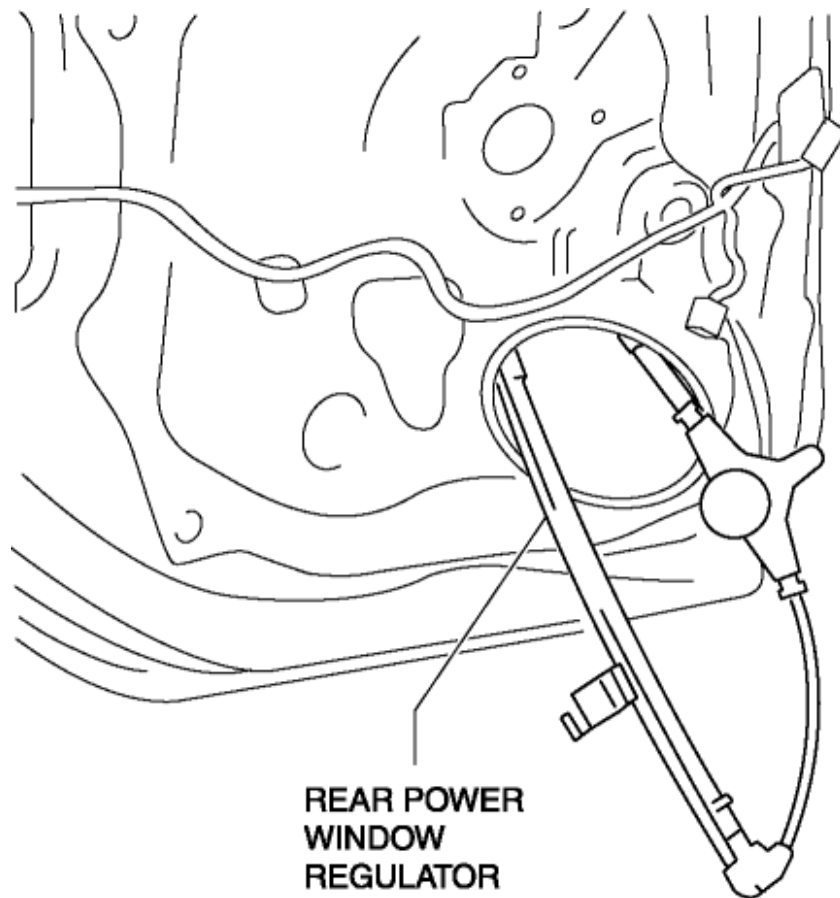

7. Install in the reverse order of removal.

CAUTION:

- Make sure the cable does not unspool from the drum housing when installing.

[< Previous](#) [Next >](#)

[Back to Top](#)