


2012 - Mazda6 - Body and Accessories

POWER WINDOW MOTOR REMOVAL/ INSTALLATION

Front Power Window Motor

1. Fully lower the front door glass.
2. Disconnect the negative battery cable.
3. Remove the inner garnish. (See [INNER GARNISH REMOVAL/ INSTALLATION](#).)
4. Remove the front door trim. (See [FRONT DOOR TRIM REMOVAL/ INSTALLATION](#).)
5. Disconnect the front power window motor connector, remove the bolt, then remove the front power window motor from the front power window regulator drum in the direction of the arrow shown in the figure.

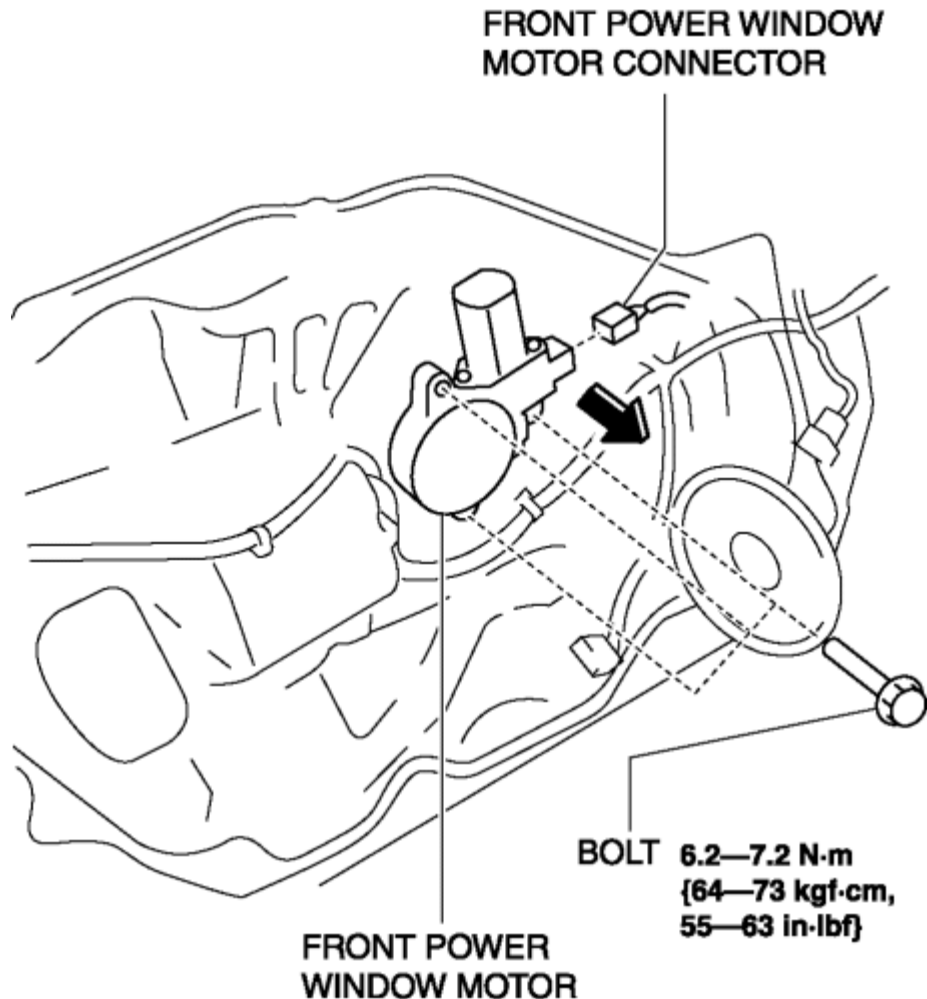


6. Install in the reverse order of removal.

NOTE:

- When installing the front power window motor to the front power window regulator drum, the drum housing hooks may detach from the door module panel. If this happens, remove the front door speaker, insert your hand in the speaker installation hole, connect the drum housing hooks, and while supporting the drum housing, install the front power window motor to the drum.

Rear Power Window Motor

1. Fully lower the rear door glass.
2. Disconnect the negative battery cable.
3. Remove the rear door trim. (See [REAR DOOR TRIM REMOVAL/ INSTALLATION](#).)
4. Disconnect the rear power window motor connector, remove the bolt, then remove the power window motor from the power window regulator drum in the direction of the arrow shown in the figure.

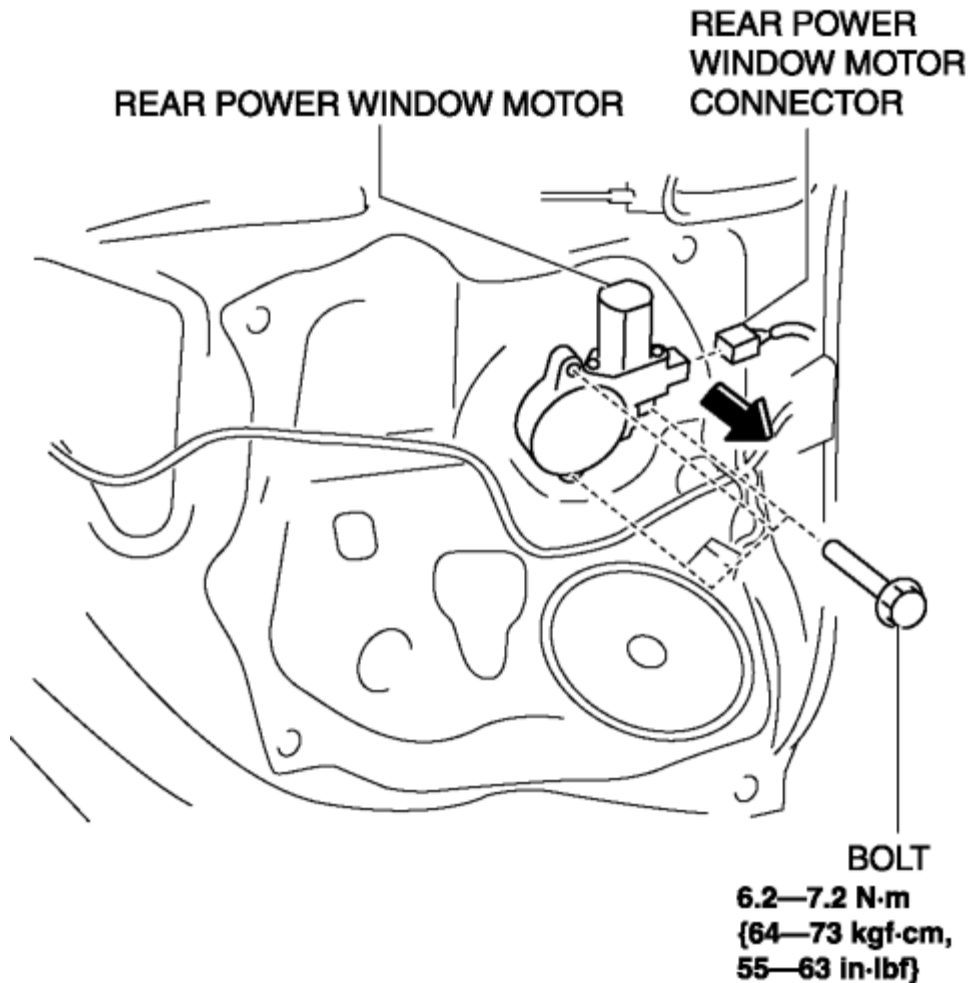

5. Install in the reverse order of removal.

NOTE:

- When installing the rear power window motor to the rear power window regulator drum, the drum housing hooks may detach from the rear door

module panel. If this happens, remove the door speaker, insert your hand in the speaker installation hole, connect the drum housing hooks, and while supporting the drum housing, install the rear power window motor to the drum.

[< Previous](#) [Next >](#)

[Back to Top](#)


© 2012 Mazda North American Operations, U.S.A.

2012 - Mazda6 - Body and Accessories

POWER WINDOW MOTOR REMOVAL/ INSTALLATION

Front Power Window Motor

1. Fully lower the front door glass.
2. Disconnect the negative battery cable.
3. Remove the inner garnish. (See [INNER GARNISH REMOVAL/ INSTALLATION](#).)
4. Remove the front door trim. (See [FRONT DOOR TRIM REMOVAL/ INSTALLATION](#).)
5. Disconnect the front power window motor connector, remove the bolt, then remove the front power window motor from the front power window regulator drum in the direction of the arrow shown in the figure.

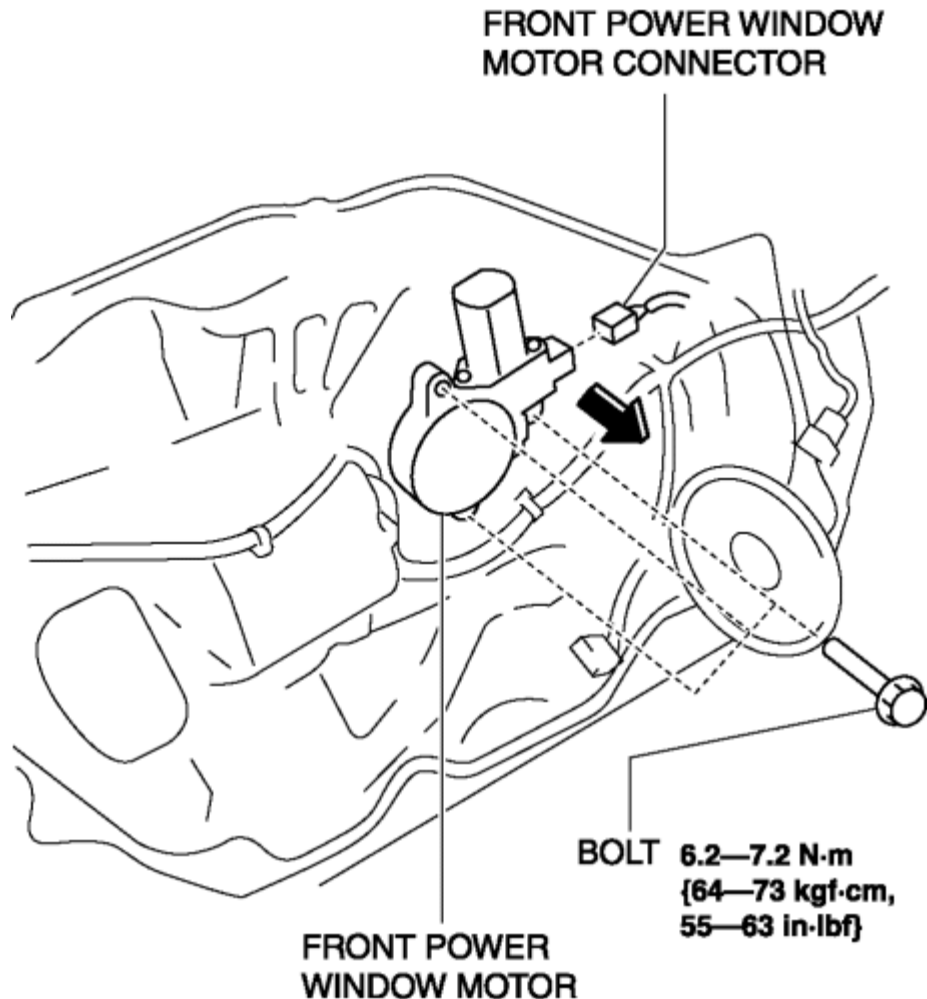


6. Install in the reverse order of removal.

NOTE:

- When installing the front power window motor to the front power window regulator drum, the drum housing hooks may detach from the door module panel. If this happens, remove the front door speaker, insert your hand in the speaker installation hole, connect the drum housing hooks, and while supporting the drum housing, install the front power window motor to the drum.

Rear Power Window Motor

1. Fully lower the rear door glass.
2. Disconnect the negative battery cable.
3. Remove the rear door trim. (See [REAR DOOR TRIM REMOVAL/ INSTALLATION](#).)
4. Disconnect the rear power window motor connector, remove the bolt, then remove the power window motor from the power window regulator drum in the direction of the arrow shown in the figure.

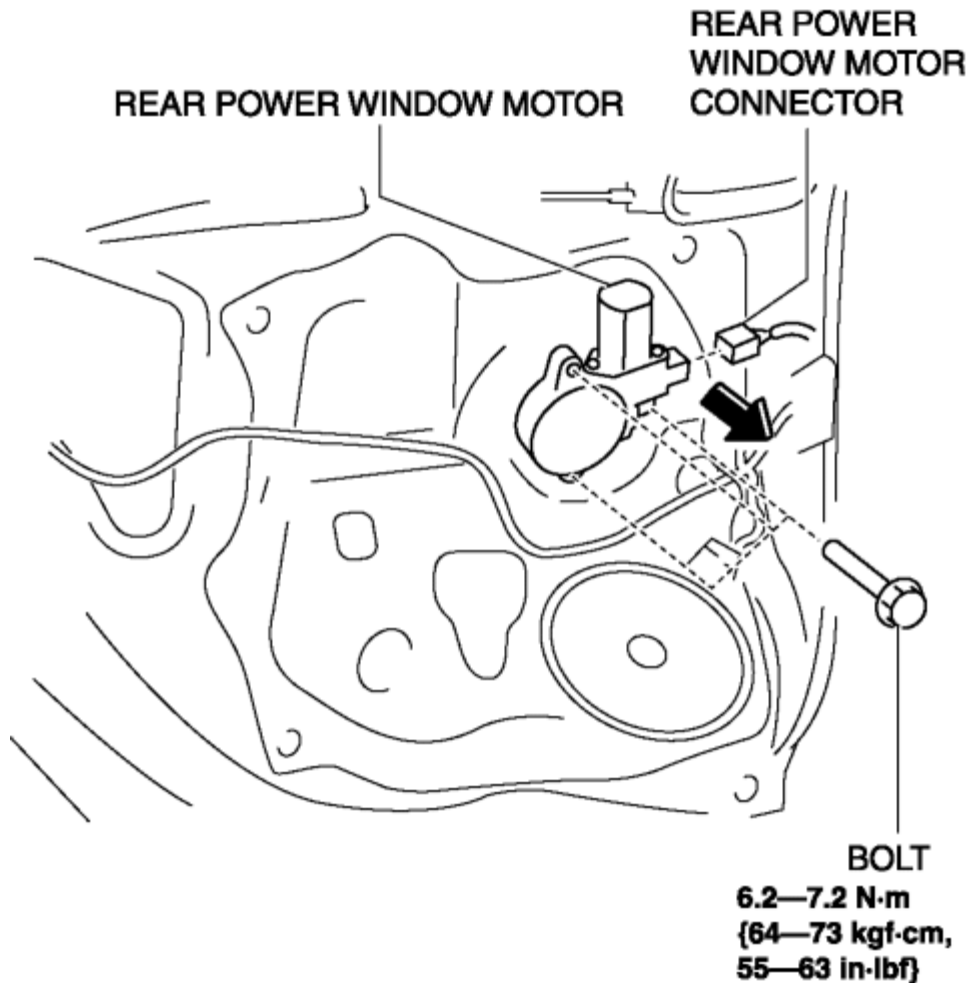

5. Install in the reverse order of removal.

NOTE:

- When installing the rear power window motor to the rear power window regulator drum, the drum housing hooks may detach from the rear door

module panel. If this happens, remove the door speaker, insert your hand in the speaker installation hole, connect the drum housing hooks, and while supporting the drum housing, install the rear power window motor to the drum.

[< Previous](#) [Next >](#)

[Back to Top](#)

© 2012 Mazda North American Operations, U.S.A.