

[< Previous](#) [Next >](#)

2012 - Mazda6 - Body and Accessories

POWER WINDOW MAIN SWITCH REMOVAL/ INSTALLATION

1. Disconnect the negative battery cable.
2. Remove the inner garnish. (driver-side) (See [INNER GARNISH REMOVAL/ INSTALLATION.](#))
3. Remove the front door trim. (driver-side) (See [FRONT DOOR TRIM REMOVAL/ INSTALLATION.](#))
4. Remove the power window main switch. (See [FRONT DOOR TRIM DI SASSEMBLY/ ASSEMBLY.](#))
5. Install in the reverse order of removal.

[< Previous](#) [Next >](#)

[Back to Top](#)

© 2012 Mazda North American Operations, U.S.A.

[< Previous](#) [Next >](#)

2012 - Mazda6 - Body and Accessories

POWER WINDOW MAIN SWITCH REMOVAL/ INSTALLATION

1. Disconnect the negative battery cable.
2. Remove the inner garnish. (driver-side) (See [INNER GARNISH REMOVAL/ INSTALLATION.](#))
3. Remove the front door trim. (driver-side) (See [FRONT DOOR TRIM REMOVAL/ INSTALLATION.](#))
4. Remove the power window main switch. (See [FRONT DOOR TRIM DI SASSEMBLY/ ASSEMBLY.](#))
5. Install in the reverse order of removal.

[< Previous](#) [Next >](#)

[Back to Top](#)

© 2012 Mazda North American Operations, U.S.A.