

2012 - Mazda6 - Body and Accessories

POWER WINDOW SUBSWITCH REMOVAL/ INSTALLATION

Passenger-side

1. Disconnect the negative battery cable.
2. Remove the inner garnish. (See [INNER GARNISH REMOVAL/ INSTALLATION.](#))
3. Remove the front door trim. (See [FRONT DOOR TRIM REMOVAL/ INSTALLATION.](#))
4. Remove the power window subswitch. (See [FRONT DOOR TRIM DI SASSEMBLY/ ASSEMBLY.](#))
5. Install in the reverse order of removal.

Rear

1. Disconnect the negative battery cable.
2. Remove the rear door trim. (See [REAR DOOR TRIM REMOVAL/ INSTALLATION.](#))
3. Remove the power window subswitch. (See [REAR DOOR TRIM DI SASSEMBLY/ ASSEMBLY.](#))
4. Install in the reverse order of removal.

2012 - Mazda6 - Body and Accessories

POWER WINDOW SUBSWITCH REMOVAL/ INSTALLATION

Passenger-side

1. Disconnect the negative battery cable.
2. Remove the inner garnish. (See [INNER GARNISH REMOVAL/ INSTALLATION.](#))
3. Remove the front door trim. (See [FRONT DOOR TRIM REMOVAL/ INSTALLATION.](#))
4. Remove the power window subswitch. (See [FRONT DOOR TRIM DI SASSEMBLY/ ASSEMBLY.](#))
5. Install in the reverse order of removal.

Rear

1. Disconnect the negative battery cable.
2. Remove the rear door trim. (See [REAR DOOR TRIM REMOVAL/ INSTALLATION.](#))
3. Remove the power window subswitch. (See [REAR DOOR TRIM DI SASSEMBLY/ ASSEMBLY.](#))
4. Install in the reverse order of removal.