


2012 - Mazda6 - Body and Accessories


OUTER MIRROR GLASS REMOVAL

1. Disconnect the negative battery cable.
2. Press area B of the mirror glass so that area A moves outward.

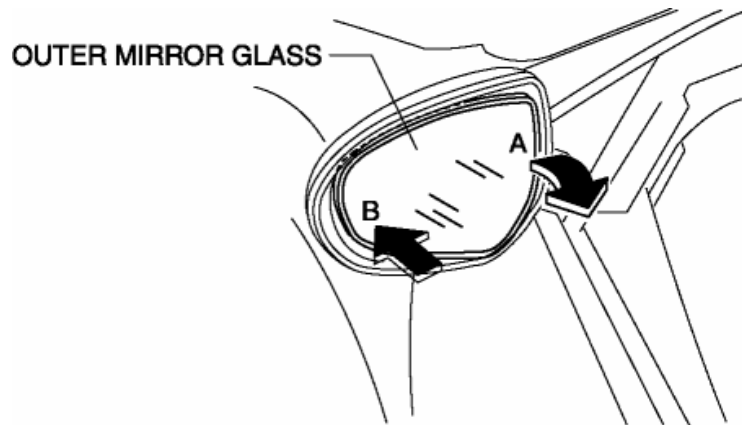

3. Detach tab while lifting up the inside of the mirror glass holder.



CONNECTOR (VEHICLES WITH AUTO-DIMMING MIRROR)


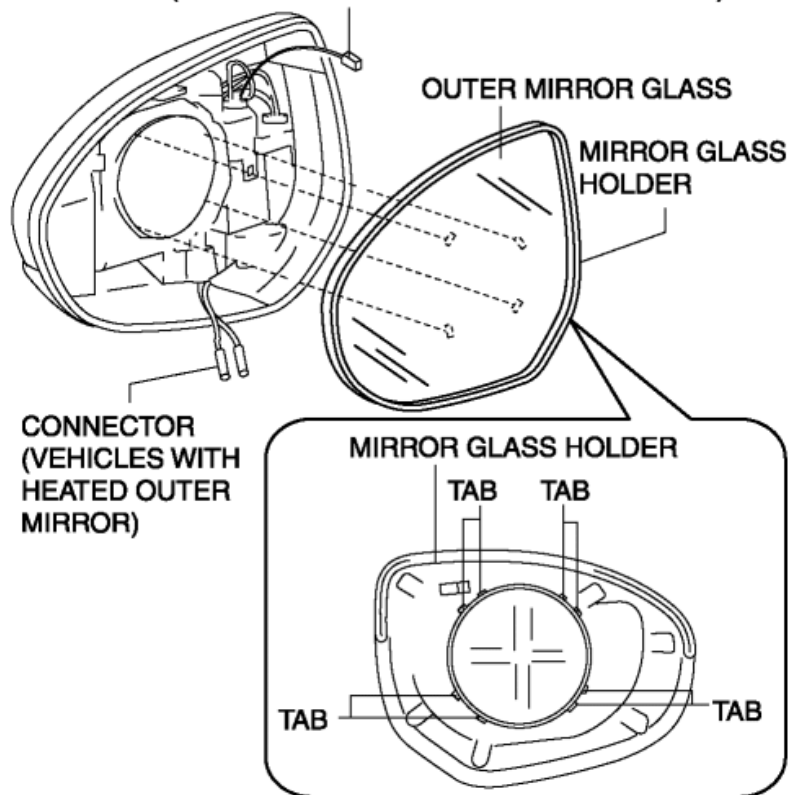


4. Disconnect the mirror heater connectors. (vehicles with heated outer mirror)
5. Disconnect the auto-dimming mirror connectors. (vehicles with auto-dimming mirror)
6. Insert a tape-wrapped flathead screwdriver to the position shown in the figure, remove the connector. (vehicles with BSM)

CAUTION:

- The connector can be easily deformed, therefore do not apply excessive force.

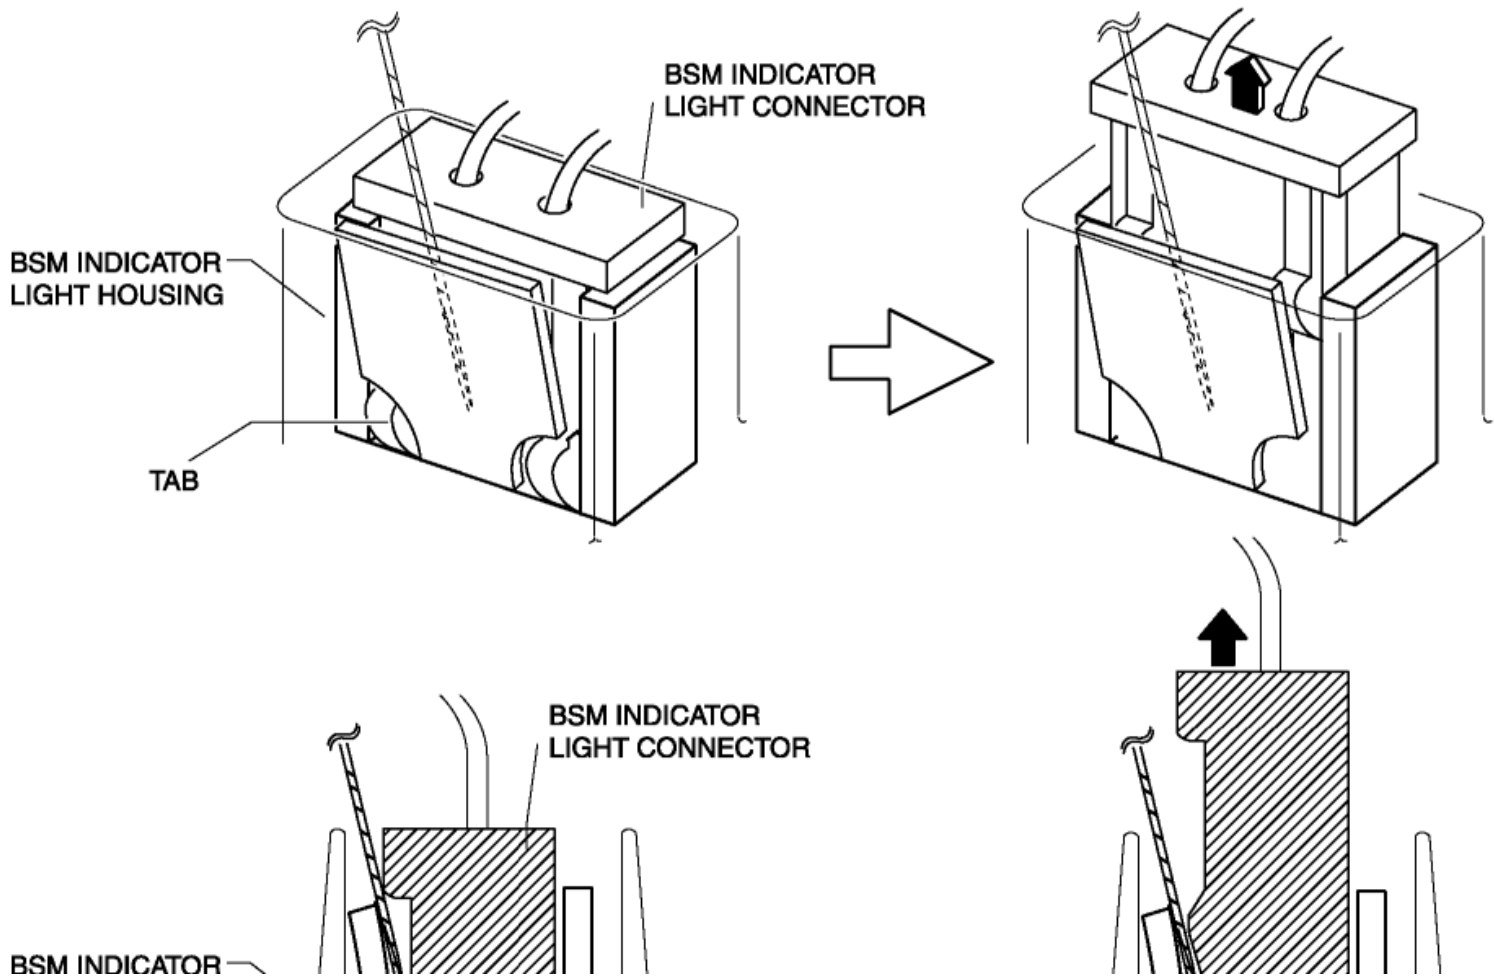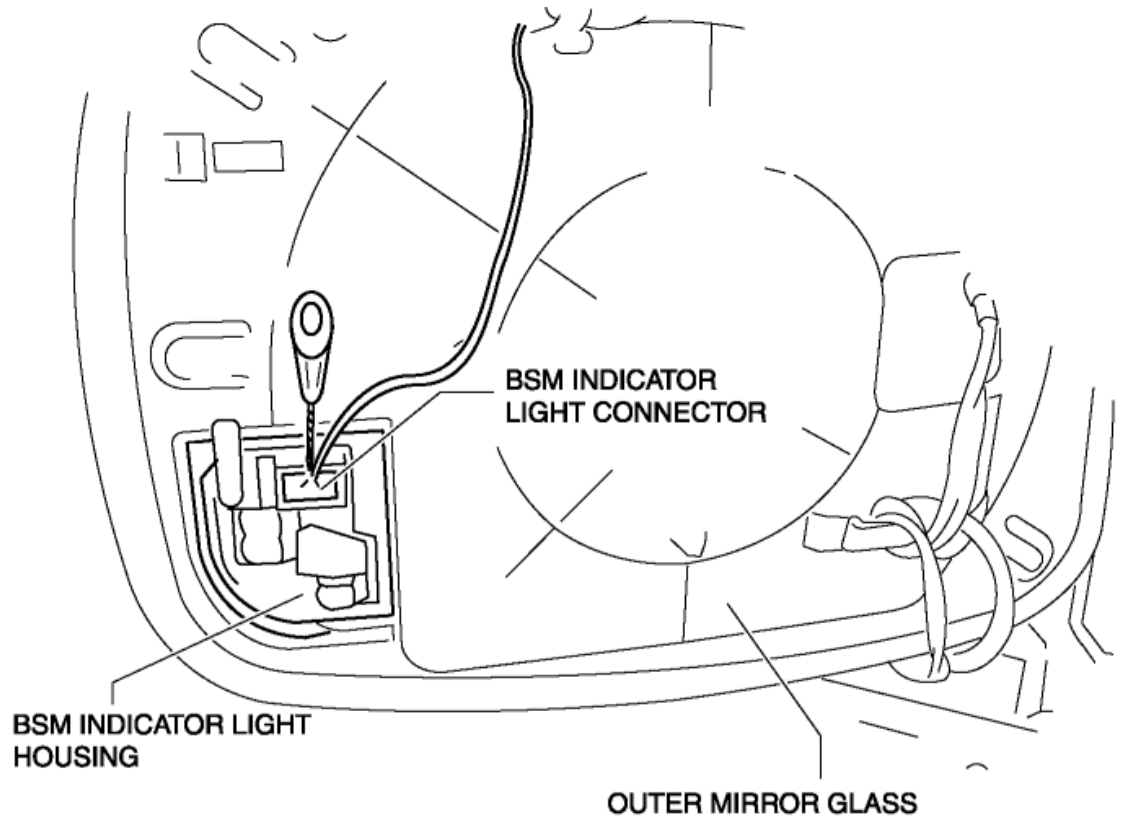

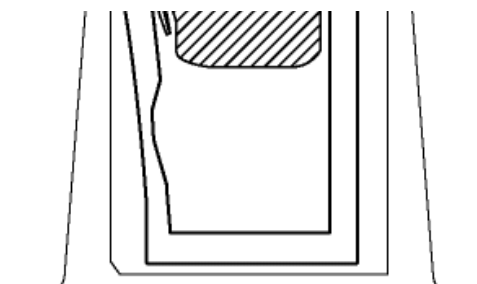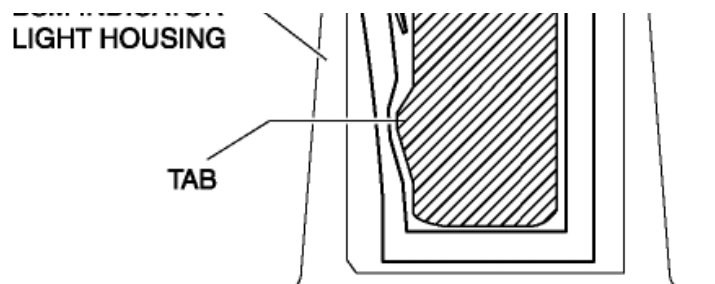

7. Remove the mirror glass holder and the outer mirror glass as a single unit.

[< Previous](#) [Next >](#)


© 2012 Mazda North American Operations, U.S.A.

[Back to Top](#)

2012 - Mazda6 - Body and Accessories


OUTER MIRROR GLASS REMOVAL

1. Disconnect the negative battery cable.
2. Press area B of the mirror glass so that area A moves outward.

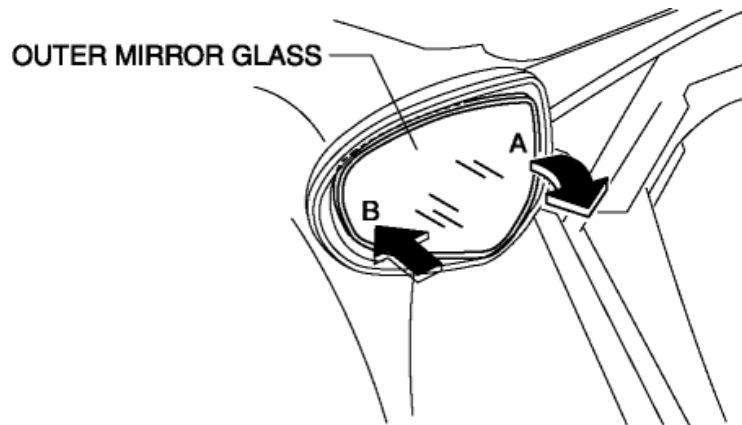

3. Detach tab while lifting up the inside of the mirror glass holder.



CONNECTOR (VEHICLES WITH AUTO-DIMMING MIRROR)


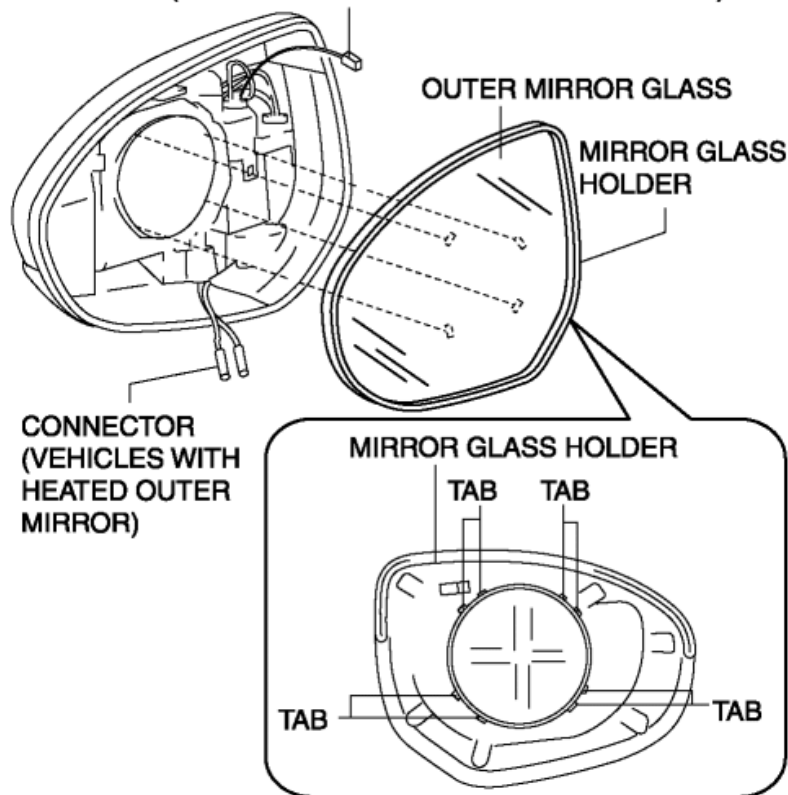


4. Disconnect the mirror heater connectors. (vehicles with heated outer mirror)
5. Disconnect the auto-dimming mirror connectors. (vehicles with auto-dimming mirror)
6. Insert a tape-wrapped flathead screwdriver to the position shown in the figure, remove the connector. (vehicles with BSM)

CAUTION:

- The connector can be easily deformed, therefore do not apply excessive force.

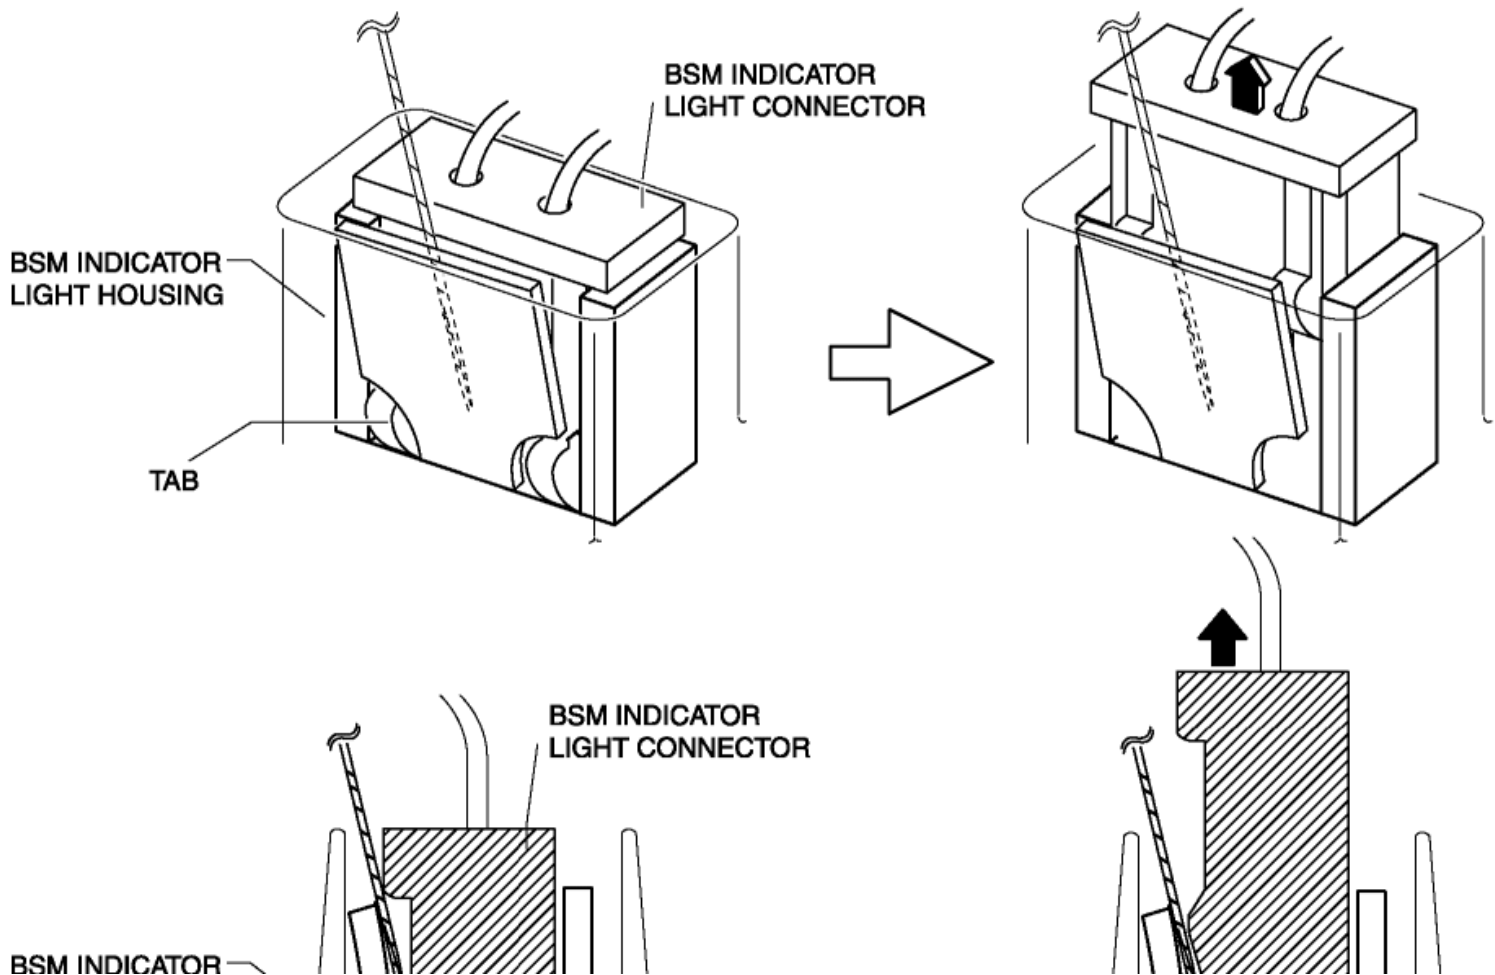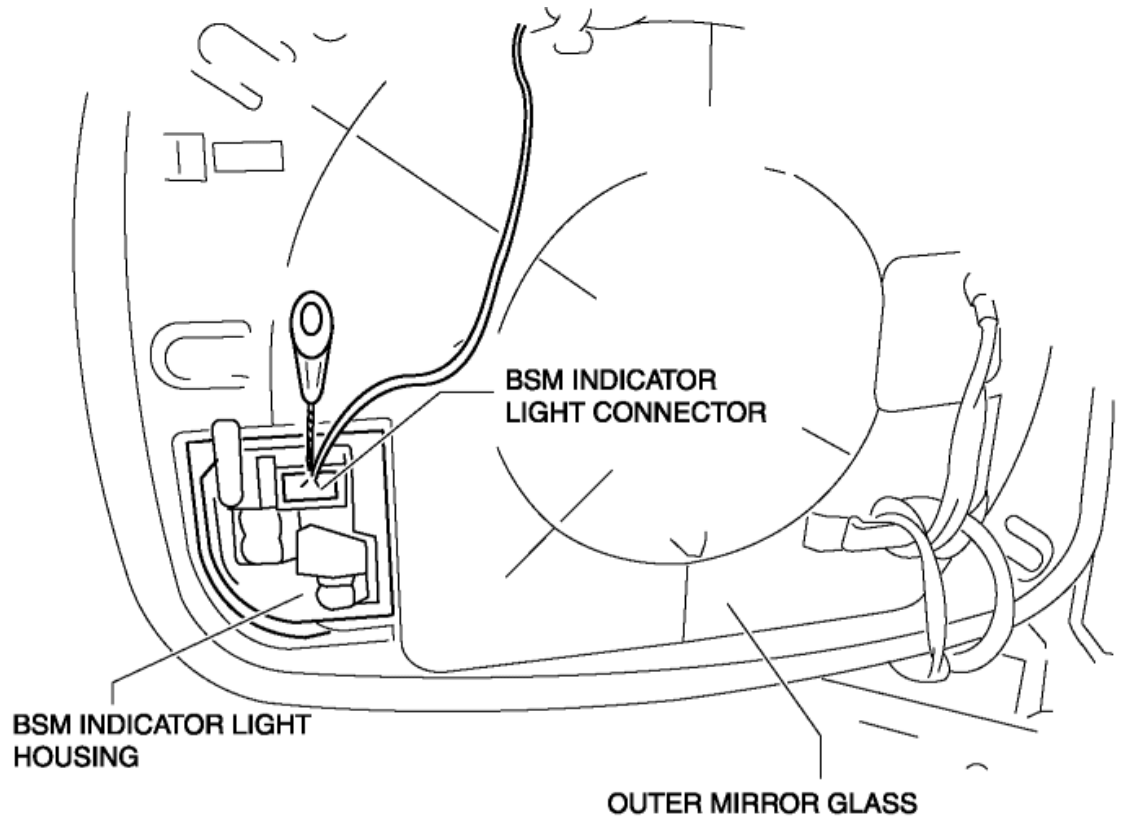

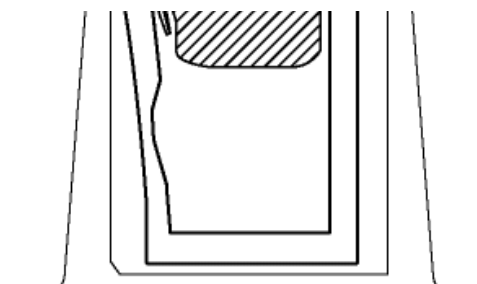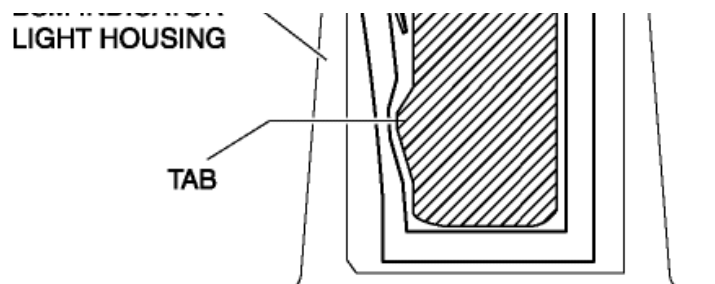

7. Remove the mirror glass holder and the outer mirror glass as a single unit.

[< Previous](#) [Next >](#)

© 2012 Mazda North American Operations, U.S.A.

[Back to Top](#)