


2012 - Mazda6 - Body and Accessories

OUTER MIRROR GLASS INSTALLATION



1. Connect the mirror heater connectors. (vehicles with heated outer mirror)
2. Connect the auto-dimming mirror connectors. (vehicles with auto-dimming mirror)

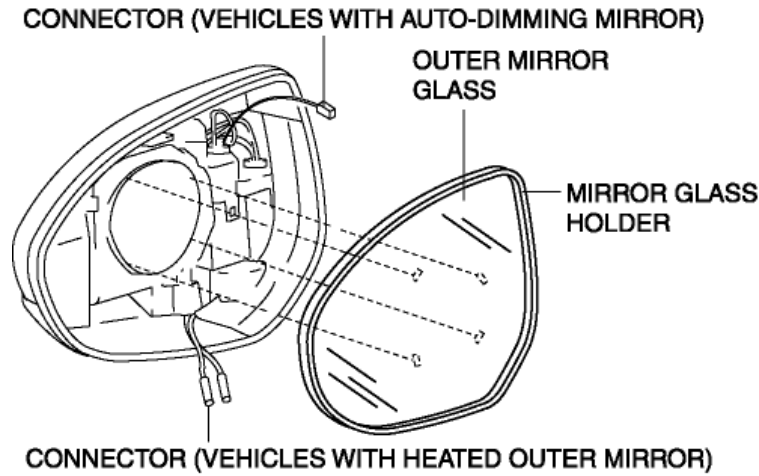


3. Connect the BSM indicator light connector. (vehicles with BSM)

NOTE:

- Lightly pull the BSM indicator light connector and verify that the BSM indicator light housing cannot be pulled off. If the connection is poor, insert a tape-wrapped flathead screwdriver into position A shown in the figure and engage the connector.

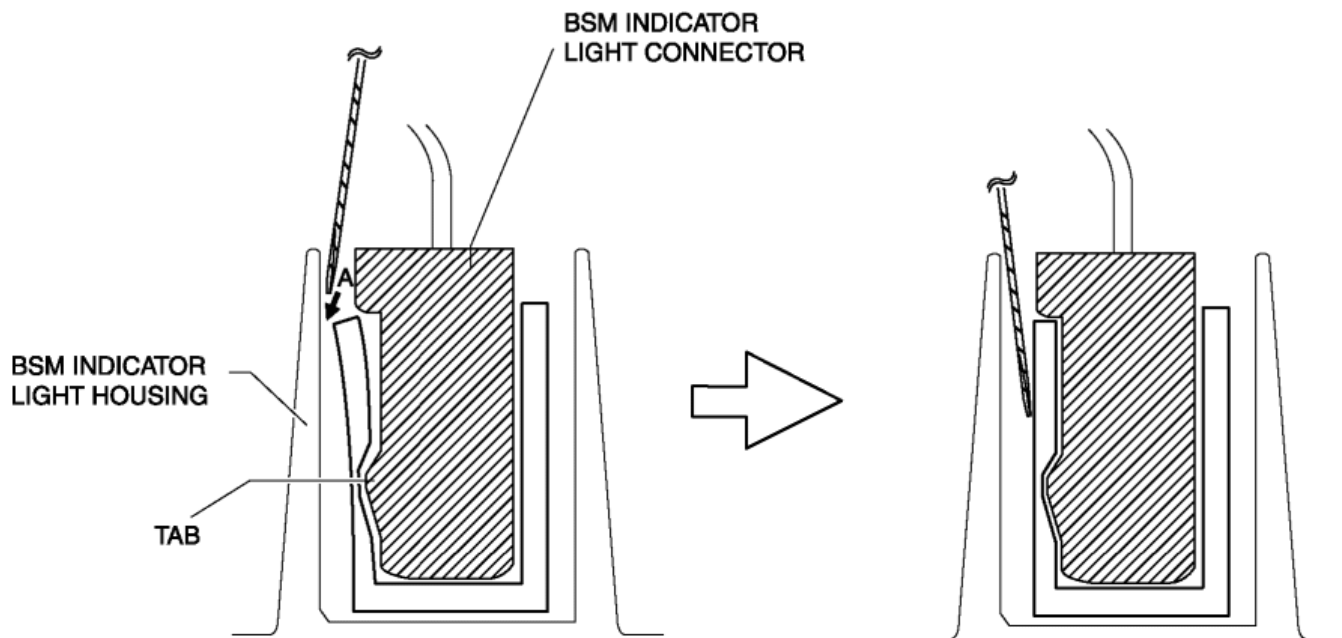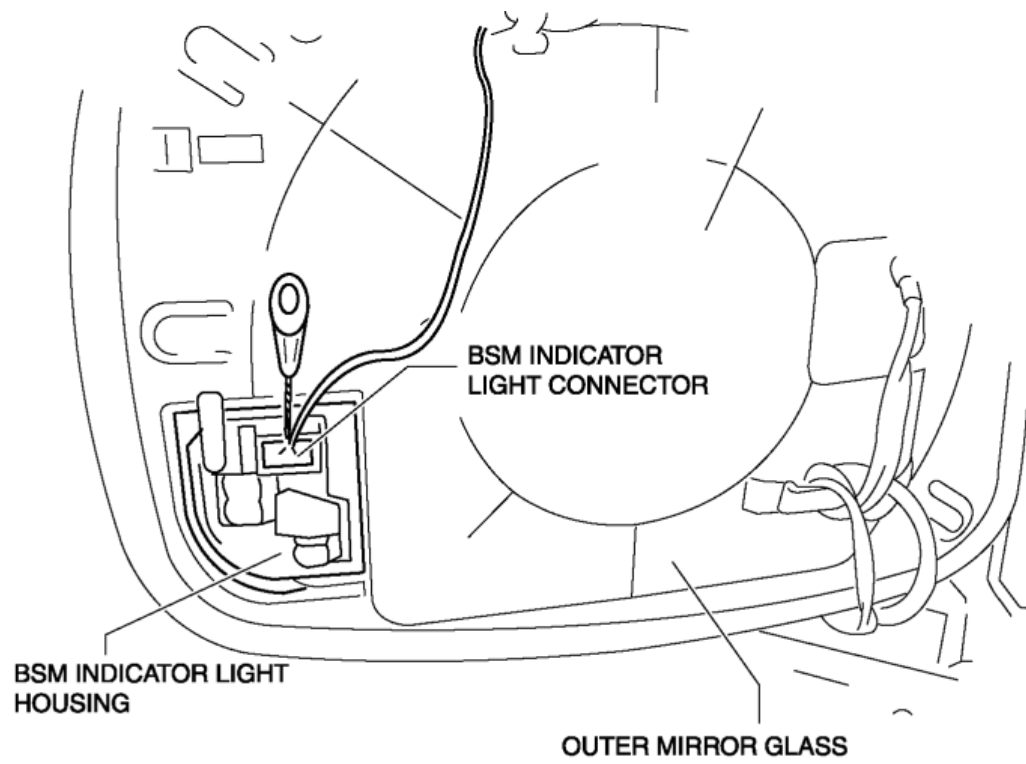


4. Press the mirror glass holder in the direction of the arrow as shown in the figure and install it.

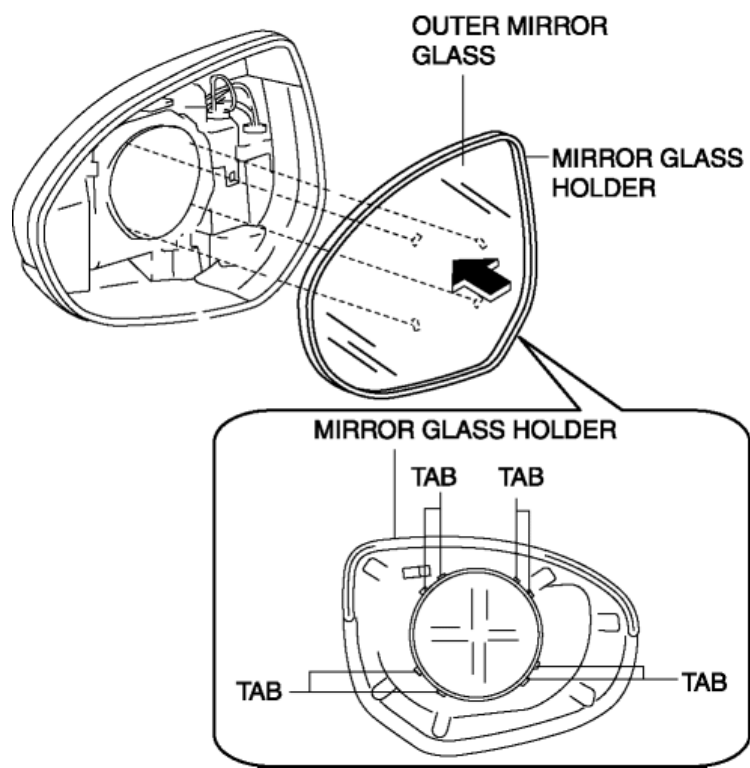

2012 - Mazda6 - Body and Accessories

OUTER MIRROR GLASS INSTALLATION



1. Connect the mirror heater connectors. (vehicles with heated outer mirror)
2. Connect the auto-dimming mirror connectors. (vehicles with auto-dimming mirror)

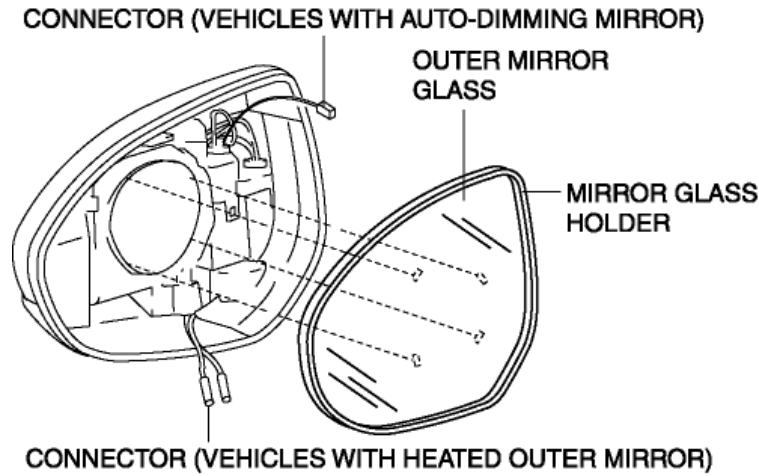

3. Connect the BSM indicator light connector. (vehicles with BSM)

NOTE:

- Lightly pull the BSM indicator light connector and verify that the BSM indicator light housing cannot be pulled off. If the connection is poor, insert a tape-wrapped flathead screwdriver into position A shown in the figure and engage the connector.

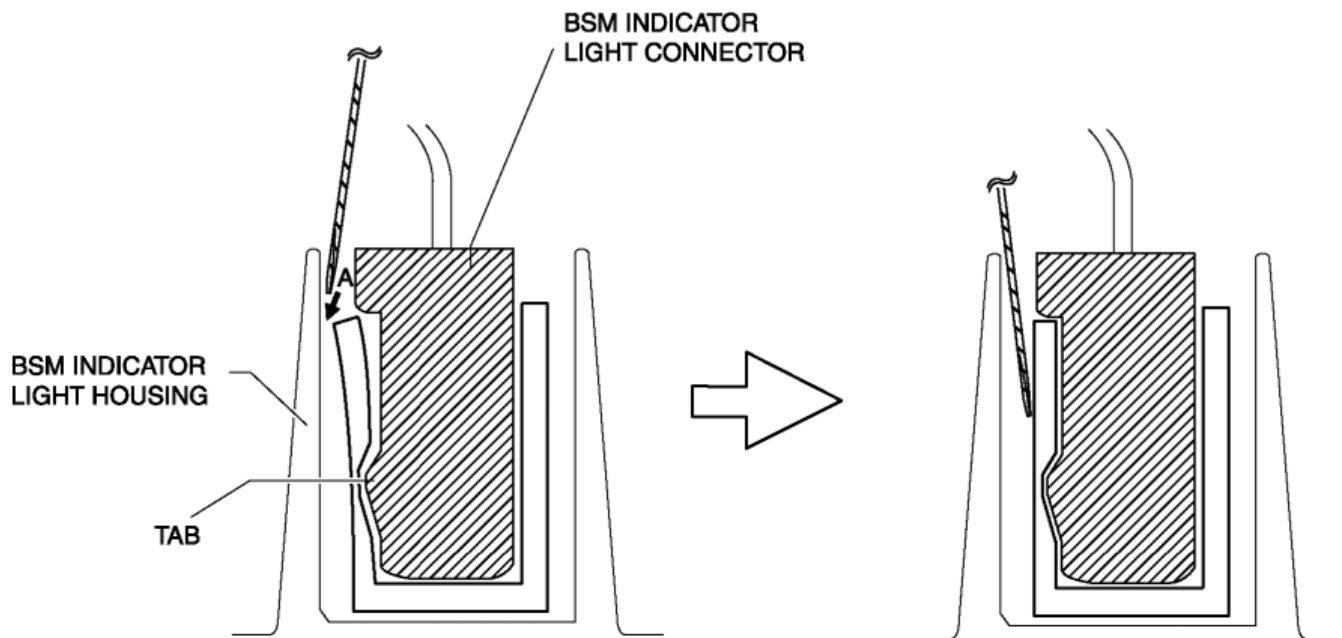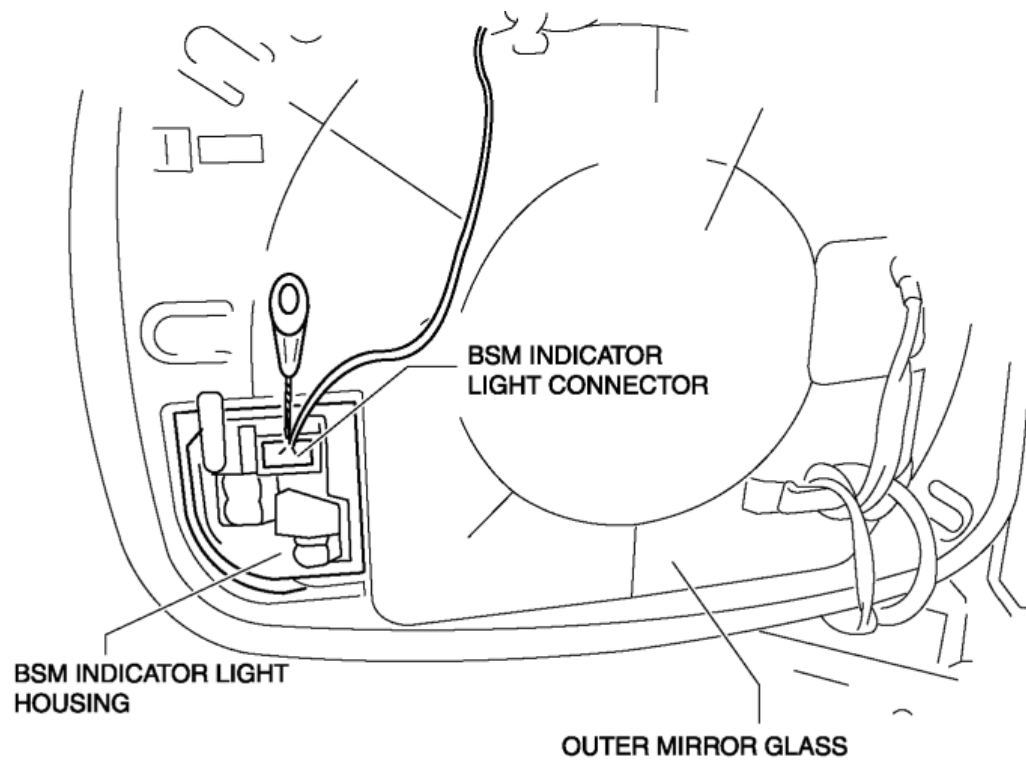

4. Press the mirror glass holder in the direction of the arrow as shown in the figure and install it.

