


2012 - Mazda6 - Body and Accessories

POWER OUTER MIRROR SWITCH INSPECTION




1. Switch the ignition ON.
2. Verify that the power outer mirror switch can be operated for **approx. 43 s** after the ignition is switched off.
 - If the power outer mirror cannot be operated for **approx. 43 s** after the ignition is switched off, or if the power outer mirror can still be operated after **approx. 43 s**, replace the power outer mirror switch.
3. Disconnect the negative battery cable.
4. Remove the inner garnish. (driver-side) (See [INNER GARNISH REMOVAL/ INSTALLATION.](#))
5. Remove the front door trim. (driver-side) (See [FRONT DOOR TRIM REMOVAL/ INSTALLATION.](#))
6. Remove the switch panel. (driver-side) (See [FRONT DOOR TRIM DISASSEMBLY/ ASSEMBLY.](#))
7. Using a tester, verify that the continuity between the power outer mirror switch terminals is as indicated in the table.

○—○ : Continuity

Operation		3D	3F	3G	3H	3B	1C	1M	3C	3E
LH	Up	○	—			○	○	○		
	Down	○	—			○	○	○		
	Left			○		○	○	○		
	Right			○		○	○	○		
RH	Up		○	—		○	○	○		
	Down		○	—		○	○	○		
	Left				○	○	○	○		
	Right				○	○	○	○		
Retract switch	Retract						○	○	○	○
	Return						○	○	○	○

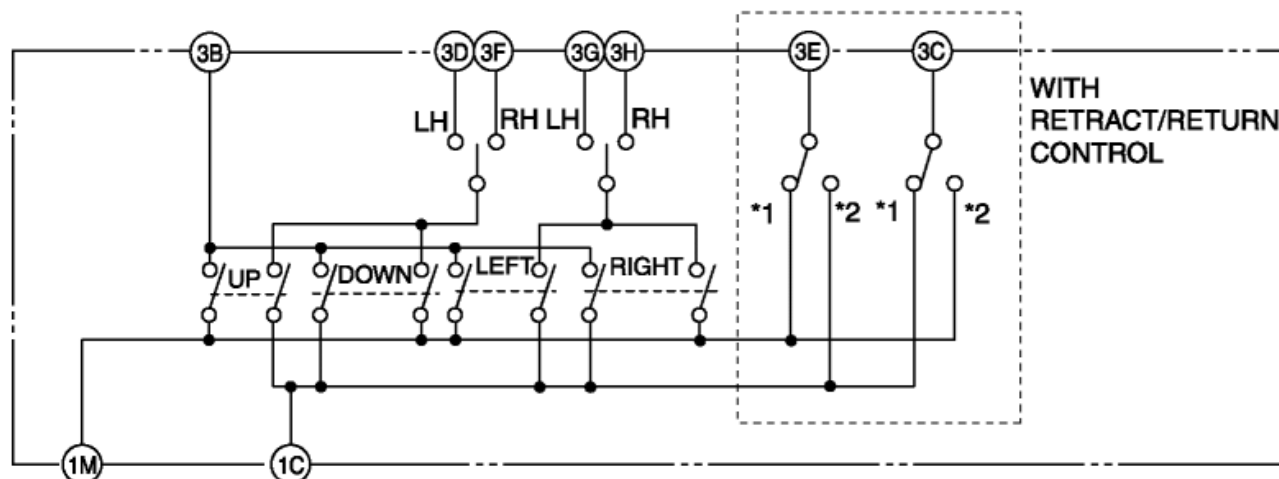

*1: RETURN
*2: RETRACT

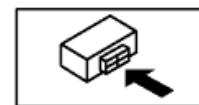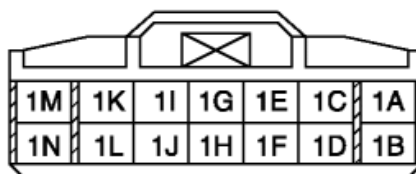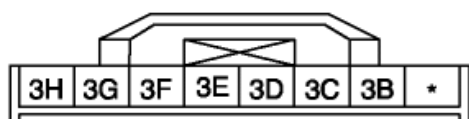

- If not as indicated in the table, replace the power outer mirror switch. (See [POWER OUTER MIRROR SWITCH REMOVAL/ INSTALLATION.](#))


2012 - Mazda6 - Body and Accessories

POWER OUTER MIRROR SWITCH INSPECTION




1. Switch the ignition ON.
2. Verify that the power outer mirror switch can be operated for **approx. 43 s** after the ignition is switched off.
 - If the power outer mirror cannot be operated for **approx. 43 s** after the ignition is switched off, or if the power outer mirror can still be operated after **approx. 43 s**, replace the power outer mirror switch.
3. Disconnect the negative battery cable.
4. Remove the inner garnish. (driver-side) (See [INNER GARNISH REMOVAL/ INSTALLATION.](#))
5. Remove the front door trim. (driver-side) (See [FRONT DOOR TRIM REMOVAL/ INSTALLATION.](#))
6. Remove the switch panel. (driver-side) (See [FRONT DOOR TRIM DISASSEMBLY/ ASSEMBLY.](#))
7. Using a tester, verify that the continuity between the power outer mirror switch terminals is as indicated in the table.

○—○ : Continuity

Operation		3D	3F	3G	3H	3B	1C	1M	3C	3E
LH	Up	○	—			○	○	○		
	Down	○	—			○	○	○		
	Left			○		○	○	○		
	Right			○		○	○	○		
RH	Up		○	—		○	○	○		
	Down		○	—		○	○	○		
	Left				○	○	○	○		
	Right				○	○	○	○		
Retract switch	Retract						○	○	○	○
	Return						○	○	○	○

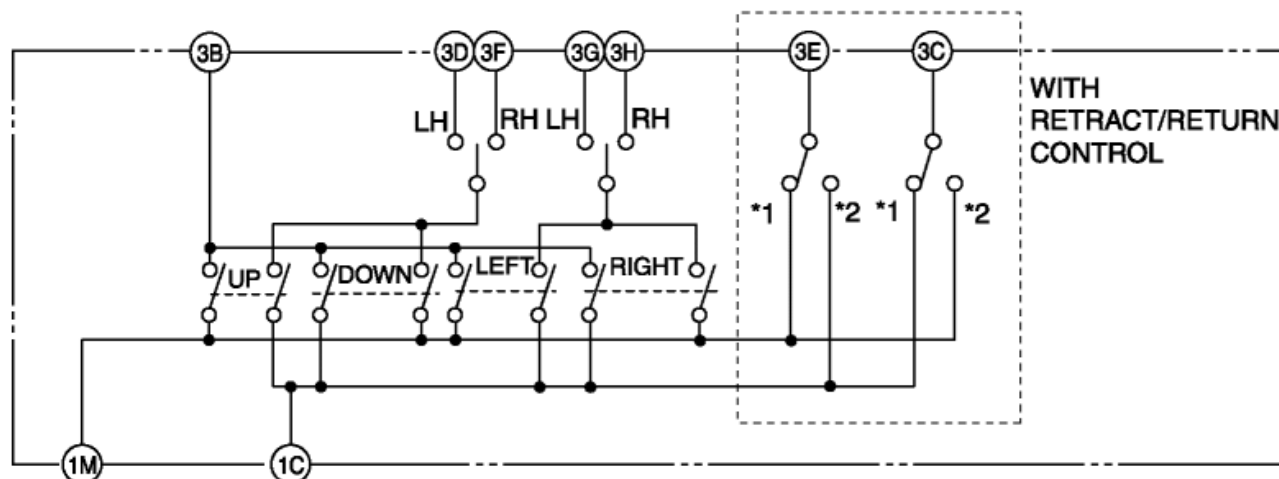

*1: RETURN
*2: RETRACT

 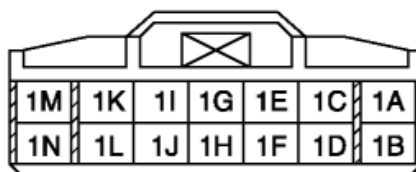 

- If not as indicated in the table, replace the power outer mirror switch. (See [POWER OUTER MIRROR SWITCH REMOVAL/ INSTALLATION.](#))