

2012 - Mazda6 - Body and Accessories

POWER WINDOW SYSTEM INITIALIZATION PROCEDURE

CAUTION:

- Perform the power window initialization procedure at each seat whether the power window main switch or the power window subswitch is used.

NOTE:

- The power window main switch initialization can be performed only using the power window main switch. The power window subswitch initialization can be performed using the power window main switch or the power window switch.
- If the following operations have been performed, initial setting is reset, and auto up/down are disabled. Therefore, performing initial setting is necessary.
 - Negative battery cable disconnected or power window system power supply fuse removed. (perform initial setting for the switches of all seats.)
 - Power window switch connector disconnected. (Perform initial setting for the switch connected with the connector.)
 - Prolonged open/close operation of the power window main or sub switches causes the circuit breaker to activate and automatic operation is disabled.

1. Switch the ignition ON.
2. Press the switch of each window and fully open the door glass.
3. Pull the switch of each window to the manual-up position to fully close the door glass, and keep holding the switch up at the position for **approx. 2 s.**

2012 - Mazda6 - Body and Accessories

POWER WINDOW SYSTEM INITIALIZATION PROCEDURE

CAUTION:

- Perform the power window initialization procedure at each seat whether the power window main switch or the power window subswitch is used.

NOTE:

- The power window main switch initialization can be performed only using the power window main switch. The power window subswitch initialization can be performed using the power window main switch or the power window switch.
- If the following operations have been performed, initial setting is reset, and auto up/down are disabled. Therefore, performing initial setting is necessary.
 - Negative battery cable disconnected or power window system power supply fuse removed. (perform initial setting for the switches of all seats.)
 - Power window switch connector disconnected. (Perform initial setting for the switch connected with the connector.)
 - Prolonged open/close operation of the power window main or sub switches causes the circuit breaker to activate and automatic operation is disabled.

1. Switch the ignition ON.
2. Press the switch of each window and fully open the door glass.
3. Pull the switch of each window to the manual-up position to fully close the door glass, and keep holding the switch up at the position for **approx. 2 s.**