



2012 - Mazda6 - Body and Accessories

SEATS LOCATION INDEX

FRONT SEAT

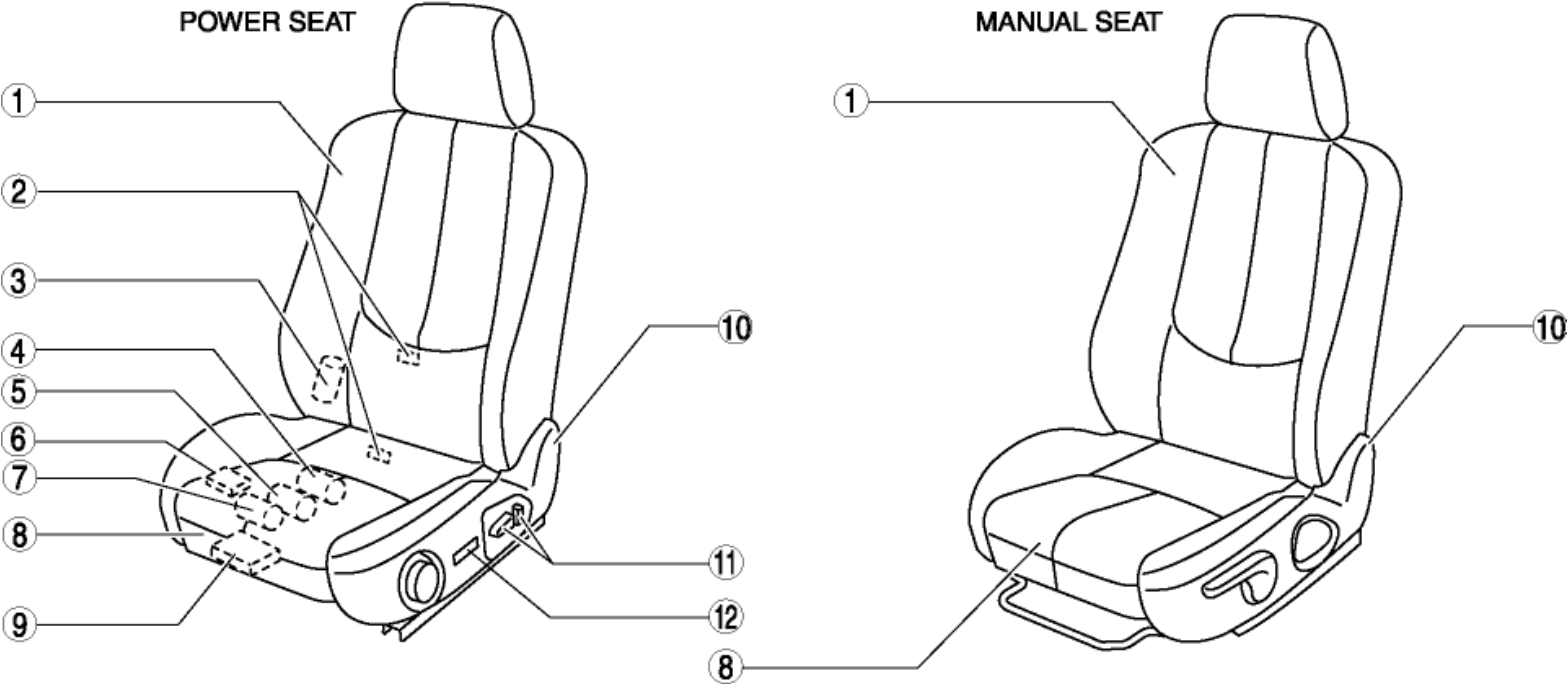

REAR SEAT

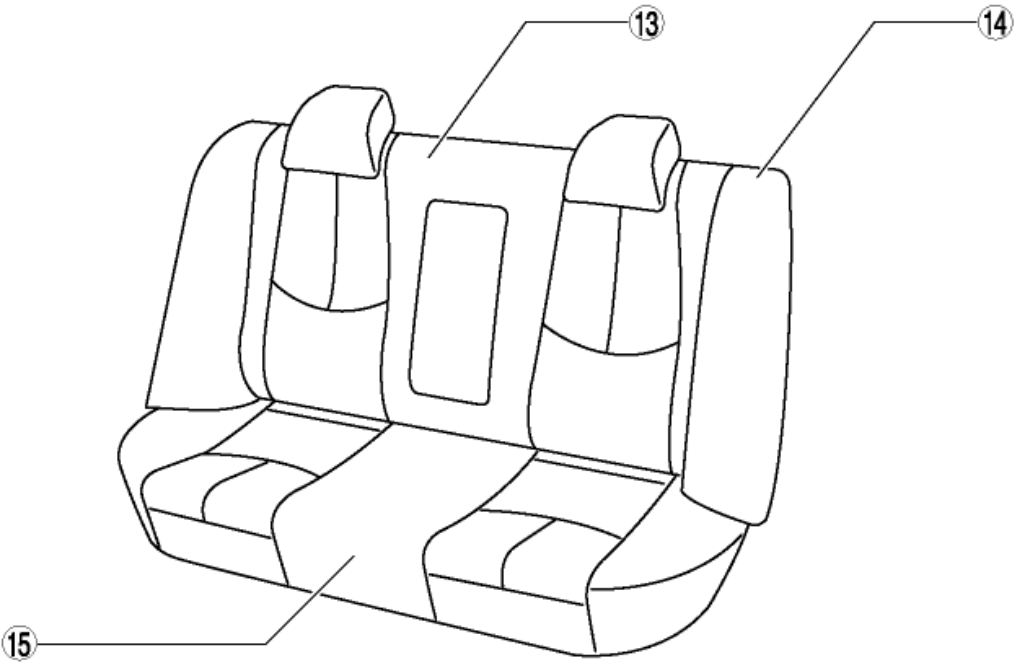


	• (See FRONT SEAT REMOVAL/ INSTALLATION.) • (See FRONT SEAT BACK COMPONENT REMOVAL/ INSTALLATION.) • (See FRONT SEAT BACK TRIM REMOVAL/ INSTALLATION.)
2	Seat warmer unit (See SEAT WARMER UNIT REMOVAL/ INSTALLATION.) (See SEAT WARMER UNIT INSPECTION.)
3	Recliner motor (See RECLINER MOTOR INSPECTION.)
4	Rear tilt motor (See REAR TILT MOTOR INSPECTION.)
5	Front tilt motor (See FRONT TILT MOTOR INSPECTION.)
6	Seat warmer module (See SEAT WARMER MODULE REMOVAL/ INSTALLATION.) (See SEAT WARMER MODULE INSPECTION.)
7	Slide motor (See SLIDE MOTOR INSPECTION.)
8	Front seat cushion trim (See FRONT SEAT CUSHION TRIM REMOVAL/ INSTALLATION.)
9	Position memory control module (See POSITION MEMORY CONTROL MODULE REMOVAL/ INSTALLATION.) (See POSITION MEMORY CONTROL MODULE INSPECTION.)
10	Front seat side cover (See FRONT SEAT SIDE COVER REMOVAL/ INSTALLATION.)
11	Power seat switch (See POWER SEAT SWITCH REMOVAL/ INSTALLATION.) (See POWER SEAT SWITCH INSPECTION.)
12	Position memory switch (See POSITION MEMORY SWITCH REMOVAL/ INSTALLATION.) (See POSITION MEMORY SWITCH INSPECTION.)
13	Rear seat back (See REAR SEAT BACK REMOVAL/ INSTALLATION.) (See REAR SEAT BACK FRAME REMOVAL/ INSTALLATION.)
14	Rear side seat back

	(See REAR SIDE SEAT BACK REMOVAL/ INSTALLATION.)
15	Rear seat cushion (See REAR SEAT CUSHION REMOVAL/ INSTALLATION.) (See REAR SEAT CUSHION TRIM REMOVAL/ INSTALLATION.)


2012 - Mazda6 - Body and Accessories

SEATS LOCATION INDEX

FRONT SEAT

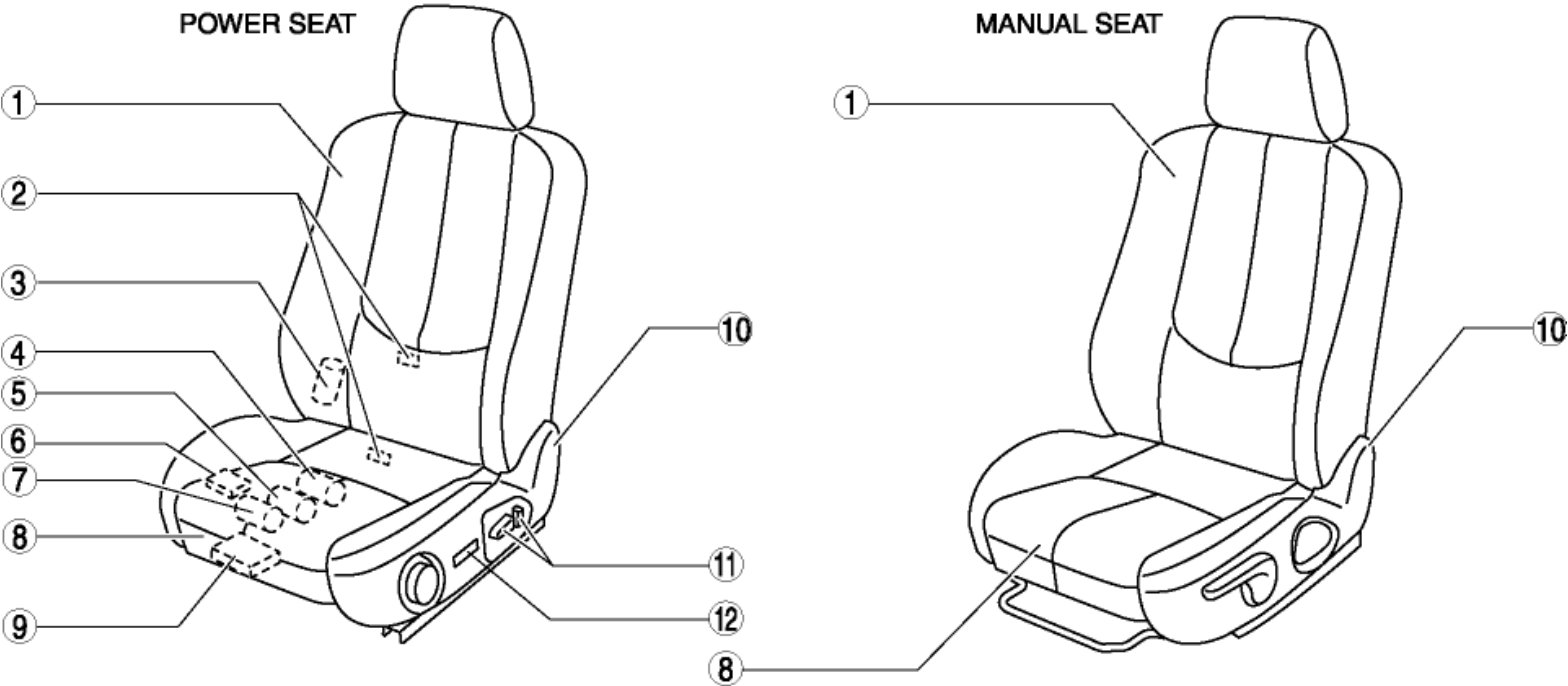

REAR SEAT

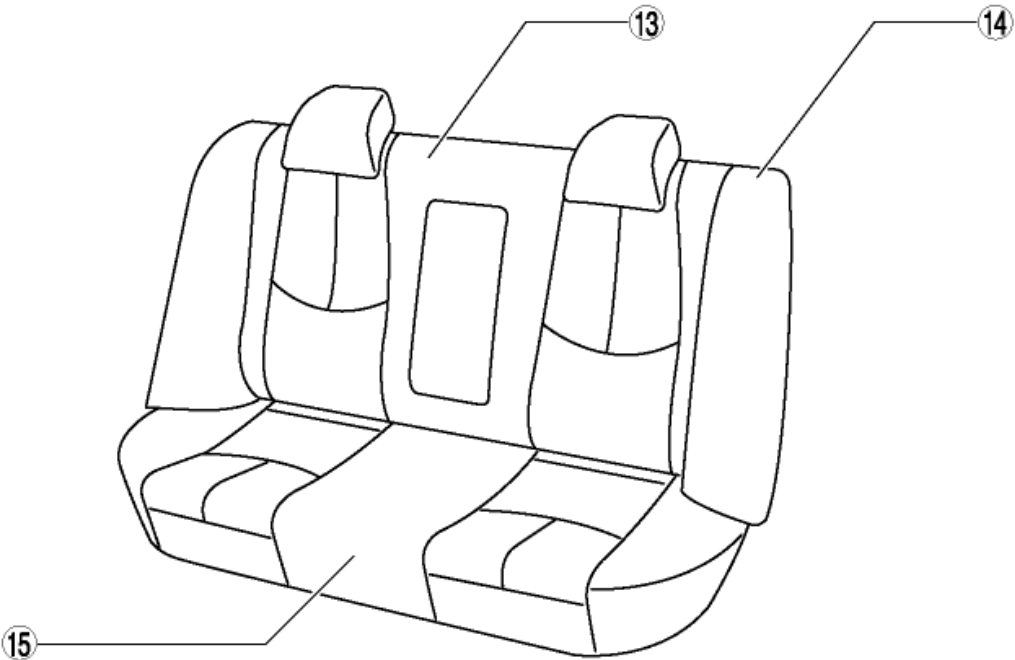

	• (See FRONT SEAT REMOVAL/ INSTALLATION.) • (See FRONT SEAT BACK COMPONENT REMOVAL/ INSTALLATION.) • (See FRONT SEAT BACK TRIM REMOVAL/ INSTALLATION.)
2	Seat warmer unit (See SEAT WARMER UNIT REMOVAL/ INSTALLATION.) (See SEAT WARMER UNIT INSPECTION.)
3	Recliner motor (See RECLINER MOTOR INSPECTION.)
4	Rear tilt motor (See REAR TILT MOTOR INSPECTION.)
5	Front tilt motor (See FRONT TILT MOTOR INSPECTION.)
6	Seat warmer module (See SEAT WARMER MODULE REMOVAL/ INSTALLATION.) (See SEAT WARMER MODULE INSPECTION.)
7	Slide motor (See SLIDE MOTOR INSPECTION.)
8	Front seat cushion trim (See FRONT SEAT CUSHION TRIM REMOVAL/ INSTALLATION.)
9	Position memory control module (See POSITION MEMORY CONTROL MODULE REMOVAL/ INSTALLATION.) (See POSITION MEMORY CONTROL MODULE INSPECTION.)
10	Front seat side cover (See FRONT SEAT SIDE COVER REMOVAL/ INSTALLATION.)
11	Power seat switch (See POWER SEAT SWITCH REMOVAL/ INSTALLATION.) (See POWER SEAT SWITCH INSPECTION.)
12	Position memory switch (See POSITION MEMORY SWITCH REMOVAL/ INSTALLATION.) (See POSITION MEMORY SWITCH INSPECTION.)
13	Rear seat back (See REAR SEAT BACK REMOVAL/ INSTALLATION.) (See REAR SEAT BACK FRAME REMOVAL/ INSTALLATION.)
14	Rear side seat back

	(See REAR SIDE SEAT BACK REMOVAL/ INSTALLATION.)
15	Rear seat cushion (See REAR SEAT CUSHION REMOVAL/ INSTALLATION.) (See REAR SEAT CUSHION TRIM REMOVAL/ INSTALLATION.)