


2012 - Mazda6 - Body and Accessories

REAR TILT MOTOR INSPECTION

- 1. Disconnect the rear tilt motor connector.
- 2. Apply battery positive voltage to the rear tilt motor terminals and inspect the rear tilt motor operation.

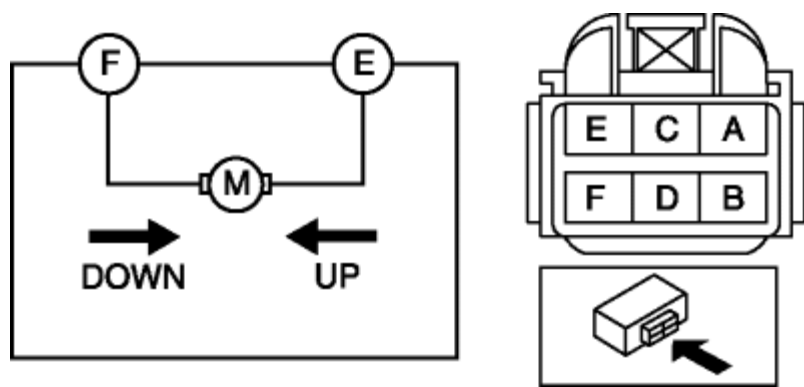


- If not as specified, replace the front seat slide adjuster. (See [FRONT SEAT SLIDE ADJUSTER REMOVAL/ INSTALLATION](#).)

Motor operation	Connection	
	B+	GND
Up	E	F
Down	F	E

2012 - Mazda6 - Body and Accessories

REAR TILT MOTOR INSPECTION

- 1. Disconnect the rear tilt motor connector.
- 2. Apply battery positive voltage to the rear tilt motor terminals and inspect the rear tilt motor operation.

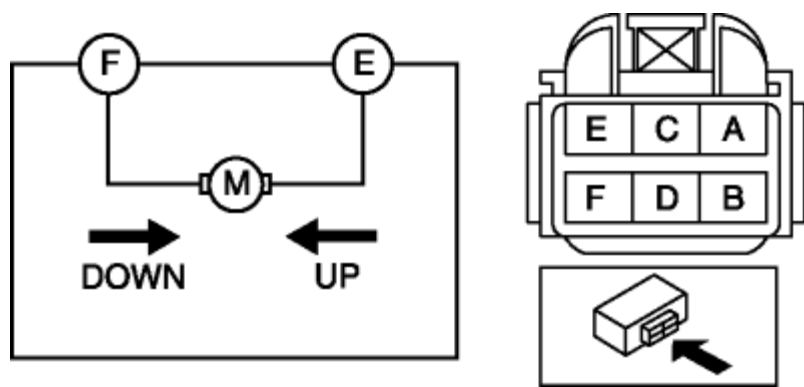

- If not as specified, replace the front seat slide adjuster. (See [FRONT SEAT SLIDE ADJUSTER REMOVAL/ INSTALLATION](#).)

Motor operation	Connection	
	B+	GND
Up	E	F
Down	F	E