


2012 - Mazda6 - Body and Accessories

SLIDE MOTOR INSPECTION

- 1. Disconnect the slide motor connector.
- 2. Apply battery positive voltage to the slide motor terminals and inspect the slide motor operation.

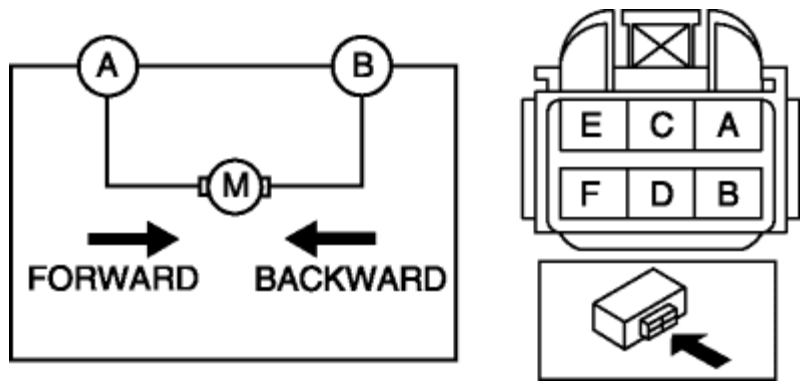


- If not as specified, replace the front seat slide adjuster. (See [FRONT SEAT SLIDE ADJUSTER REMOVAL/ INSTALLATION](#).)

Motor operation	Connection	
	B+	GND
Forward	A	B
Backward	B	A

2012 - Mazda6 - Body and Accessories

SLIDE MOTOR INSPECTION

- 1. Disconnect the slide motor connector.
- 2. Apply battery positive voltage to the slide motor terminals and inspect the slide motor operation.

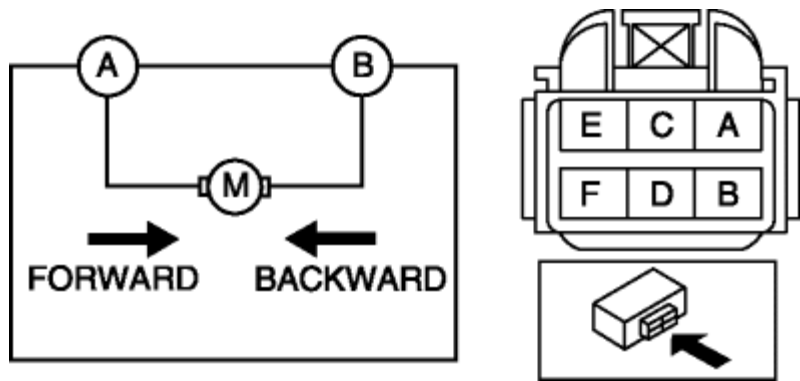

- If not as specified, replace the front seat slide adjuster. (See [FRONT SEAT SLIDE ADJUSTER REMOVAL/ INSTALLATION](#).)

Motor operation	Connection	
	B+	GND
Forward	A	B
Backward	B	A