


2012 - Mazda6 - Body and Accessories

POWER SEAT SWITCH INSPECTION

1. Disconnect the power seat switch connector.
2. Inspect for continuity between the power seat switch connector terminals using an ohmmeter.
 - If not as specified, replace the power seat switch. (See [POWER SEAT SWITCH REMOVAL/ INSTALLATION.](#))


8WAY POWER SEAT (VEHICLES WITHOUT POSITION MEMORY CONTROL SYSTEM)

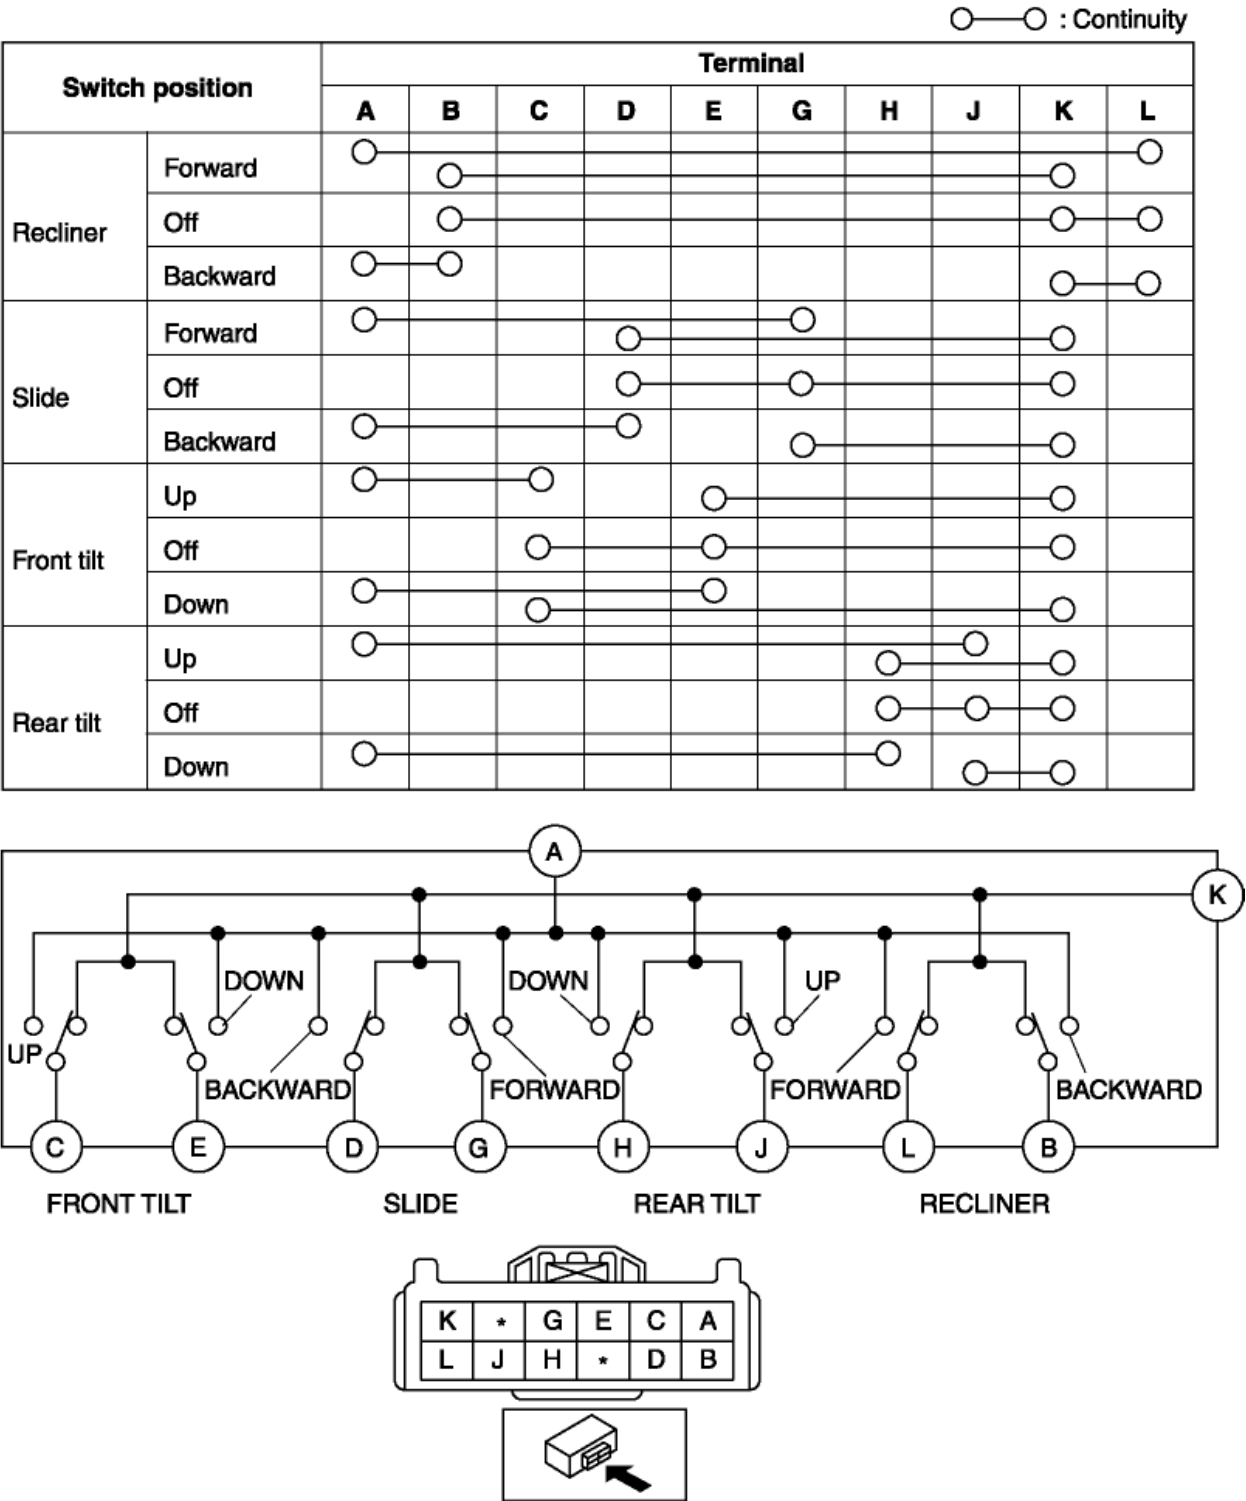

8WAY POWER SEAT (VEHICLES WITH POSITION MEMORY CONTROL SYSTEM)

○—○ : Continuity



Switch position		Terminal								
		A	B	C	D	E	G	H	J	L
Recliner	Forward									
	Backward									
Slide	Forward									
	Backward									
Front tilt	Up									
	Down									
Rear tilt	Up									
	Down									

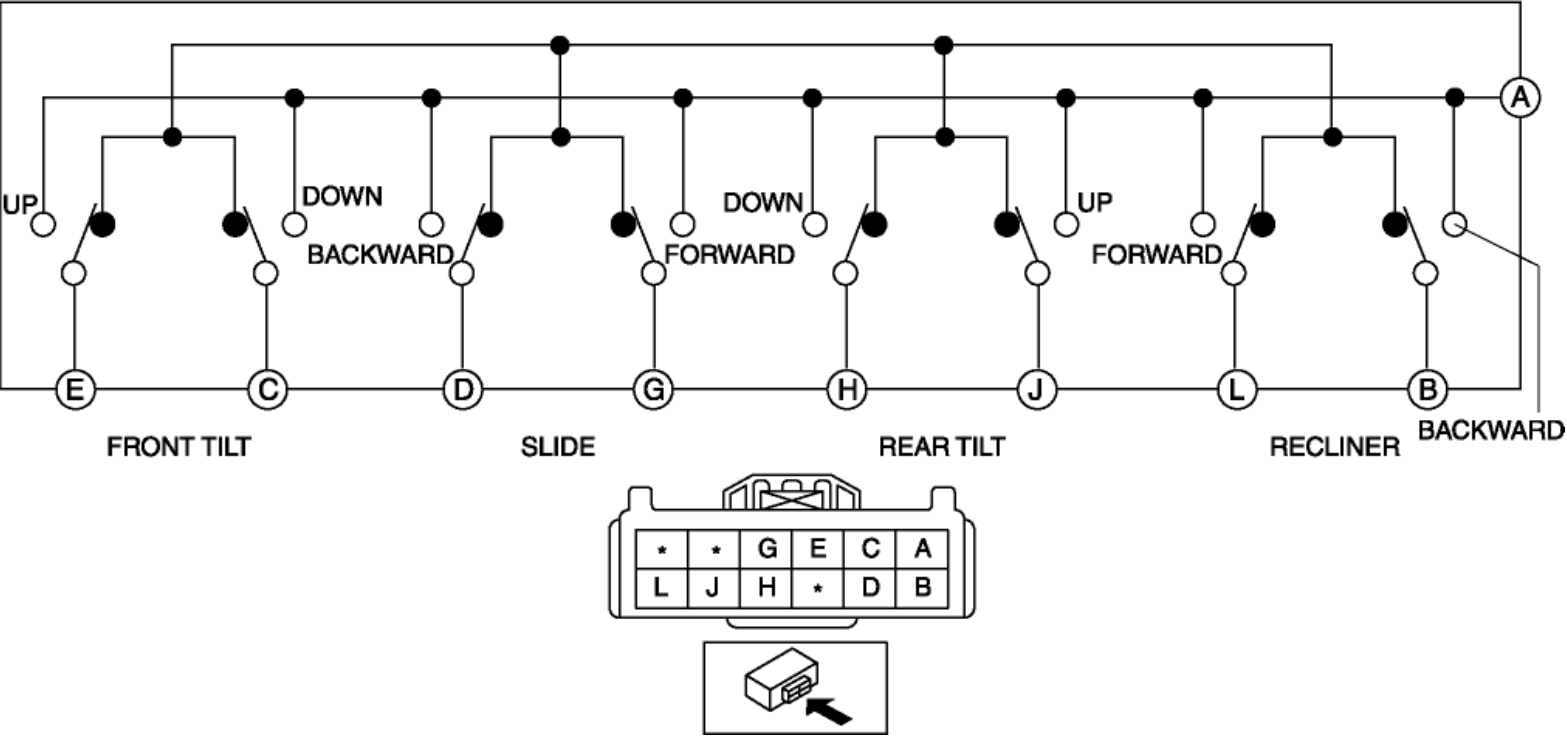

4WAY POWER SEAT

○—○ : Continuity

Switch position		Terminal					
		A	B	D	G	L	K
Recliner	Forward	○	○			○	○
	Off		○			○	○
	Backward	○	○			○	○
Slide	Forward	○		○	○		○
	Off			○	○		○
	Backward	○		○	○		○

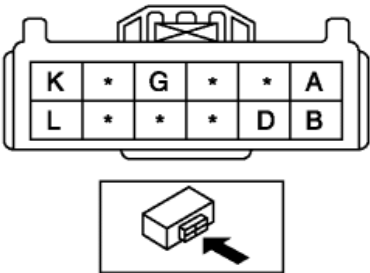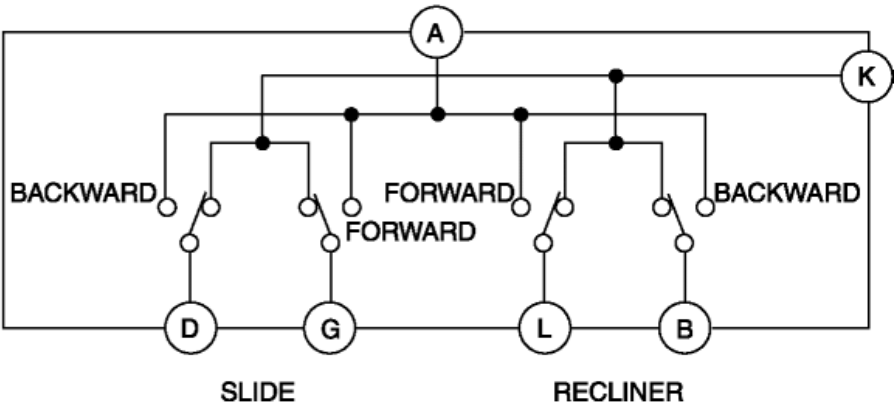

2012 - Mazda6 - Body and Accessories


POWER SEAT SWITCH INSPECTION

- 1. Disconnect the power seat switch connector.
- 2. Inspect for continuity between the power seat switch connector terminals using an ohmmeter.
 - If not as specified, replace the power seat switch. (See [POWER SEAT SWITCH REMOVAL/ INSTALLATION.](#))

8WAY POWER SEAT (VEHICLES WITHOUT POSITION MEMORY CONTROL SYSTEM)

○—○ : Continuity


Switch position		Terminal									
		A	B	C	D	E	G	H	J	K	L
Recliner	Forward	○	○							○	○
	Off		○							○	○
	Backward	○	○							○	○
Slide	Forward	○			○		○			○	
	Off				○		○			○	
	Backward	○			○		○			○	
Front tilt	Up	○		○		○				○	
	Off			○		○				○	
	Down	○		○		○				○	
Rear tilt	Up	○						○	○	○	
	Off							○	○	○	
	Down	○						○	○	○	

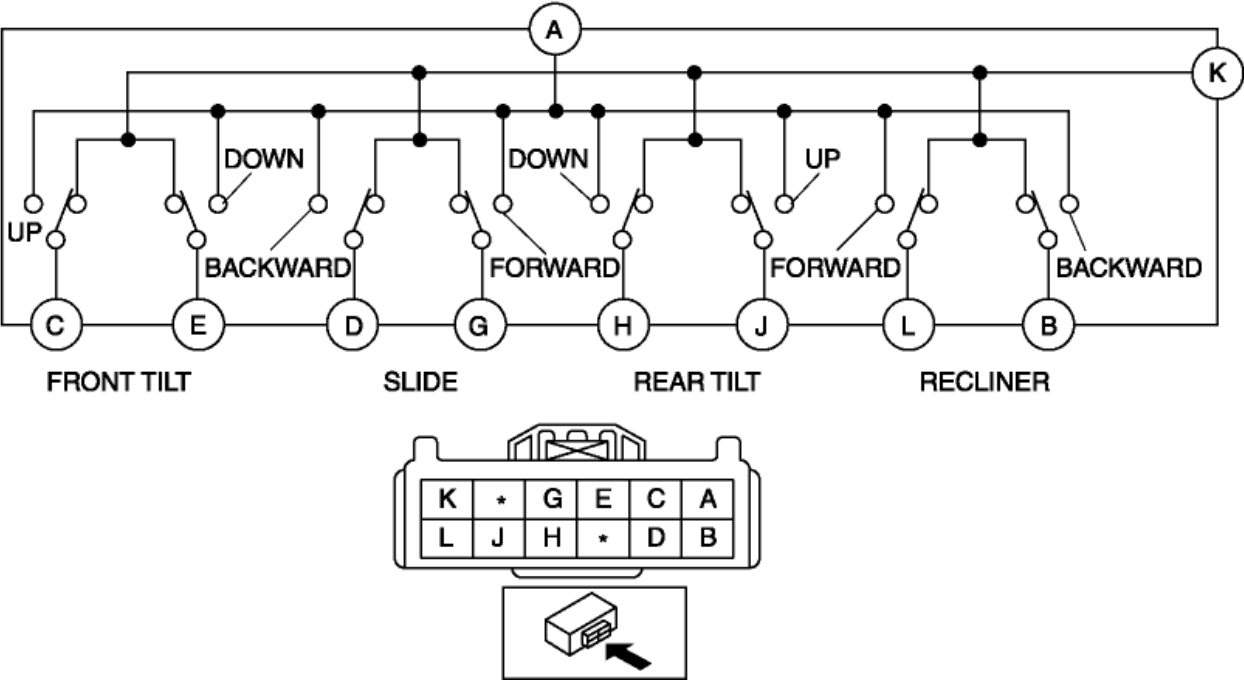

8WAY POWER SEAT (VEHICLES WITH POSITION MEMORY CONTROL SYSTEM)

○—○ : Continuity

Switch position		Terminal								
		A	B	C	D	E	G	H	J	L
Recliner	Forward									
	Backward									
Slide	Forward									
	Backward									
Front tilt	Up									
	Down									
Rear tilt	Up									
	Down									

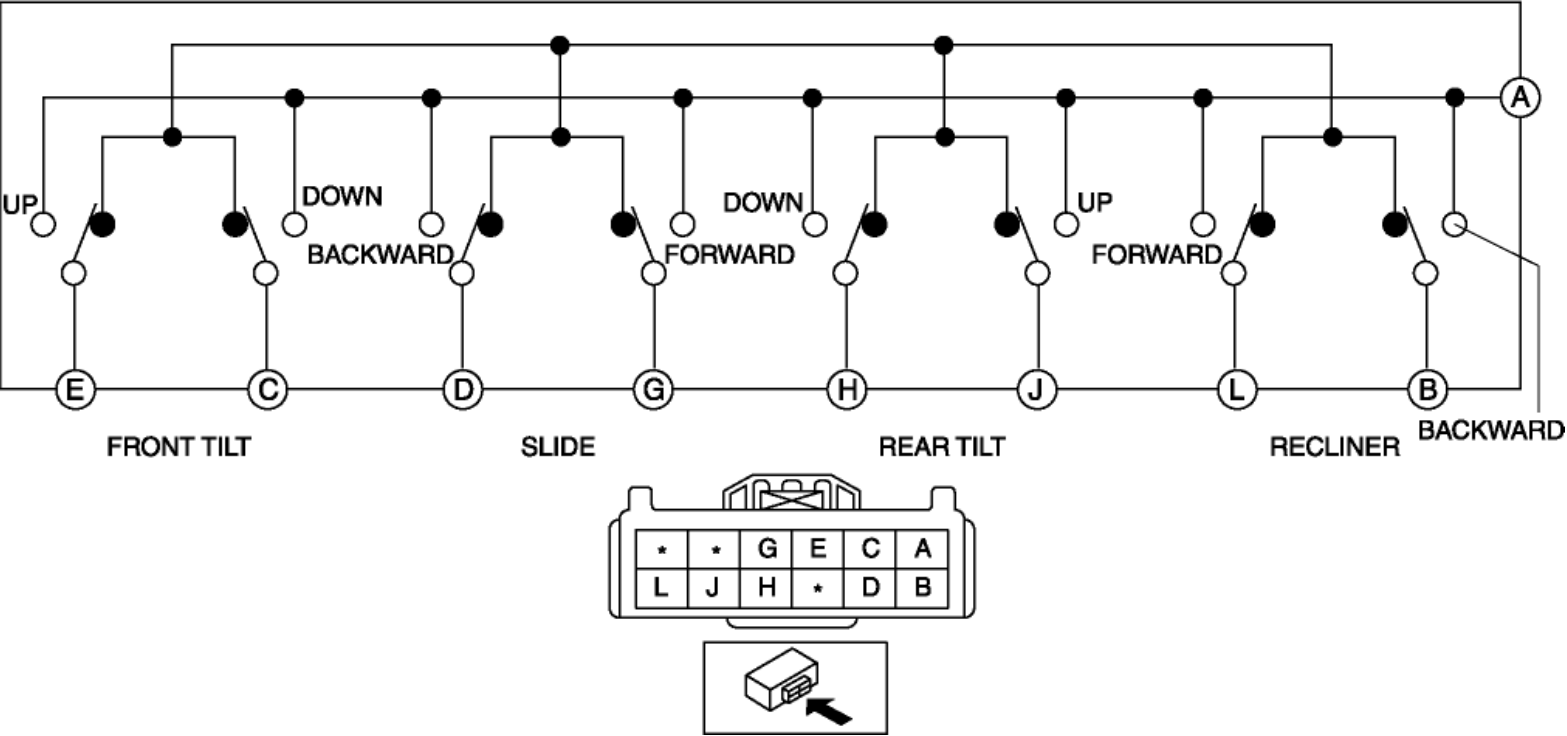

4WAY POWER SEAT

○—○ : Continuity

Switch position		Terminal					
		A	B	D	G	L	K
Recliner	Forward	○	○			○	○
	Off		○			○	○
	Backward	○	○			○	○
Slide	Forward	○		○	○		○
	Off			○	○		○
	Backward	○		○	○		○

