


2012 - Mazda6 - Body and Accessories

SEAT WARMER SWITCH REMOVAL/ INSTALLATION

1. Disconnect the negative battery cable.
2. Remove the upper panel. (See [UPPER PANEL REMOVAL/ INSTALLATION.](#))
3. Remove the decoration panel. (See [DECORATION PANEL REMOVAL/ INSTALLATION.](#))
4. Remove the center panel lower. (See [CENTER PANEL LOWER REMOVAL/ INSTALLATION.](#))
5. Squeeze the tabs of seat warmer switch and pull it outward to remove it.

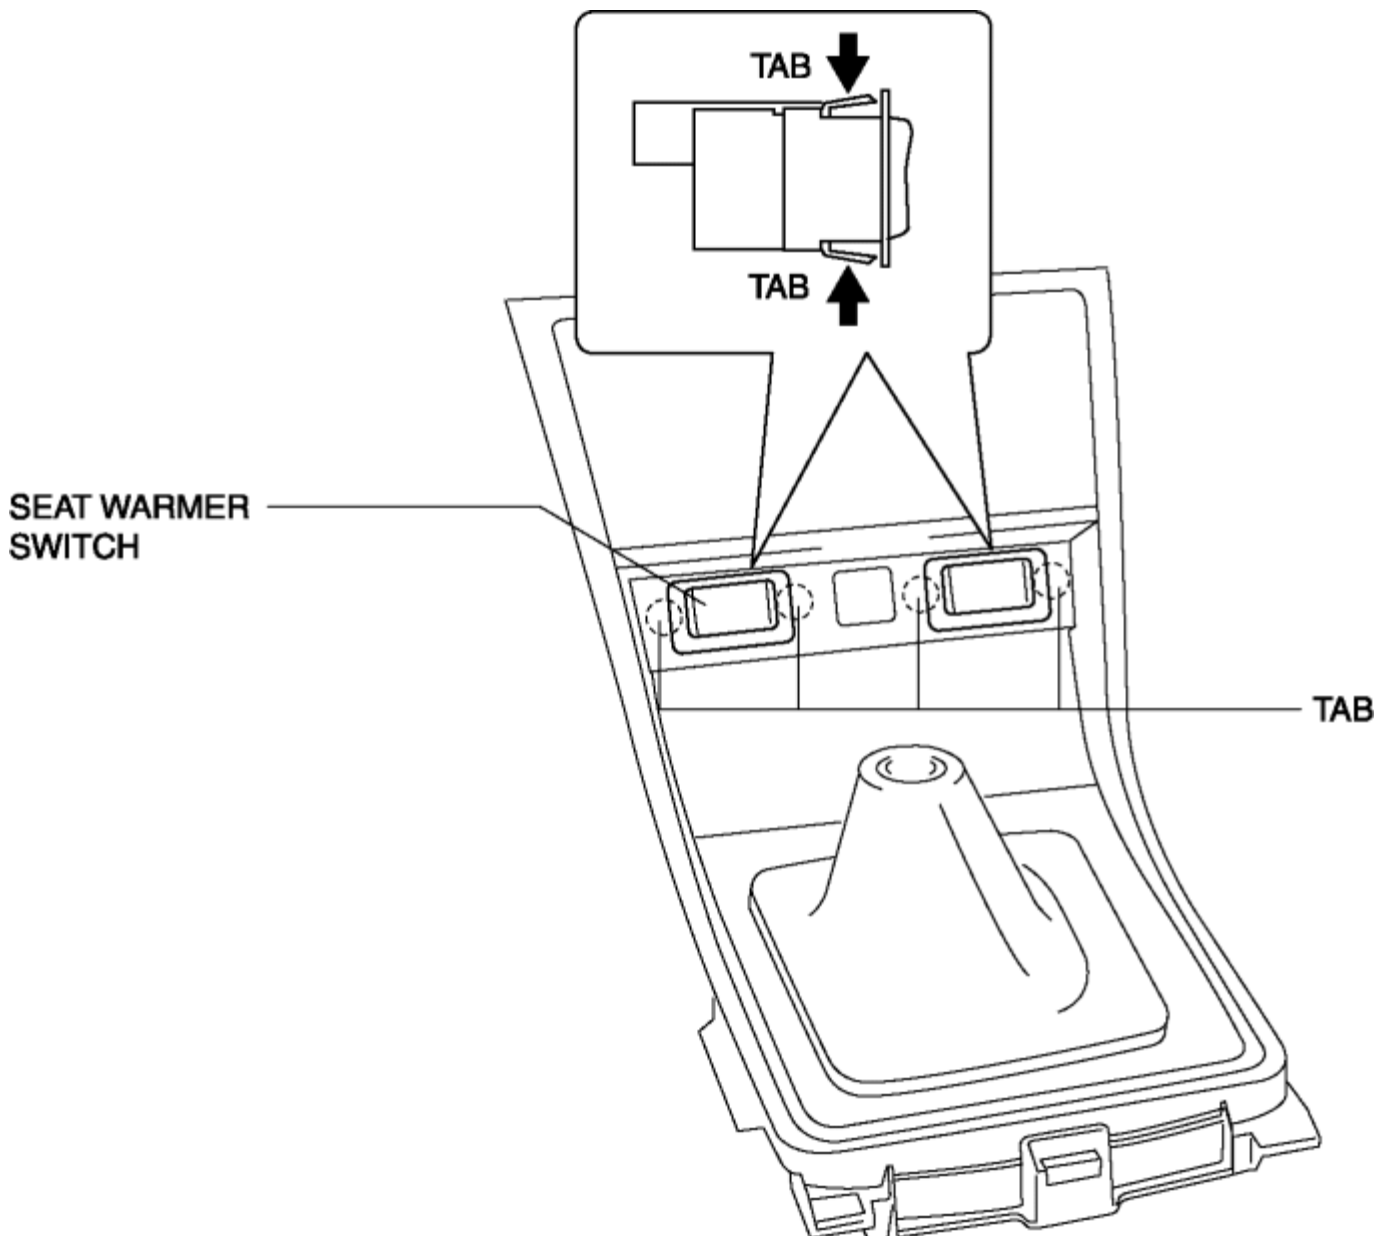

6. Remove the seat warmer switch.

7. Install in the reverse order of removal.

[< Previous](#) [Next >](#)


[Back to Top](#)

© 2012 Mazda North American Operations, U.S.A.

2012 - Mazda6 - Body and Accessories

SEAT WARMER SWITCH REMOVAL/ INSTALLATION

1. Disconnect the negative battery cable.
2. Remove the upper panel. (See [UPPER PANEL REMOVAL/ INSTALLATION.](#))
3. Remove the decoration panel. (See [DECORATION PANEL REMOVAL/ INSTALLATION.](#))
4. Remove the center panel lower. (See [CENTER PANEL LOWER REMOVAL/ INSTALLATION.](#))
5. Squeeze the tabs of seat warmer switch and pull it outward to remove it.

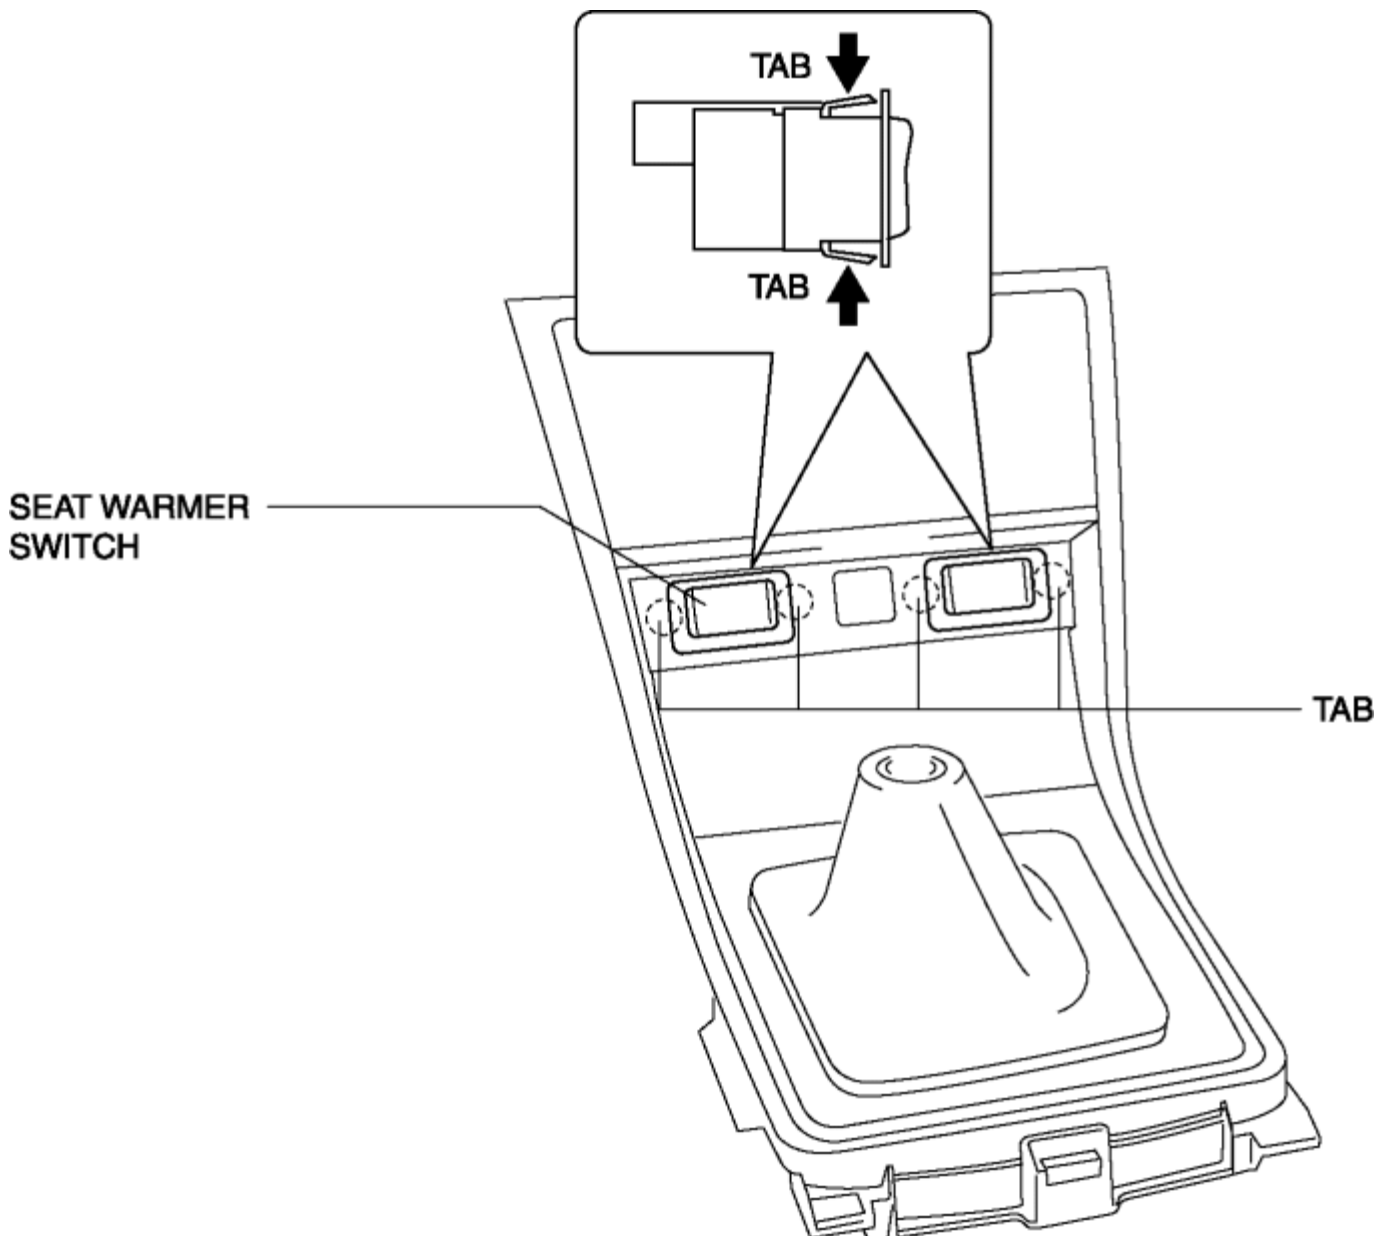

6. Remove the seat warmer switch.

7. Install in the reverse order of removal.

[< Previous](#) [Next >](#)

[Back to Top](#)

© 2012 Mazda North American Operations, U.S.A.