


2012 - Mazda6 - Body and Accessories


SEAT WARMER UNIT INSPECTION

Seat Cushion

- 1. Remove the front seat. (See FRONT SEAT REMOVAL/ INSTALLATION.)
- 2. Remove the front seat side cover. (See FRONT SEAT SIDE COVER REMOVAL/ INSTALLATION.)
- 3. Remove the front seat cushion trim. (See FRONT SEAT CUSHION TRIM REMOVAL/ INSTALLATION.)
- 4. Connect a jumper wire to the connector for the seat cushion warmer to seat back warmer.

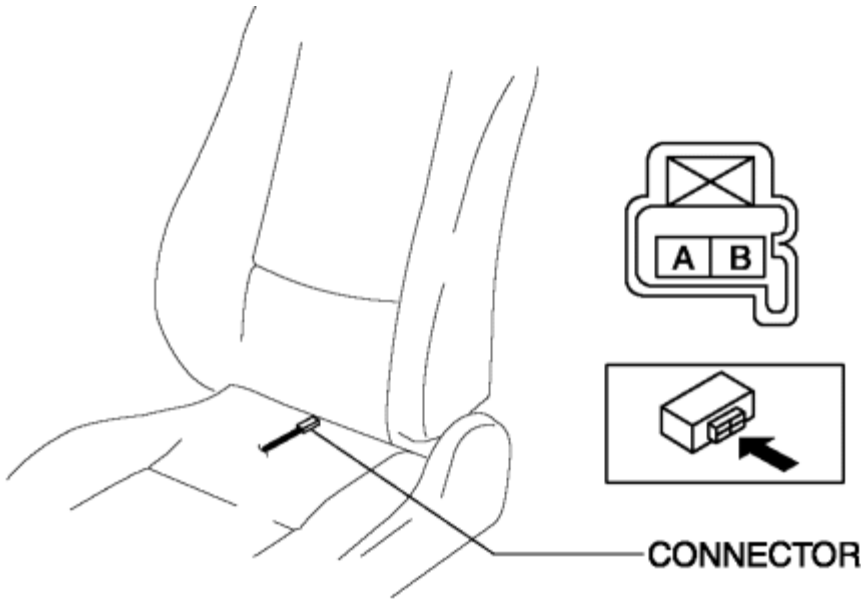

- 5. Verify that the continuity between the hazard switch terminals is as indicated in the table.

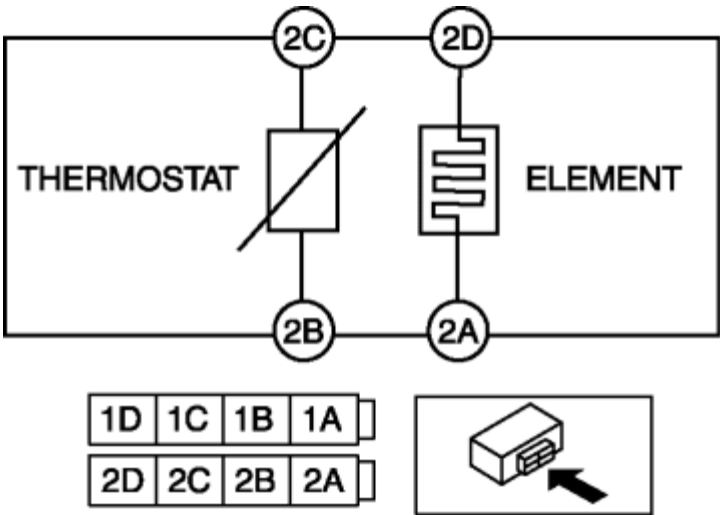


- If not as indicated in the table, replace the seat warmer unit. (See [SEAT WARMER UNIT REMOVAL/ INSTALLATION.](#))

○—○ : Continuity

Measured item	Terminal			
	2A	2B	2C	2D
ELEMENT	○—○			○
THERMOSTAT (Under any condition)		○—○		

Seat Back

1. Remove the front seat. (See [FRONT SEAT REMOVAL/ INSTALLATION.](#))
2. Remove the front seat side cover. (See [FRONT SEAT SIDE COVER REMOVAL/ INSTALLATION.](#))
3. Remove the front seat cushion trim. (See [FRONT SEAT CUSHION TRIM REMOVAL/ INSTALLATION.](#))
4. Verify that the continuity between the seat warmer terminals is as indicated in the table.

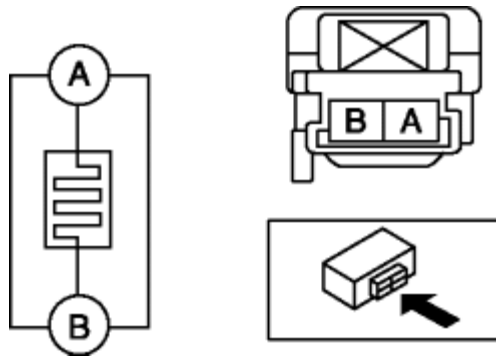

- If not as indicated in the table, replace the seat warmer unit. (See [SEAT WARMER UNIT REMOVAL/ INSTALLATION.](#))

○—○ : Continuity


Thermostat temperature	Terminal	
	A	B
Under any condition	○—○	○

2012 - Mazda6 - Body and Accessories


SEAT WARMER UNIT INSPECTION

Seat Cushion

1. Remove the front seat. (See [FRONT SEAT REMOVAL/ INSTALLATION.](#))
2. Remove the front seat side cover. (See [FRONT SEAT SIDE COVER REMOVAL/ INSTALLATION.](#))
3. Remove the front seat cushion trim. (See [FRONT SEAT CUSHION TRIM REMOVAL/ INSTALLATION.](#))
4. Connect a jumper wire to the connector for the seat cushion warmer to seat back warmer.

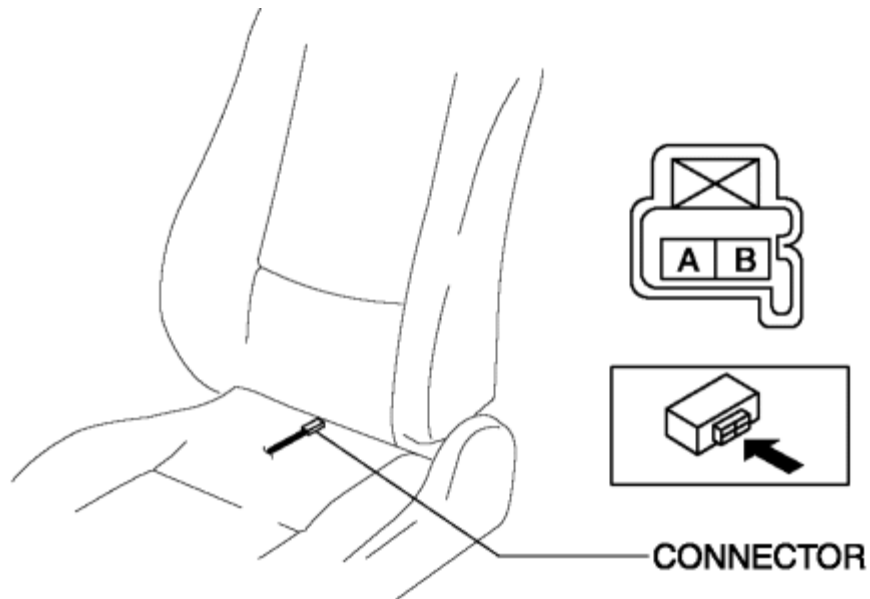

5. Verify that the continuity between the hazard switch terminals is as indicated in the table.

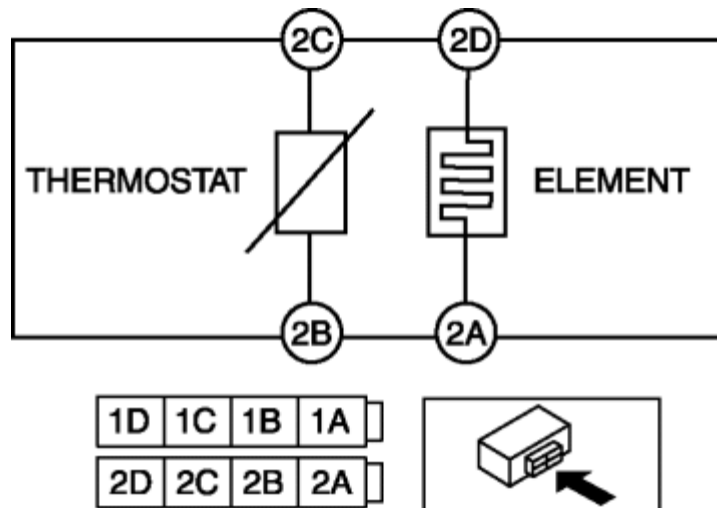


- If not as indicated in the table, replace the seat warmer unit. (See [SEAT WARMER UNIT REMOVAL/ INSTALLATION](#).)

○ — ○ : Continuity

Measured item	Terminal			
	2A	2B	2C	2D
ELEMENT	○ — ○			○
THERMOSTAT (Under any condition)		○ — ○		

Seat Back

1. Remove the front seat. (See [FRONT SEAT REMOVAL/ INSTALLATION](#).)
2. Remove the front seat side cover. (See [FRONT SEAT SIDE COVER REMOVAL/ INSTALLATION](#).)
3. Remove the front seat cushion trim. (See [FRONT SEAT CUSHION TRIM REMOVAL/ INSTALLATION](#).)
4. Verify that the continuity between the seat warmer terminals is as indicated in the table.

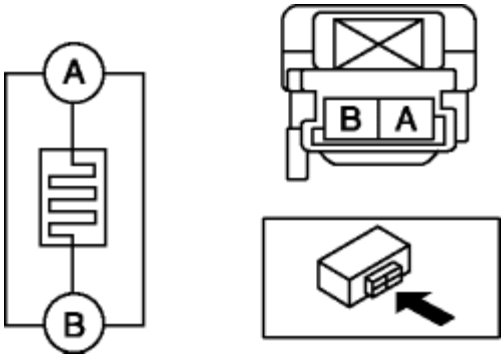

- If not as indicated in the table, replace the seat warmer unit. (See [SEAT WARMER UNIT REMOVAL/ INSTALLATION](#).)

○ — ○ : Continuity

Thermostat temperature	Terminal	
	A	B
Under any condition	○ — ○	○