

## 2012 - Mazda6 - Body and Accessories

### POSITION MEMORY CONTROL MODULE REMOVAL/ INSTALLATION


**WARNING:**

- Handling a front seat (with built-in side air bag) improperly can accidentally operate (deploy) the air bag, which may seriously injure you. Read the service warnings before handling a front seat (with built-in side air bag). (See [AIR BAG SYSTEM SERVICE WARNINGS](#).)

**CAUTION:**

- After removing a front seat, do not operate the slider lever. If the slider lever is operated, the left and right slide positions will deviate, and the slide adjuster may be damaged after the front seat is installed.
- Verify that there are no malfunctions in the sliding mechanism after installing a front seat.
- When performing the procedure with a front seat removed from the vehicle, perform the procedure on a clean rag so as not to damage or soil the seat.

1. Operate the power seat switch and move the seat cushion forward and upward.
2. Disconnect the negative battery cable and wait **1 min or more**.
3. Remove the driver-side front seat. (See [FRONT SEAT REMOVAL/ INSTALLATION](#).)
4. Remove in the order indicated in the table.

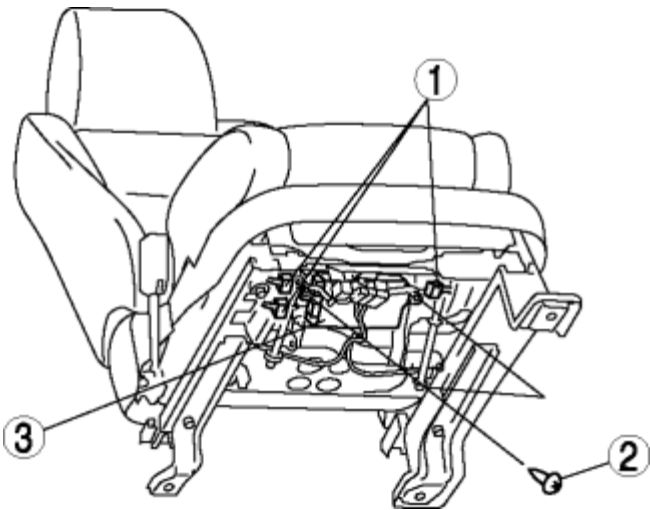

|   |           |
|---|-----------|
| 1 | Connector |
| 2 | Screw     |
|   |           |

|   |                                |
|---|--------------------------------|
| 3 | Position memory control module |
|---|--------------------------------|

5. Install in the reverse order of removal.

[< Previous](#)   [Next >](#)

© 2012 Mazda North American Operations, U.S.A.

[Back to Top](#)

## 2012 - Mazda6 - Body and Accessories

### POSITION MEMORY CONTROL MODULE REMOVAL/ INSTALLATION


**WARNING:**

- Handling a front seat (with built-in side air bag) improperly can accidentally operate (deploy) the air bag, which may seriously injure you. Read the service warnings before handling a front seat (with built-in side air bag). (See [AIR BAG SYSTEM SERVICE WARNINGS](#).)

**CAUTION:**

- After removing a front seat, do not operate the slider lever. If the slider lever is operated, the left and right slide positions will deviate, and the slide adjuster may be damaged after the front seat is installed.
- Verify that there are no malfunctions in the sliding mechanism after installing a front seat.
- When performing the procedure with a front seat removed from the vehicle, perform the procedure on a clean rag so as not to damage or soil the seat.

1. Operate the power seat switch and move the seat cushion forward and upward.
2. Disconnect the negative battery cable and wait **1 min or more**.
3. Remove the driver-side front seat. (See [FRONT SEAT REMOVAL/ INSTALLATION](#).)
4. Remove in the order indicated in the table.

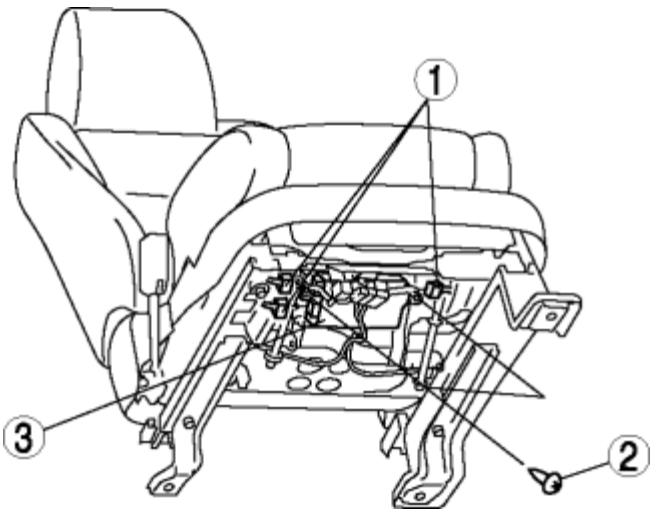

|   |           |
|---|-----------|
| 1 | Connector |
| 2 | Screw     |
|   |           |

|   |                                |
|---|--------------------------------|
| 3 | Position memory control module |
|---|--------------------------------|

5. Install in the reverse order of removal.

[< Previous](#)   [Next >](#)

© 2012 Mazda North American Operations, U.S.A.

[Back to Top](#)