


2012 - Mazda6 - Body and Accessories

POSITION MEMORY SWITCH INSPECTION

- 1. Disconnect the position memory switch connector.
- 2. Inspect for continuity between the power seat switch connector terminals.

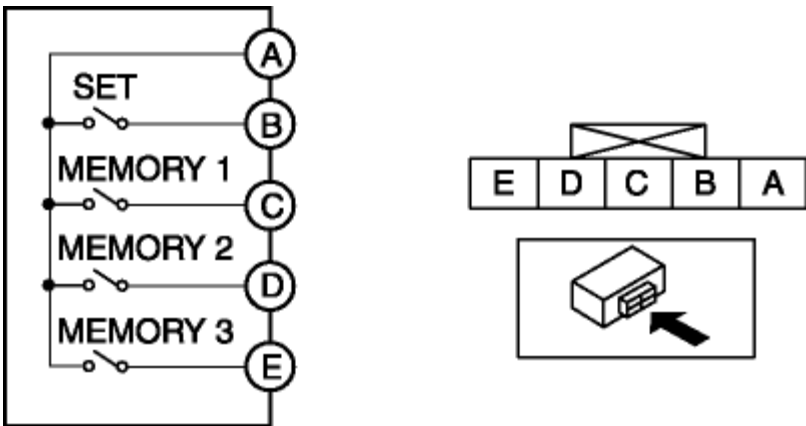

- If not as specified, replace the position memory switch. (See [POSITION MEMORY SWITCH REMOVAL/ INSTALLATION](#).)


○ — ○ : Continuity

Switch position	Terminal				
	A	B	C	D	E
Set switch on	○ — ○				
Memory switch 1 on	○ — ○		○		
Memory switch 2 on	○ — ○			○	
Memory switch 3 on	○ — ○				○
Off					

2012 - Mazda6 - Body and Accessories

POSITION MEMORY SWITCH INSPECTION

- 1. Disconnect the position memory switch connector.
- 2. Inspect for continuity between the power seat switch connector terminals.

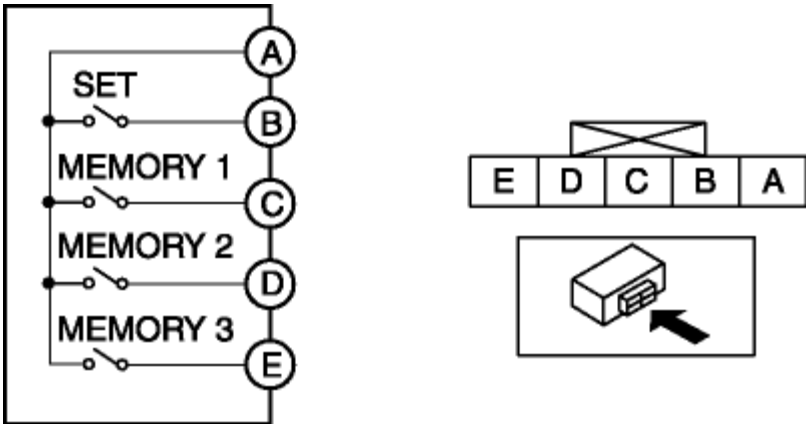

- If not as specified, replace the position memory switch. (See [POSITION MEMORY SWITCH REMOVAL/ INSTALLATION](#).)

○ — ○ : Continuity

Switch position	Terminal				
	A	B	C	D	E
Set switch on	○ — ○				
Memory switch 1 on	○ — ○		○		
Memory switch 2 on	○ — ○			○	
Memory switch 3 on	○ — ○				○
Off					