

2012 - Mazda6 - Body and Accessories


FRONT SEAT CUSHION TRIM REMOVAL/ INSTALLATION

WARNING:


- Handling a front seat (with built-in side air bag) improperly can accidentally operate (deploy) the air bag, which may seriously injure you. Read the service warnings before handling a front seat (with built-in side air bag). (See [AIR BAG SYSTEM SERVICE WARNINGS](#).)


CAUTION:

- After removing a front seat, do not operate the slider lever. If the slider lever is operated, the left and right slide positions will deviate, and the slide adjuster may be damaged after the front seat is installed.
 - Verify that there are no malfunctions in the sliding mechanism after installing a front seat.
 - When performing the procedure with a front seat removed from the vehicle, perform the procedure on a clean rag so as not to damage or soil the seat.
 - If any of the following work is performed, perform the seat weight sensor calibration using the M-MDS. (See [SEAT WEIGHT SENSOR CALIBRATION](#))
 - Replacement with a new seat weight sensor
 - Replacement with a new seat weight sensor control module
 - Replacement with new passenger-side seat par
 - Disassembly of the passenger-side seat
 - If any of the following work is performed, perform the seat weight sensor inspection using the M-MDS. (See [SEAT WEIGHT SENSOR INSPECTION](#))
 - Removal of the passenger-side seat
 - Loosening and retightening of passenger-side seat fixing bolts
1. Disconnect the negative battery cable and wait **1 min or more**.
 2. Remove the front seat. (See [FRONT SEAT REMOVAL/ INSTALLATION](#).)
 3. Remove the front seat side cover. (See [FRONT SEAT SIDE COVER REMOVAL/ INSTALLATION](#).)
 4. Remove the hook A in the direction of the arrow shown in the figure.

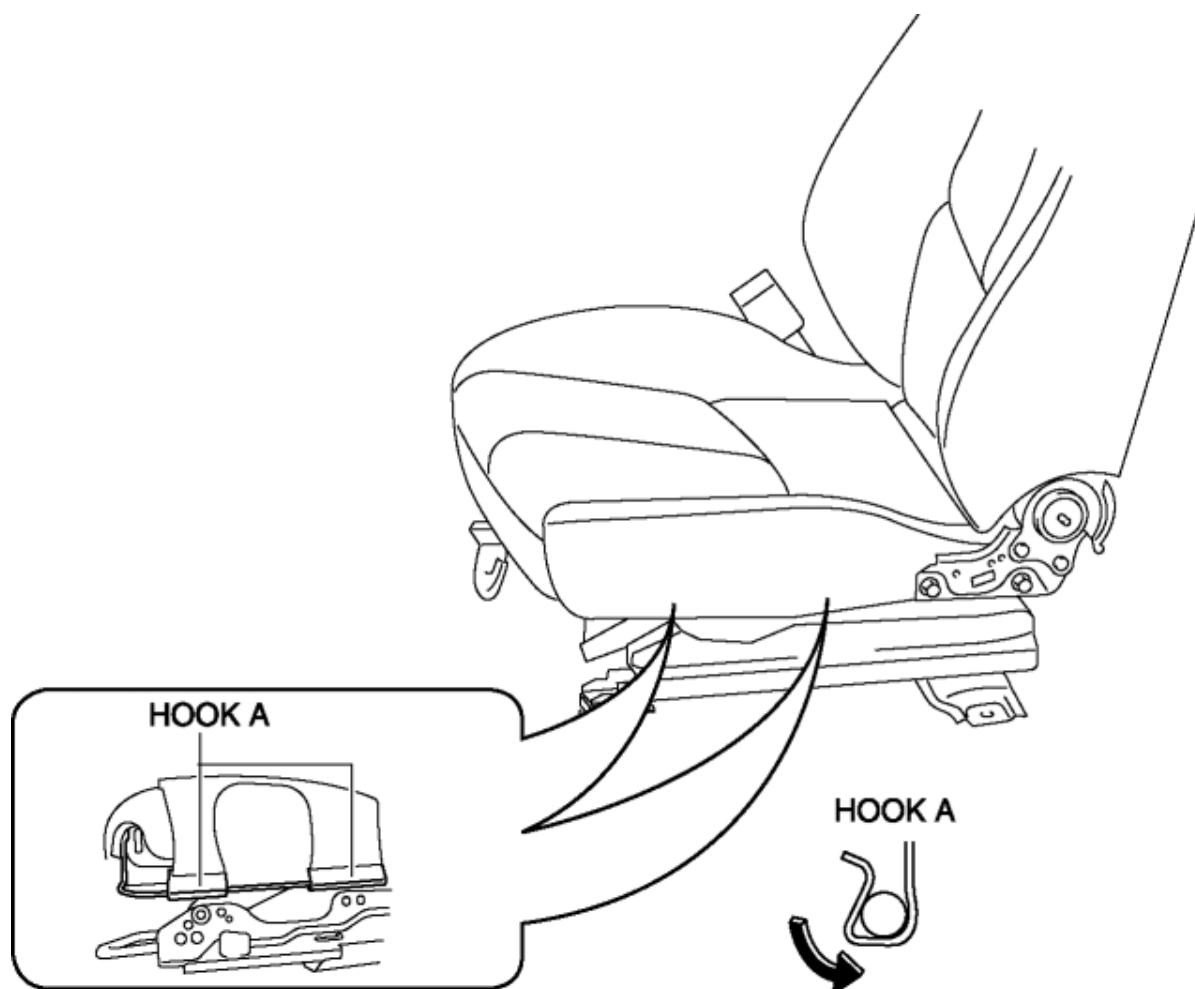


5. Detach hook B and C in the direction of the arrow shown in the figure.

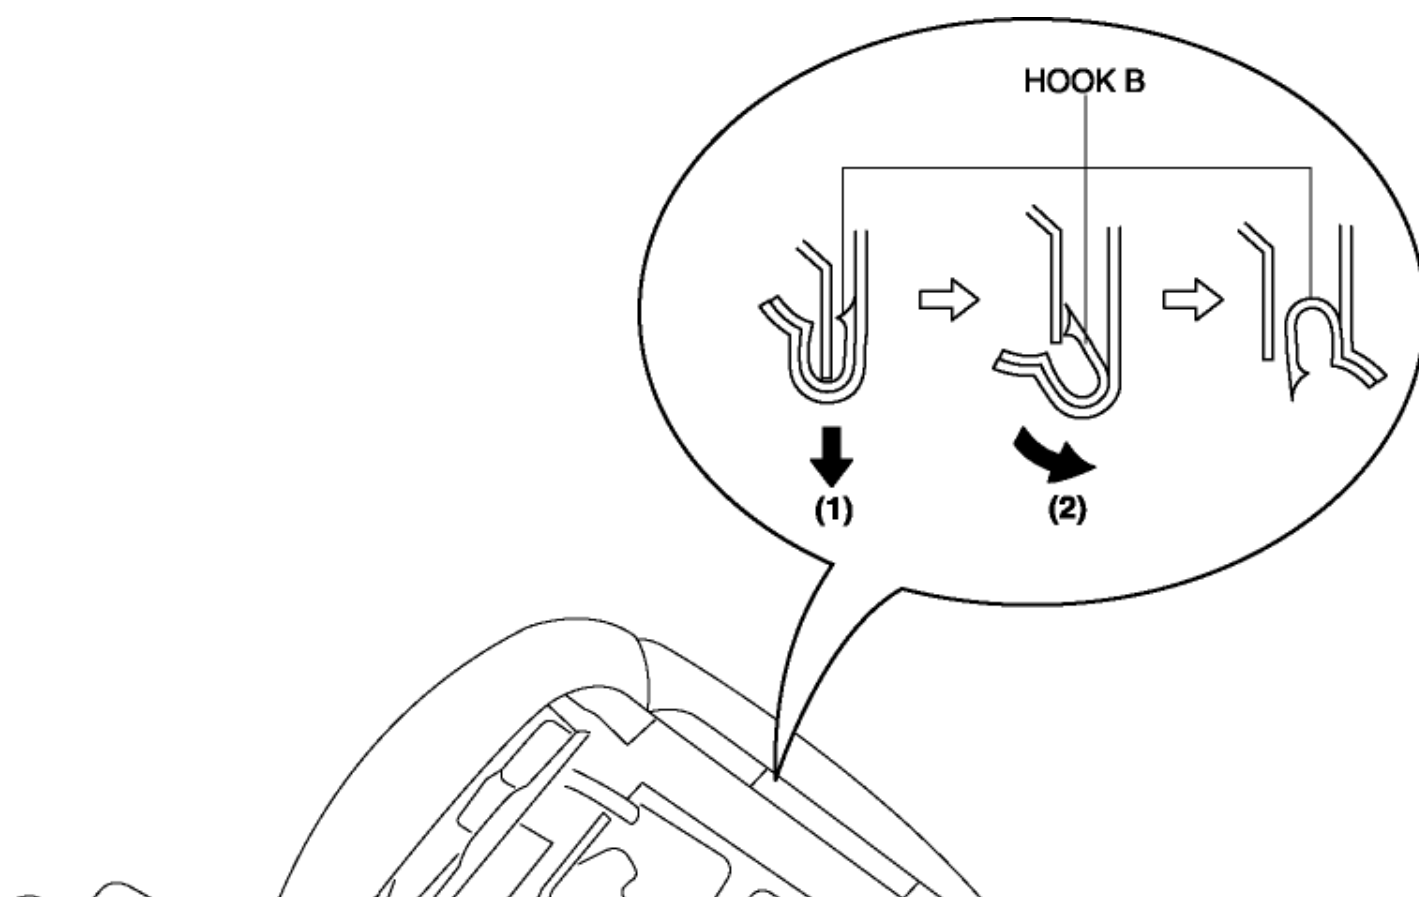


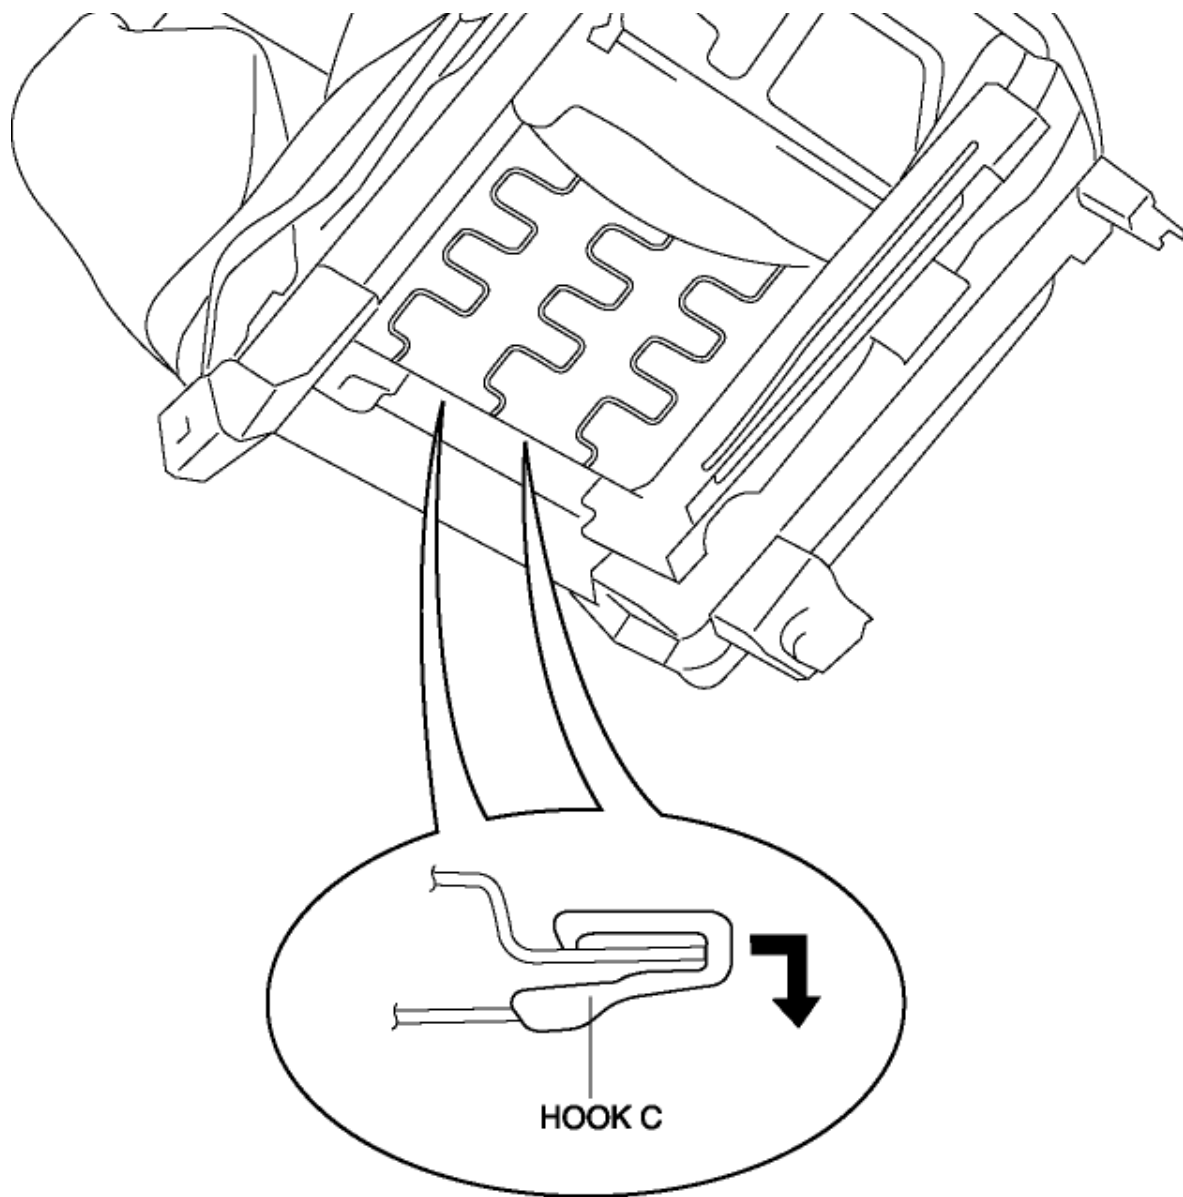

6. Pull the front seat cushion in the direction of the arrow shown in the figure and remove it while remove the hook D.

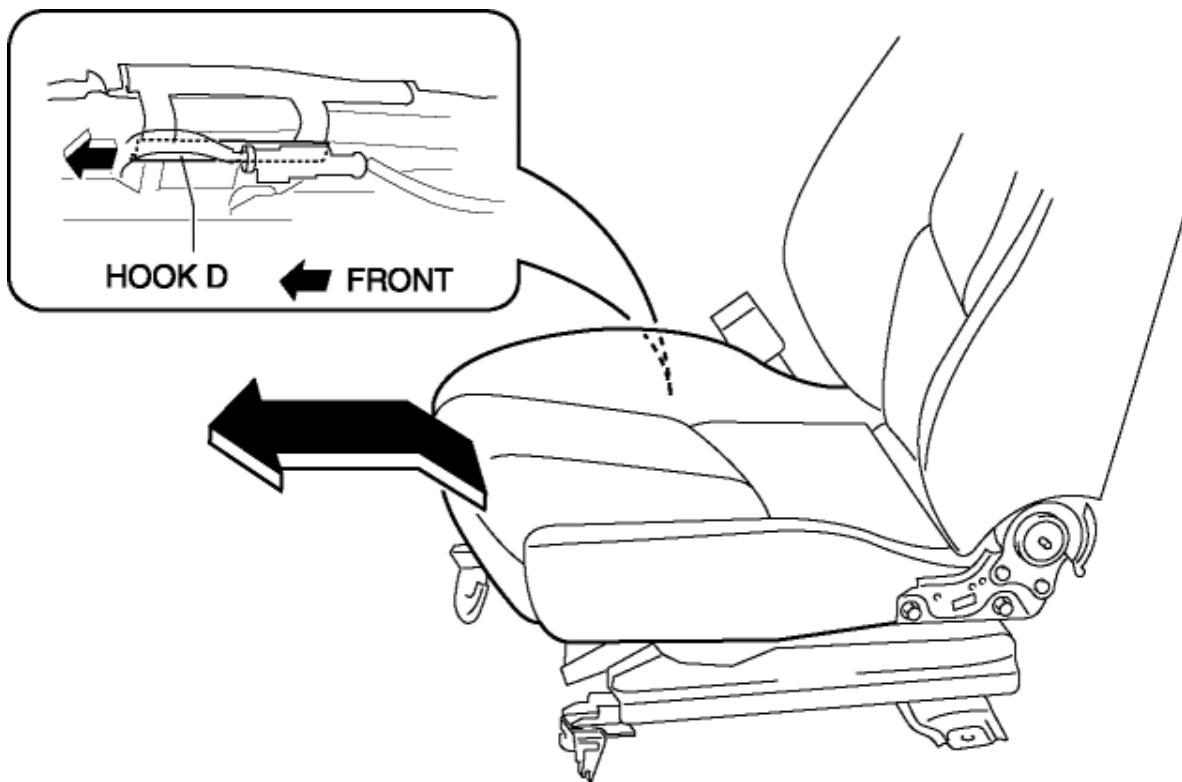

7. Remove rings C in the order of (3), (4) as shown in the figure, then remove the front seat cushion trim from the front seat cushion pad in the direction of the arrow shown in the figure.

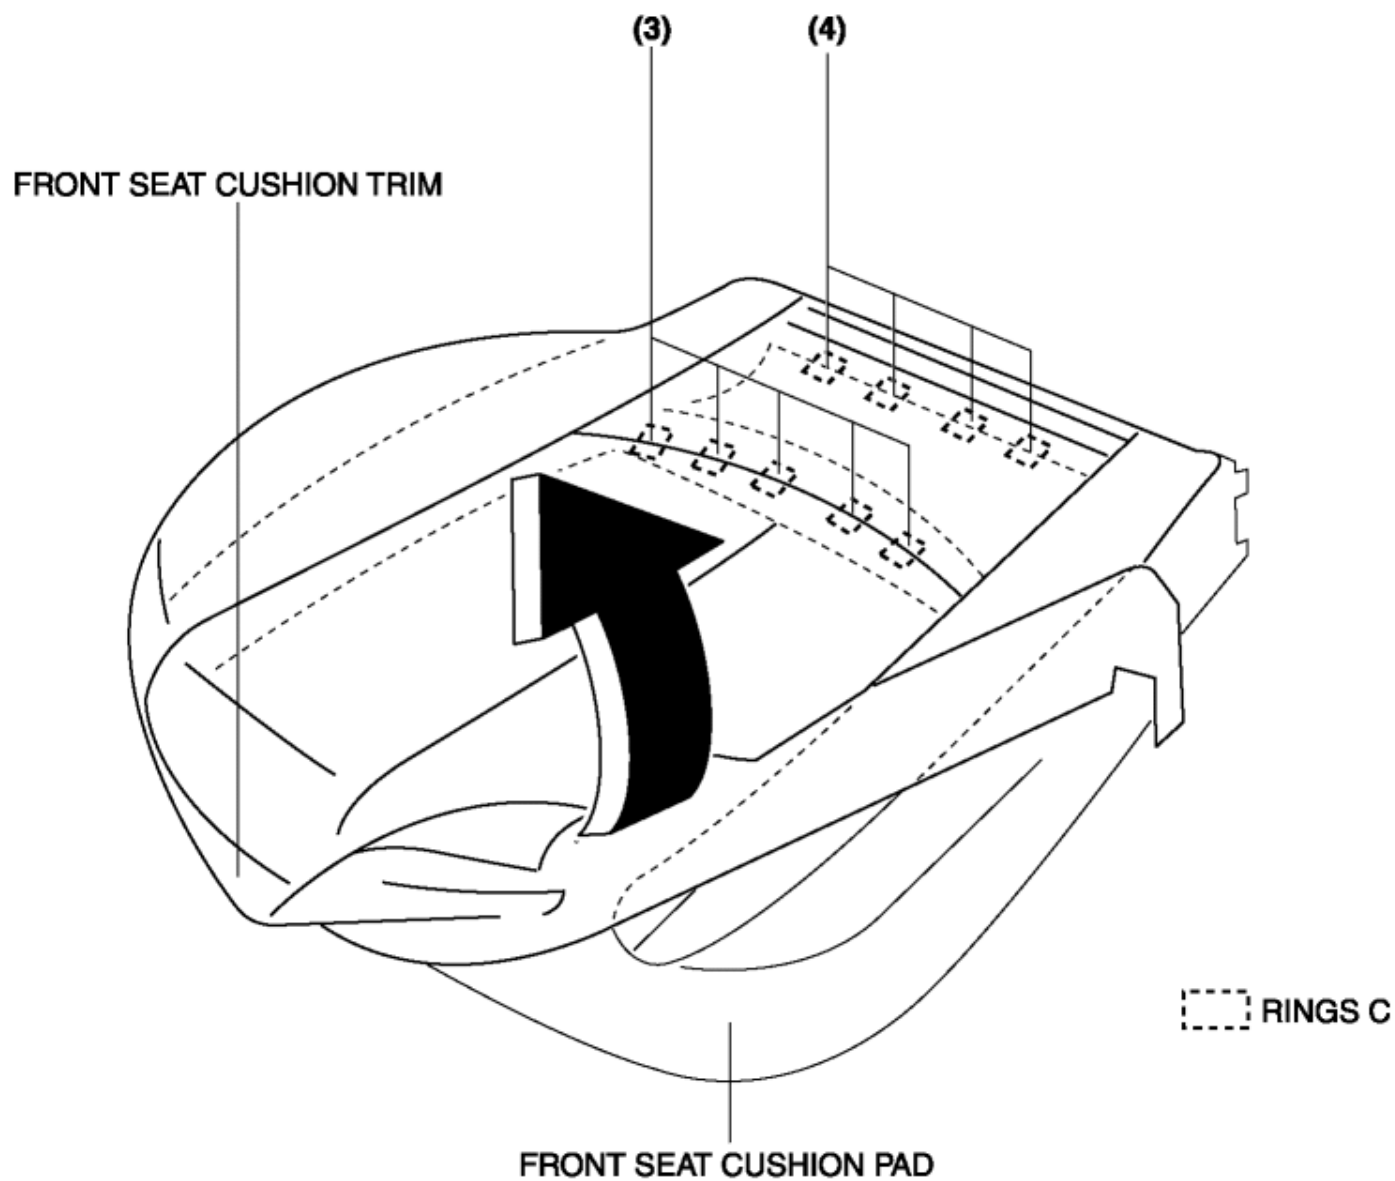

8. Remove the front seat cushion trim.
9. Install in the reverse order of removal.

[< Previous](#) [Next >](#)

[Back to Top](#)

2012 - Mazda6 - Body and Accessories


FRONT SEAT CUSHION TRIM REMOVAL/ INSTALLATION

WARNING:


- Handling a front seat (with built-in side air bag) improperly can accidentally operate (deploy) the air bag, which may seriously injure you. Read the service warnings before handling a front seat (with built-in side air bag). (See [AIR BAG SYSTEM SERVICE WARNINGS](#).)


CAUTION:

- After removing a front seat, do not operate the slider lever. If the slider lever is operated, the left and right slide positions will deviate, and the slide adjuster may be damaged after the front seat is installed.
 - Verify that there are no malfunctions in the sliding mechanism after installing a front seat.
 - When performing the procedure with a front seat removed from the vehicle, perform the procedure on a clean rag so as not to damage or soil the seat.
 - If any of the following work is performed, perform the seat weight sensor calibration using the M-MDS. (See [SEAT WEIGHT SENSOR CALIBRATION](#))
 - Replacement with a new seat weight sensor
 - Replacement with a new seat weight sensor control module
 - Replacement with new passenger-side seat par
 - Disassembly of the passenger-side seat
 - If any of the following work is performed, perform the seat weight sensor inspection using the M-MDS. (See [SEAT WEIGHT SENSOR INSPECTION](#))
 - Removal of the passenger-side seat
 - Loosening and retightening of passenger-side seat fixing bolts
1. Disconnect the negative battery cable and wait **1 min or more**.
 2. Remove the front seat. (See [FRONT SEAT REMOVAL/ INSTALLATION](#).)
 3. Remove the front seat side cover. (See [FRONT SEAT SIDE COVER REMOVAL/ INSTALLATION](#).)
 4. Remove the hook A in the direction of the arrow shown in the figure.

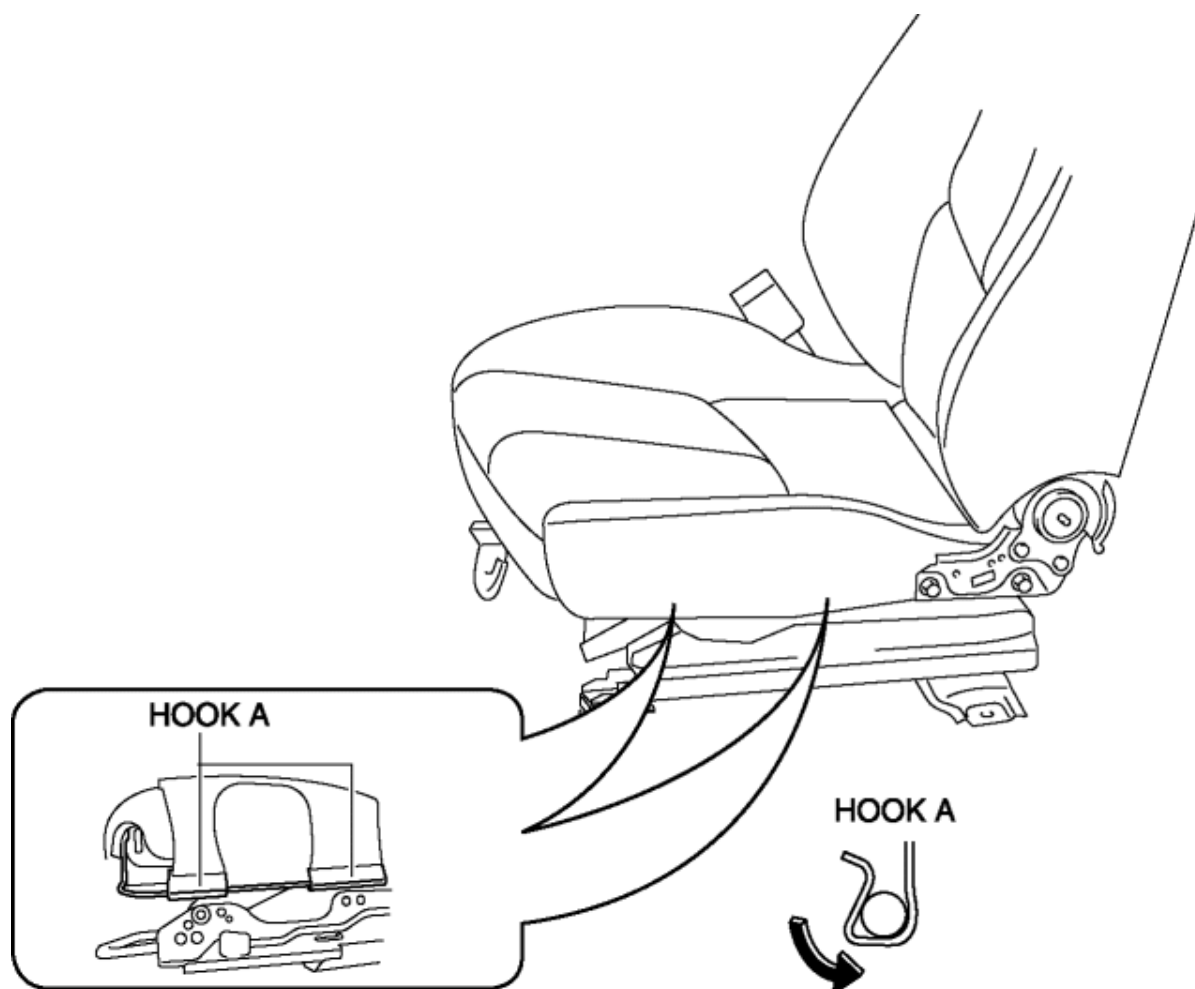


5. Detach hook B and C in the direction of the arrow shown in the figure.

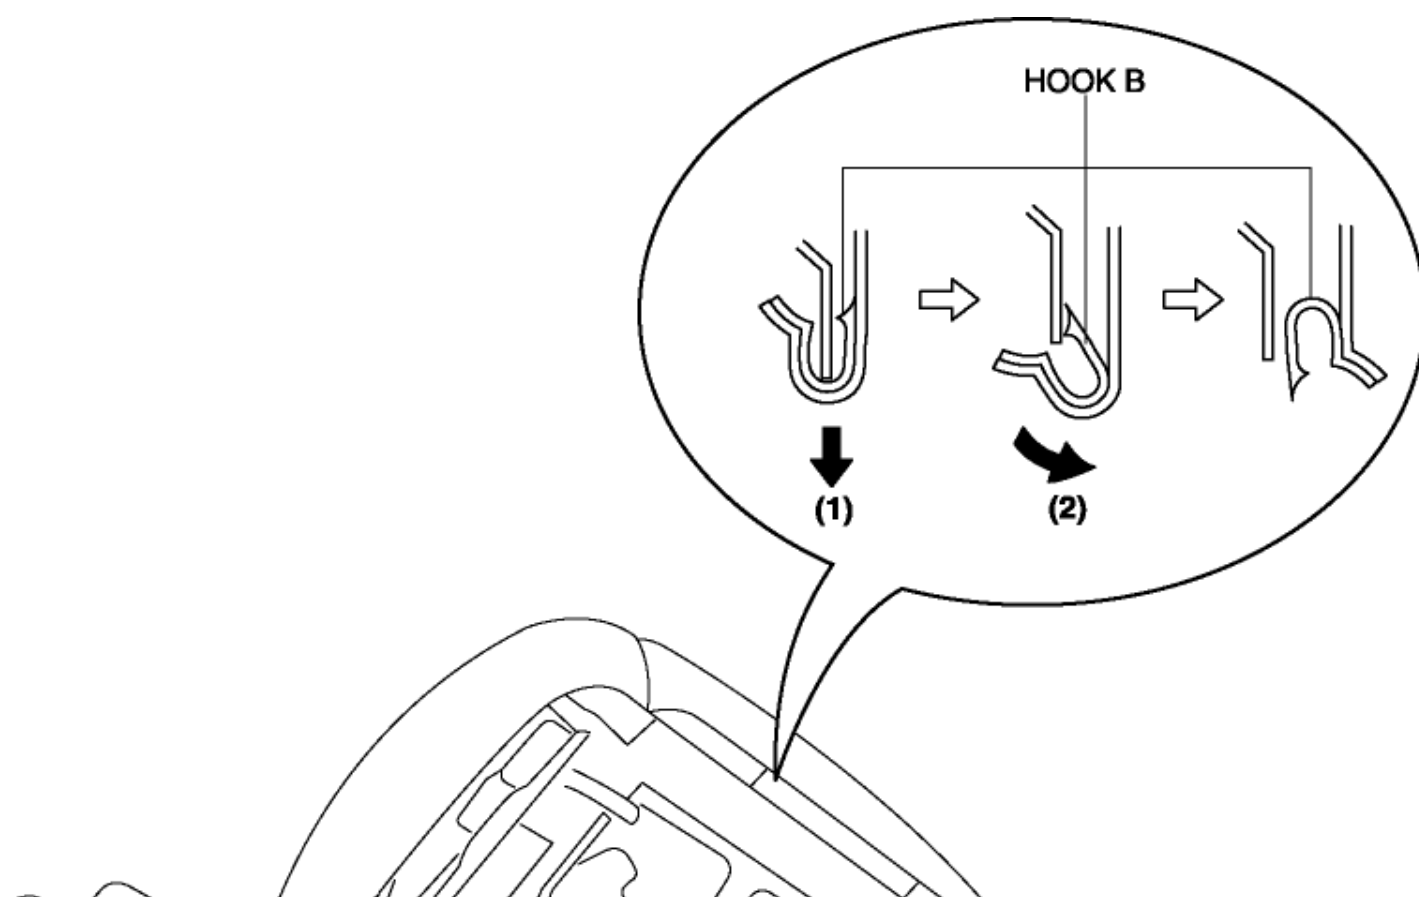


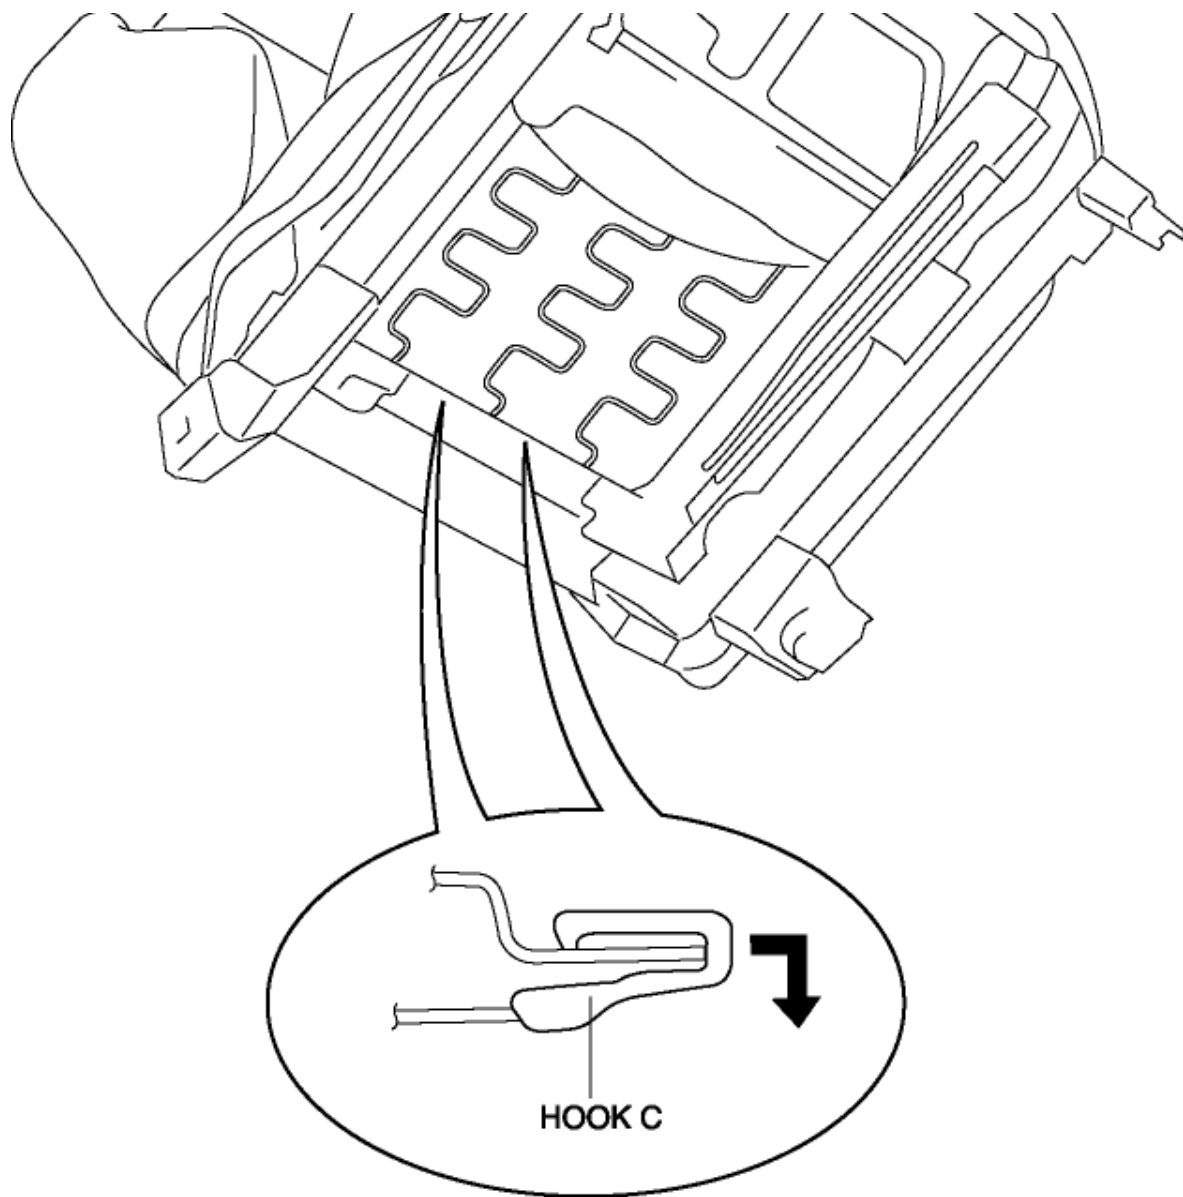

6. Pull the front seat cushion in the direction of the arrow shown in the figure and remove it while remove the hook D.

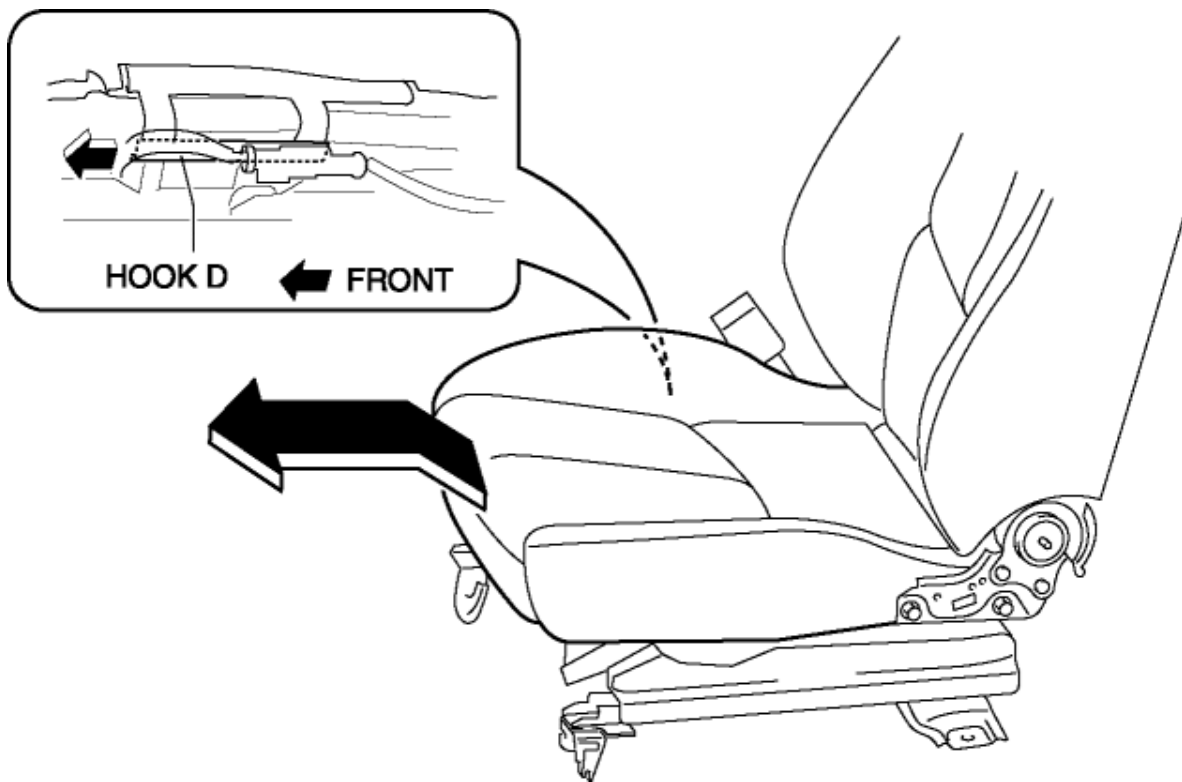

7. Remove rings C in the order of (3), (4) as shown in the figure, then remove the front seat cushion trim from the front seat cushion pad in the direction of the arrow shown in the figure.

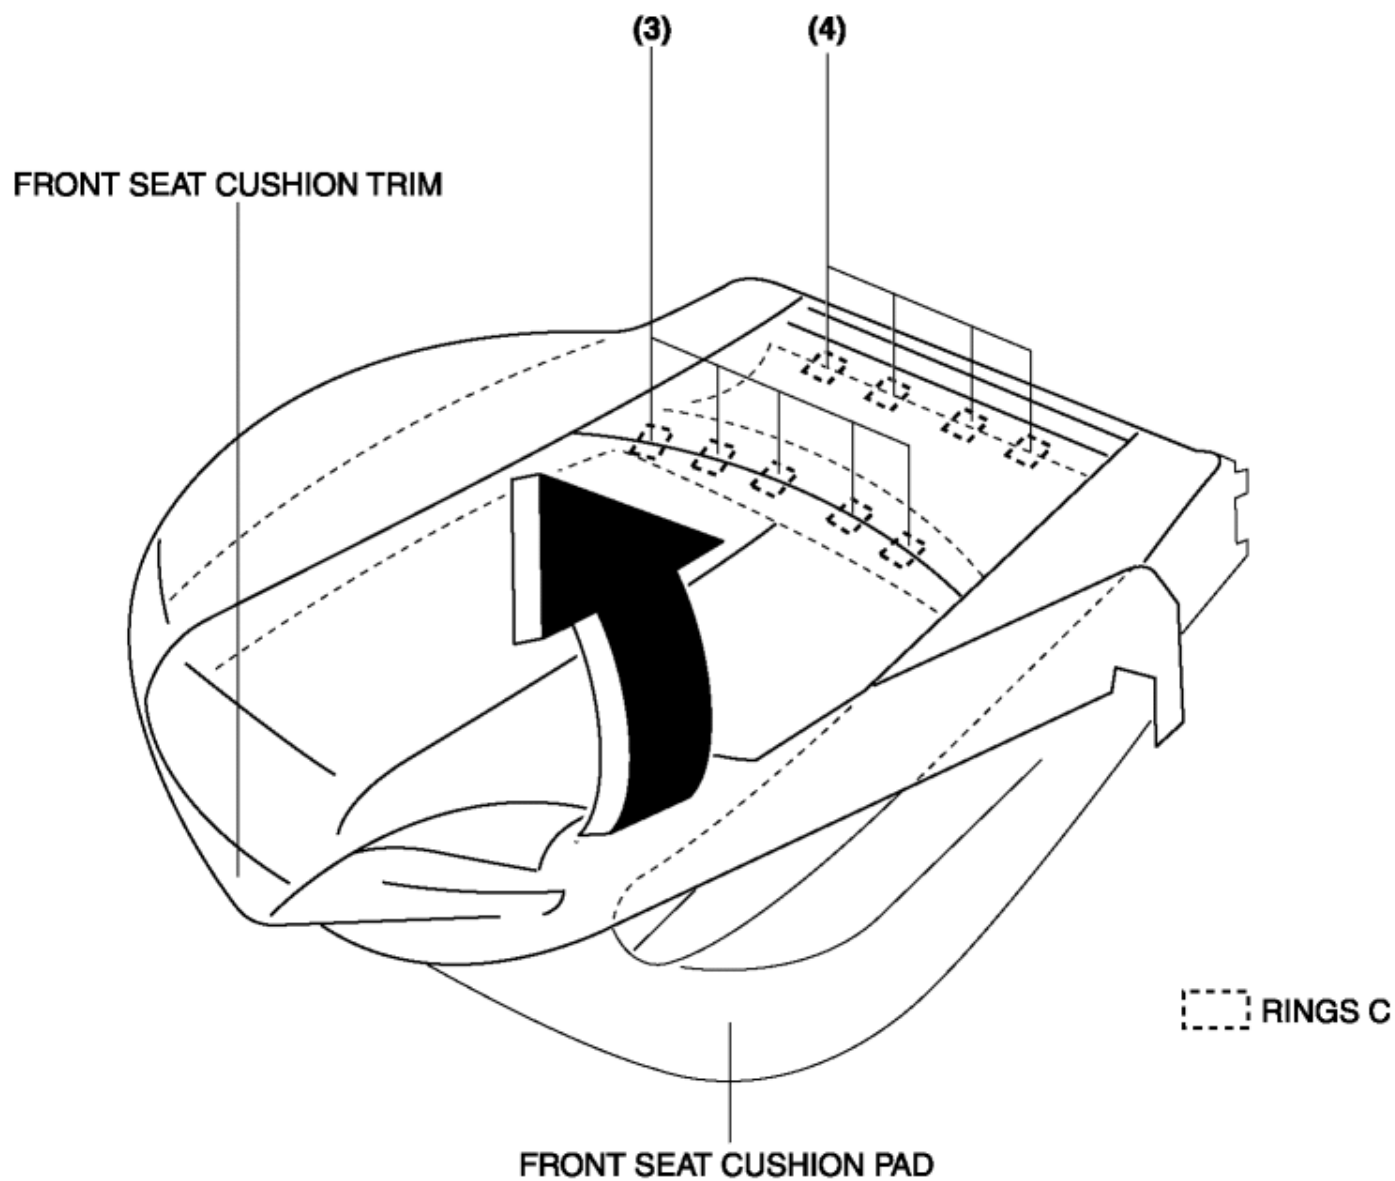

8. Remove the front seat cushion trim.
9. Install in the reverse order of removal.

[< Previous](#) [Next >](#)

[Back to Top](#)