


2012 - Mazda6 - Body and Accessories

FRONT SEAT SIDE COVER REMOVAL/ INSTALLATION


Vehicles With Power Seat System

Driver-side


1. Disconnect the negative battery cable.
2. Pull the power seat switch knobs in the direction of arrow, while remove the hook.

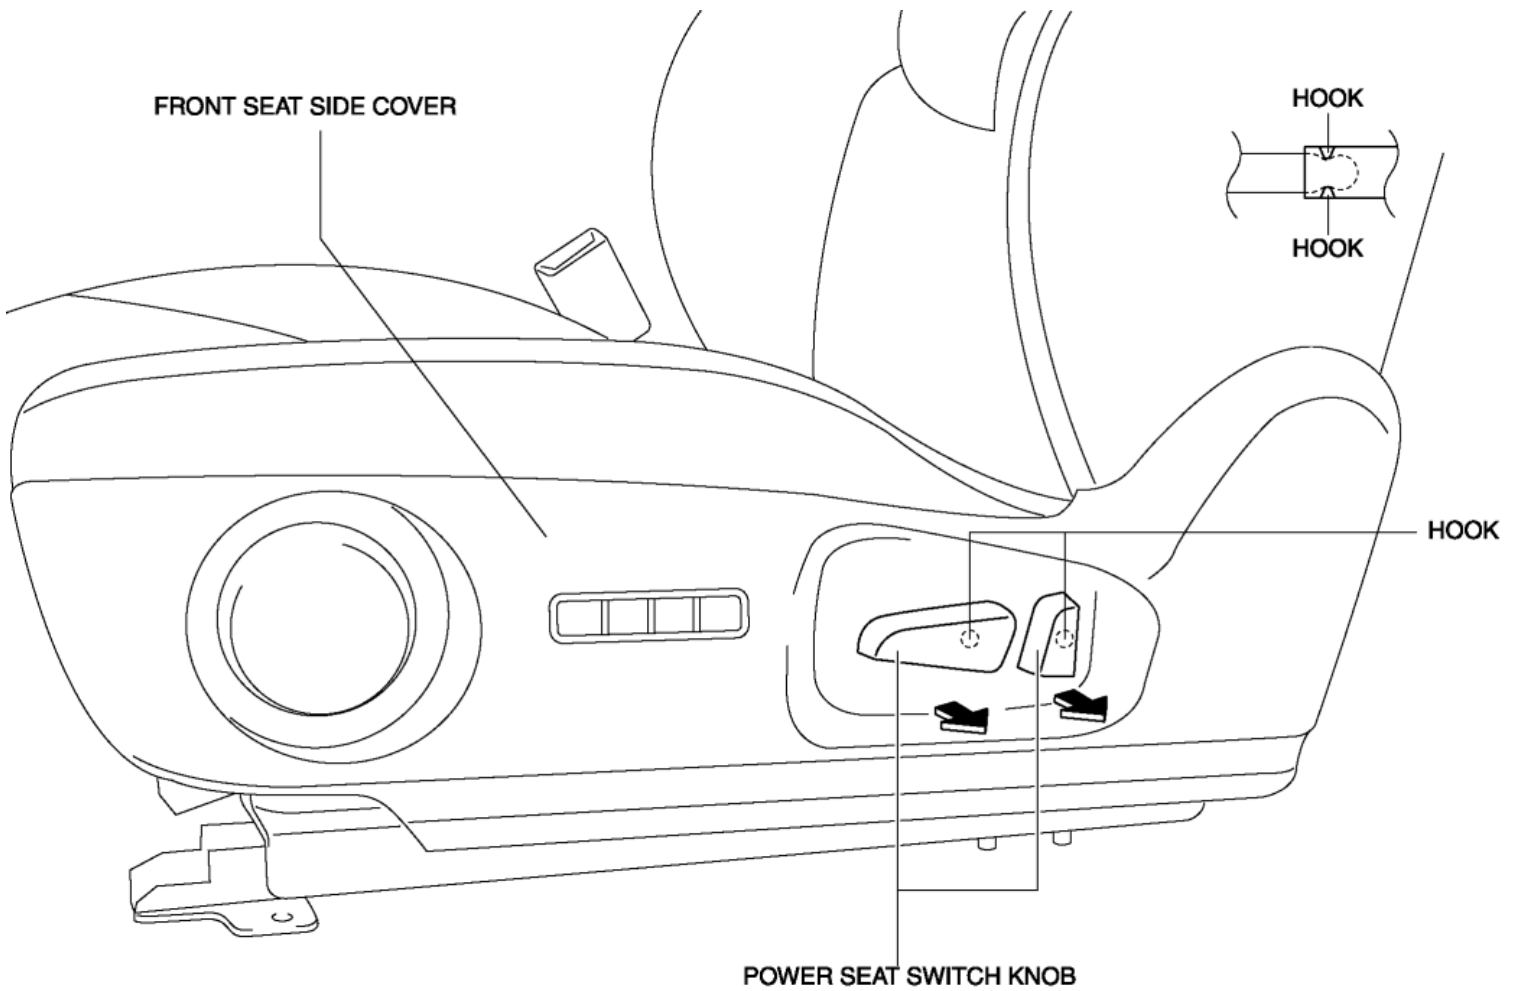


3. Using a cloth, remove the lumbar support dial installation clip and remove the lumbar support dial.

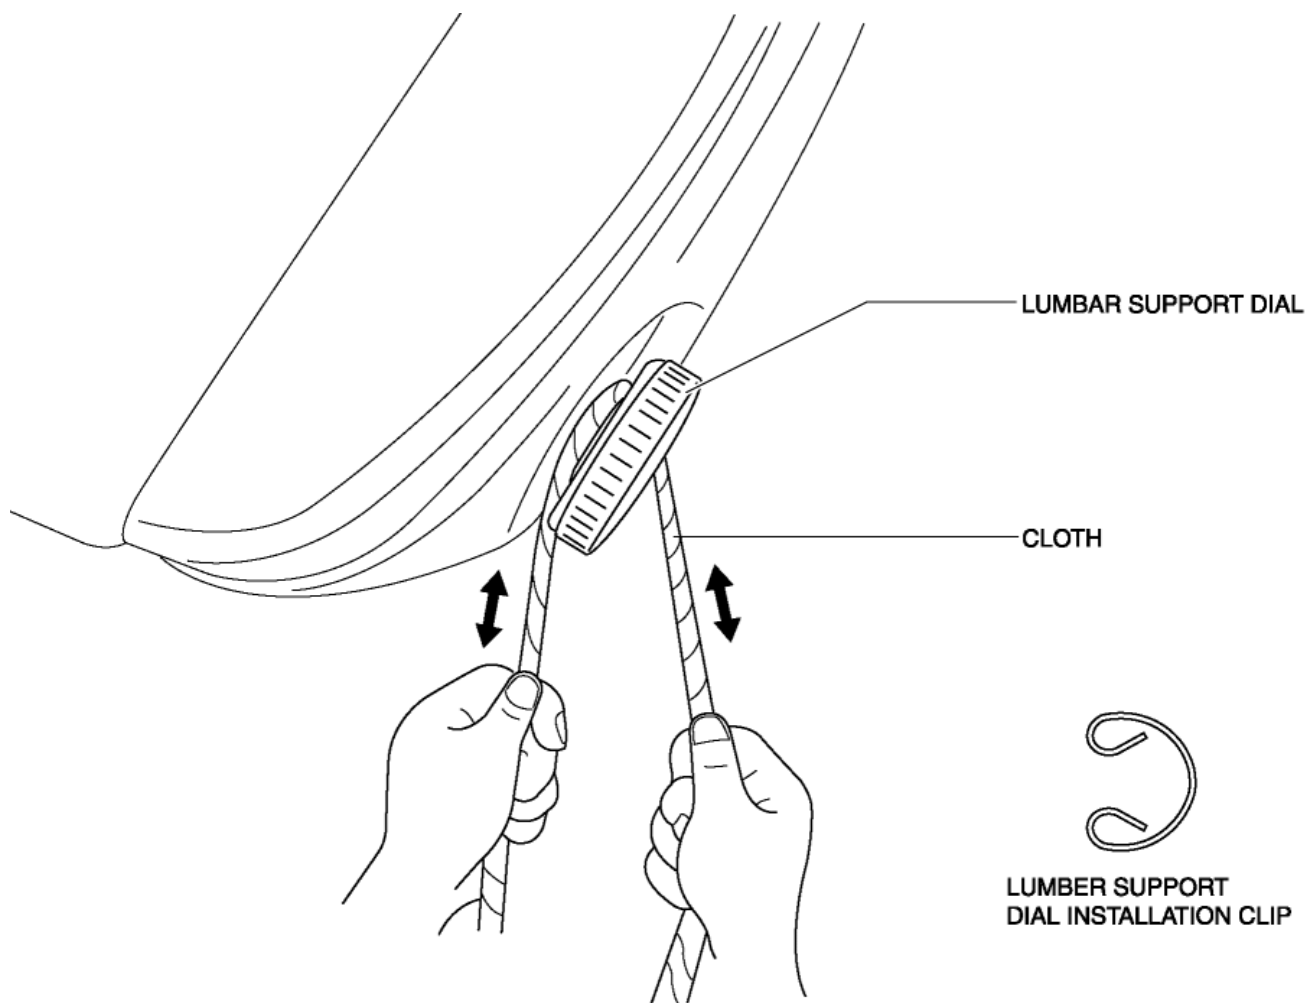

4. Pull the front seat side cover in the order of (1), (2) shown in the figure to disengage the hooks and clips.

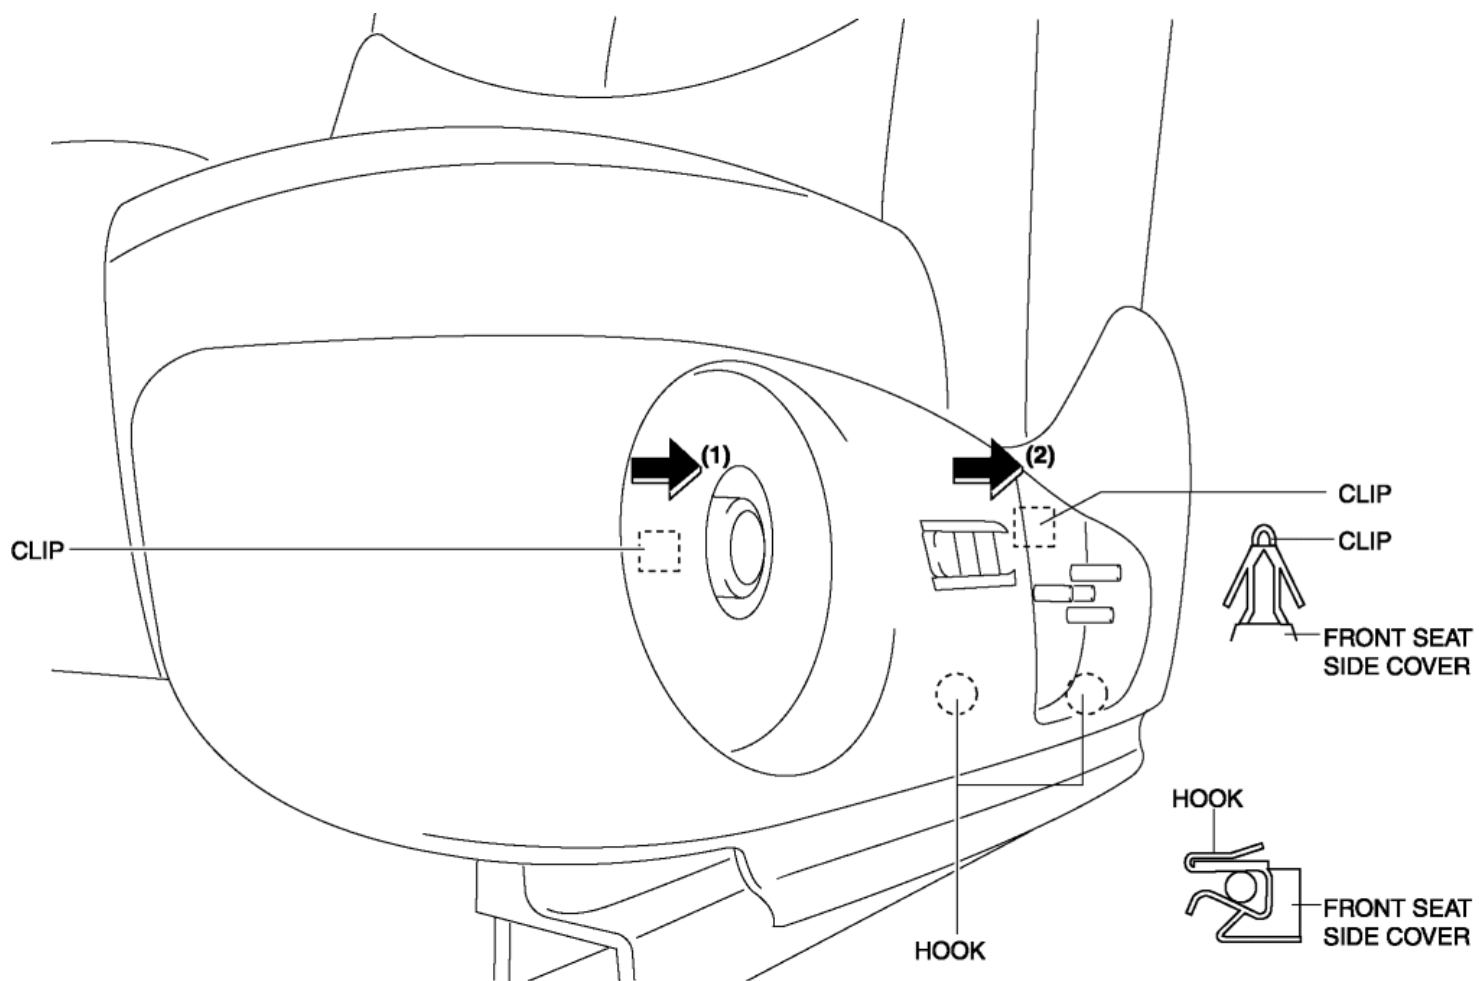


5. Pull the front seat side cover in the direction of arrow, while remove the clip.

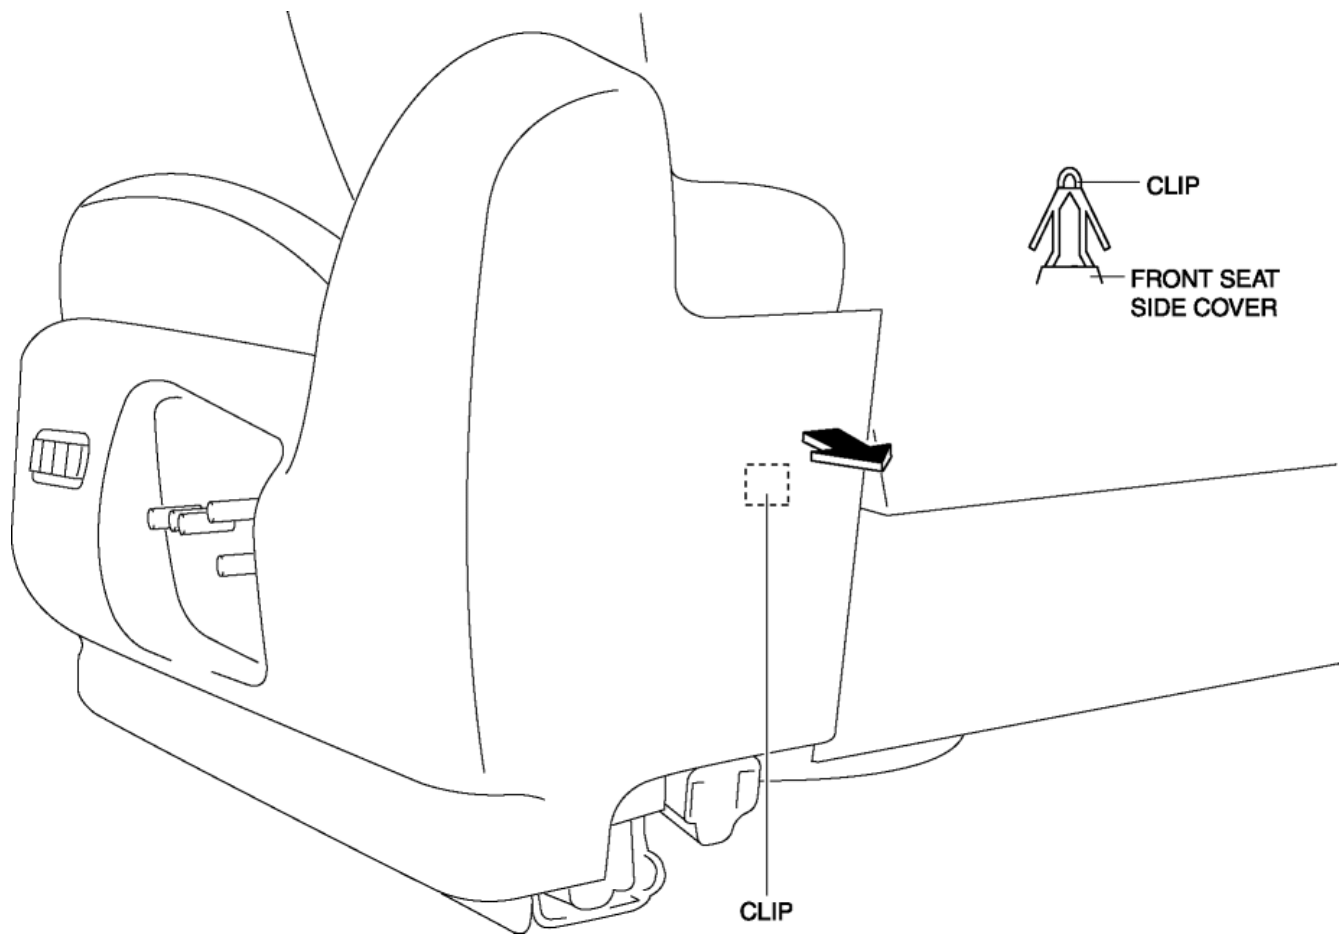


6. Remove the front seat side cover.
7. Disconnect the seat position memory switch connector.
8. Install in the reverse order of removal.

Passenger-side


1. Disconnect the negative battery cable.
2. Remove the belt anchor cover. (See [FRONT SEAT BELT REMOVAL/ INSTALLATION.](#))
3. Remove the lower anchor of the front seat belt installation bolt. (See [FRONT SEAT BELT REMOVAL/ INSTALLATION.](#))
4. Remove the power seat switch knobs in the direction of arrow, while remove the hooks.

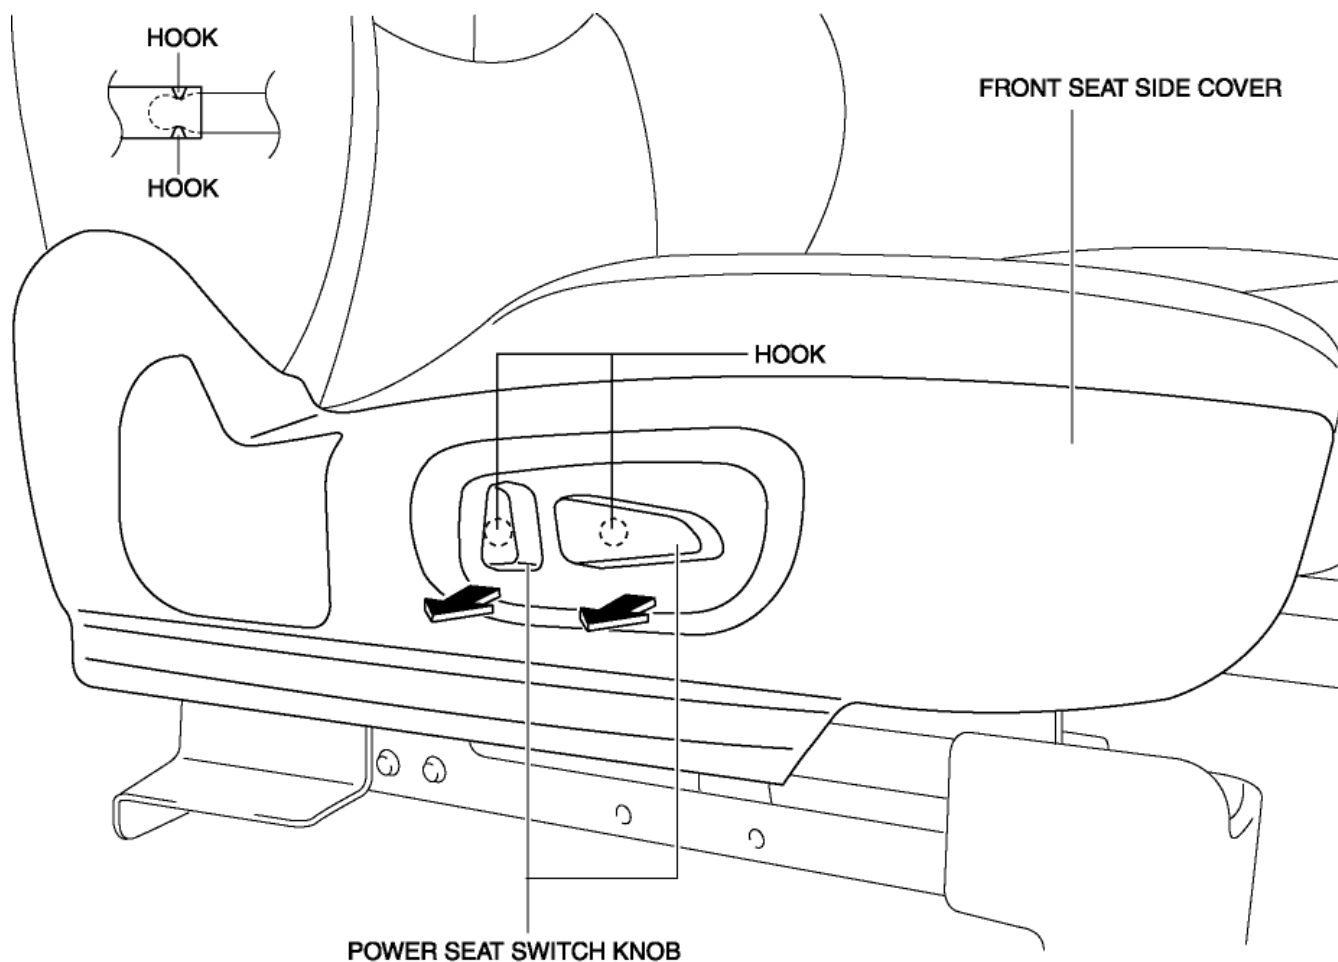

5. Pull the front seat side cover in the order of (1), (2) shown in the figure to disengage the hook and clips.

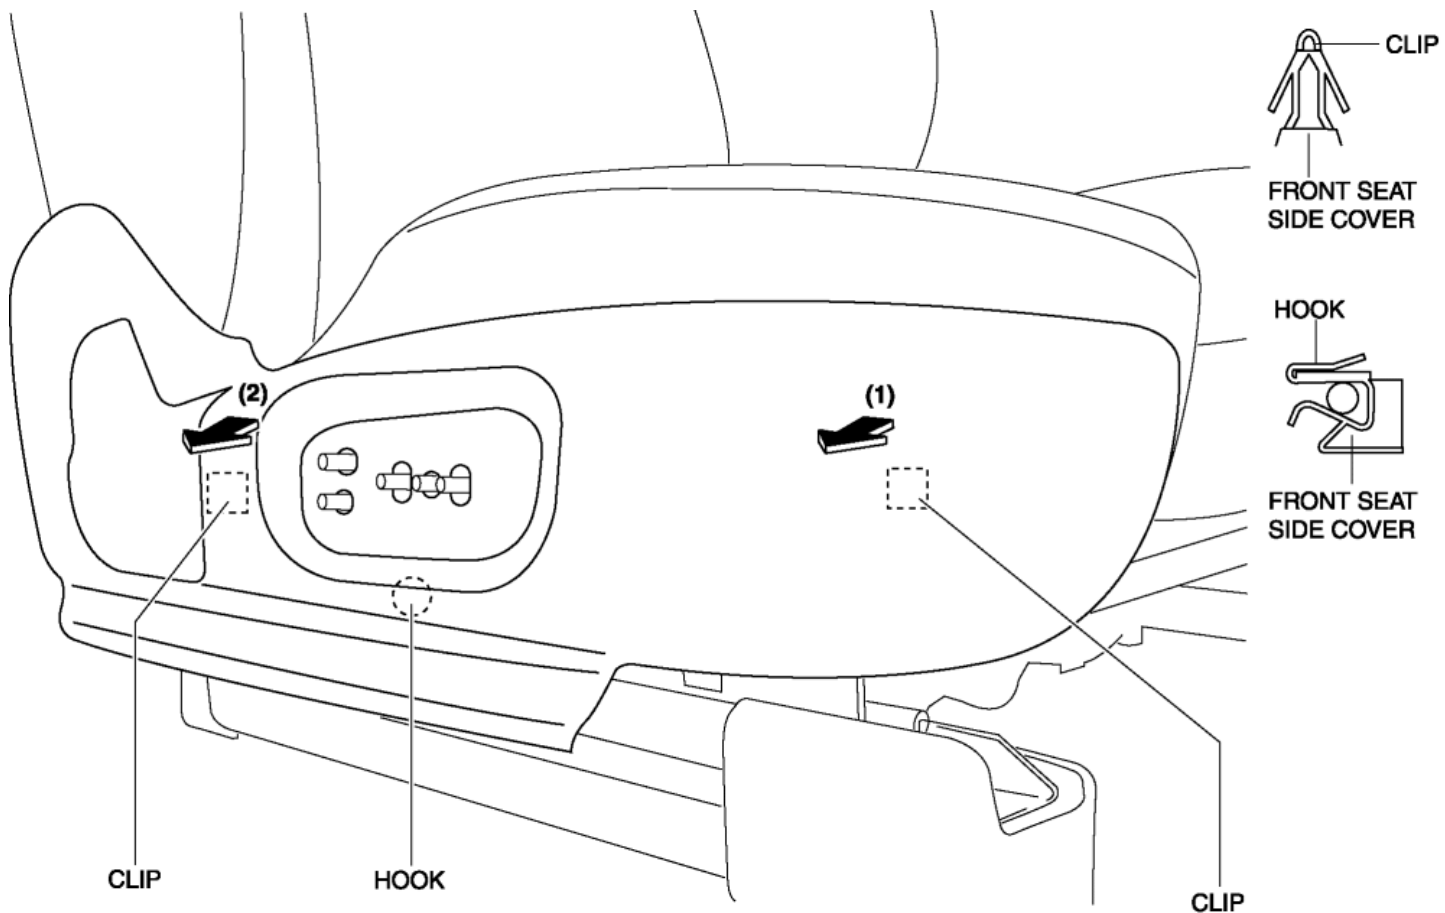

6. Pull the front seat side cover in the direction of arrow, while remove the clip.

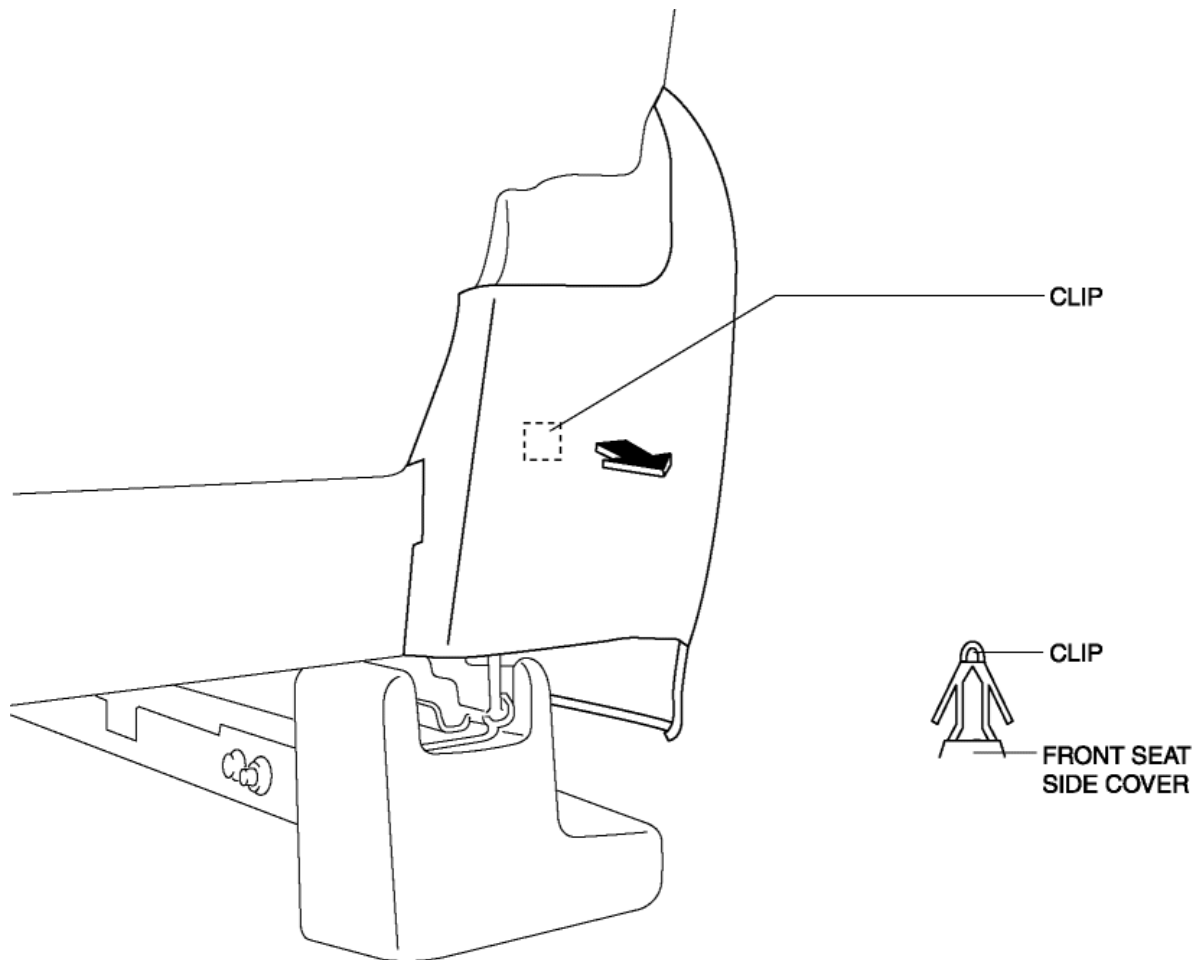

7. Remove the front seat side cover.


8. Disconnect the power seat switch connector.

9. Install in the reverse order of removal.

Vehicles Without Power Seat System


Driver-side

1. Operate the lift lever in the direction of arrow (1) shown in the figure.

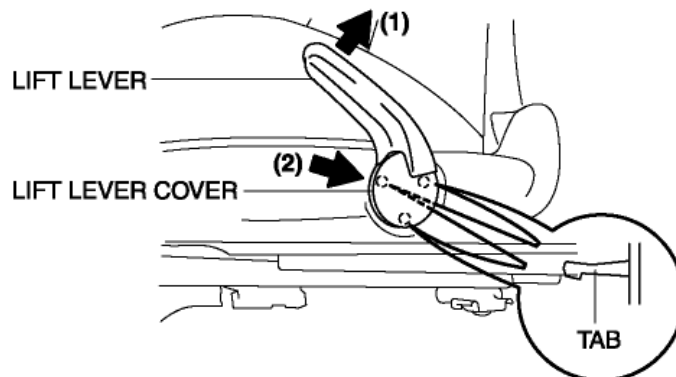


2. Insert a fastener remover from the position of arrow (2) shown in the figure, and remove the lift lever cover by disengaging the tabs.


3. Remove the screws, then remove the lift lever in the direction of the arrow.

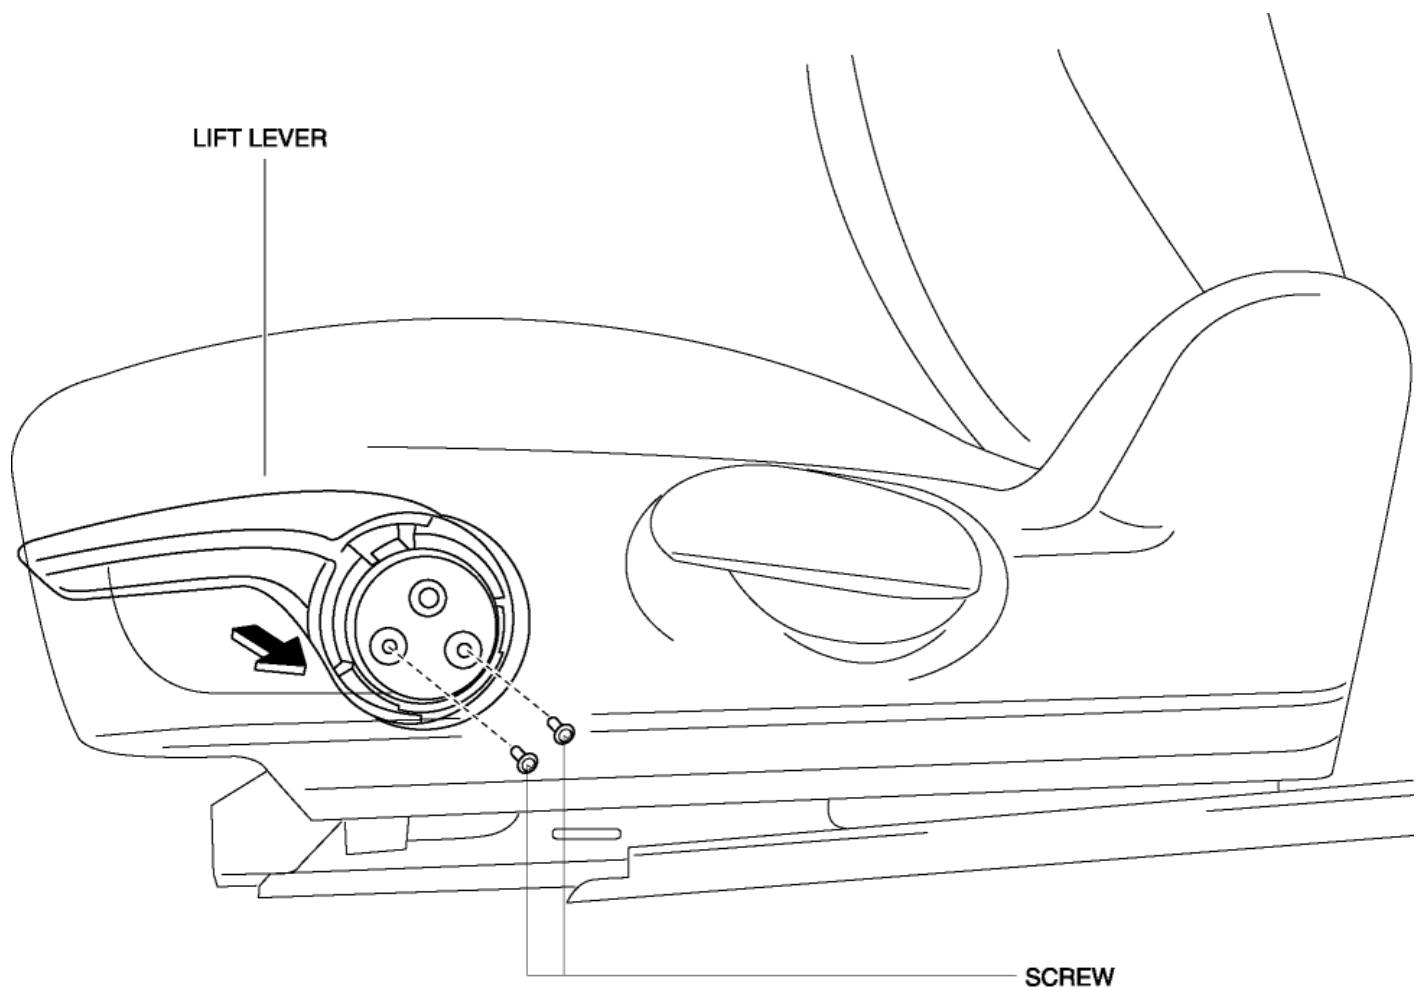


4. Using a cloth, remove the recliner lever installation clip and remove the recliner lever.

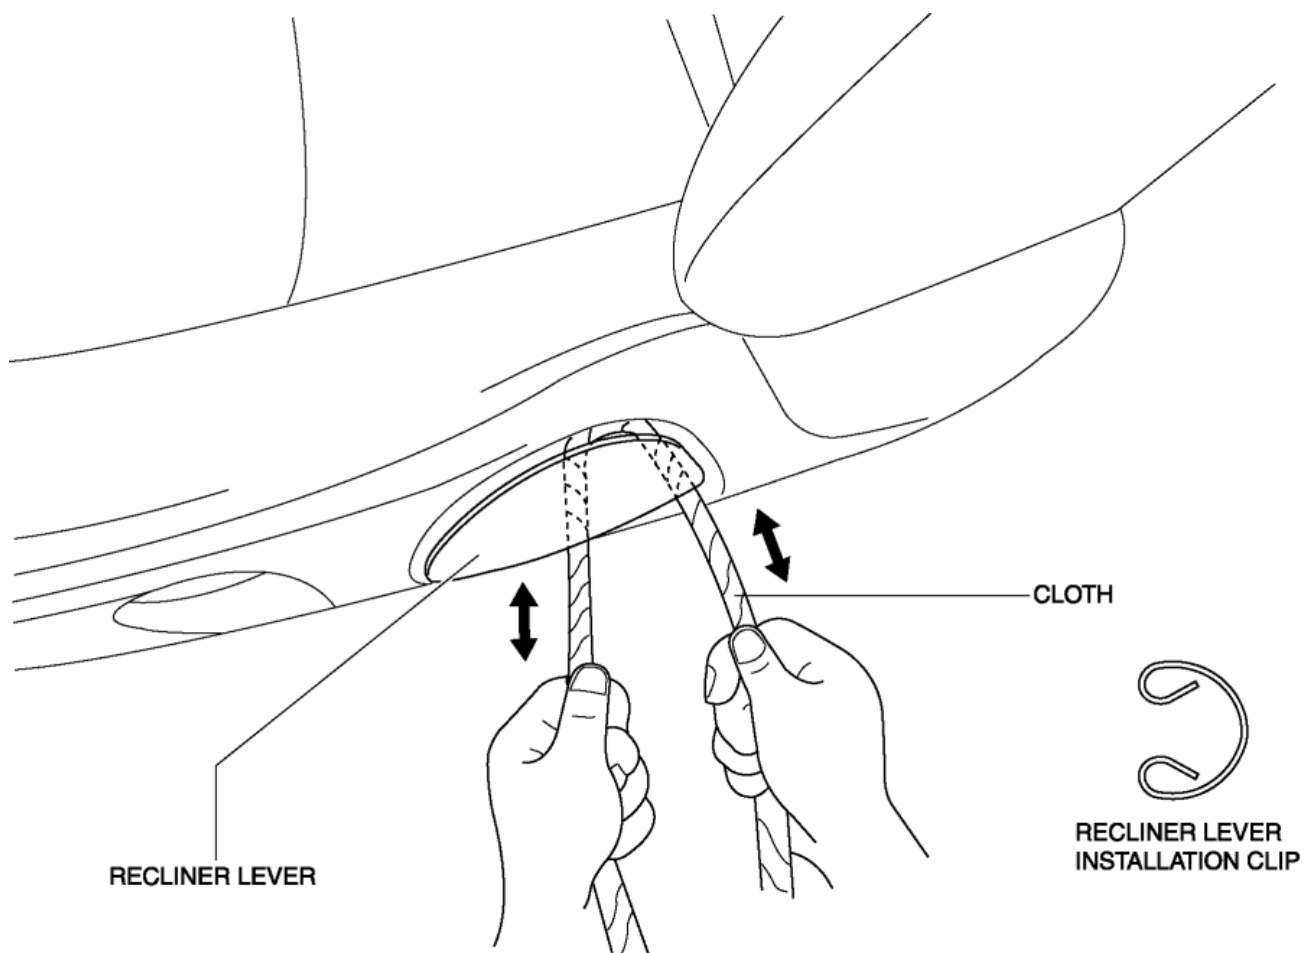

5. Pull the front seat side cover in the order of (1), (2) shown in the figure to disengage the hooks and clips.

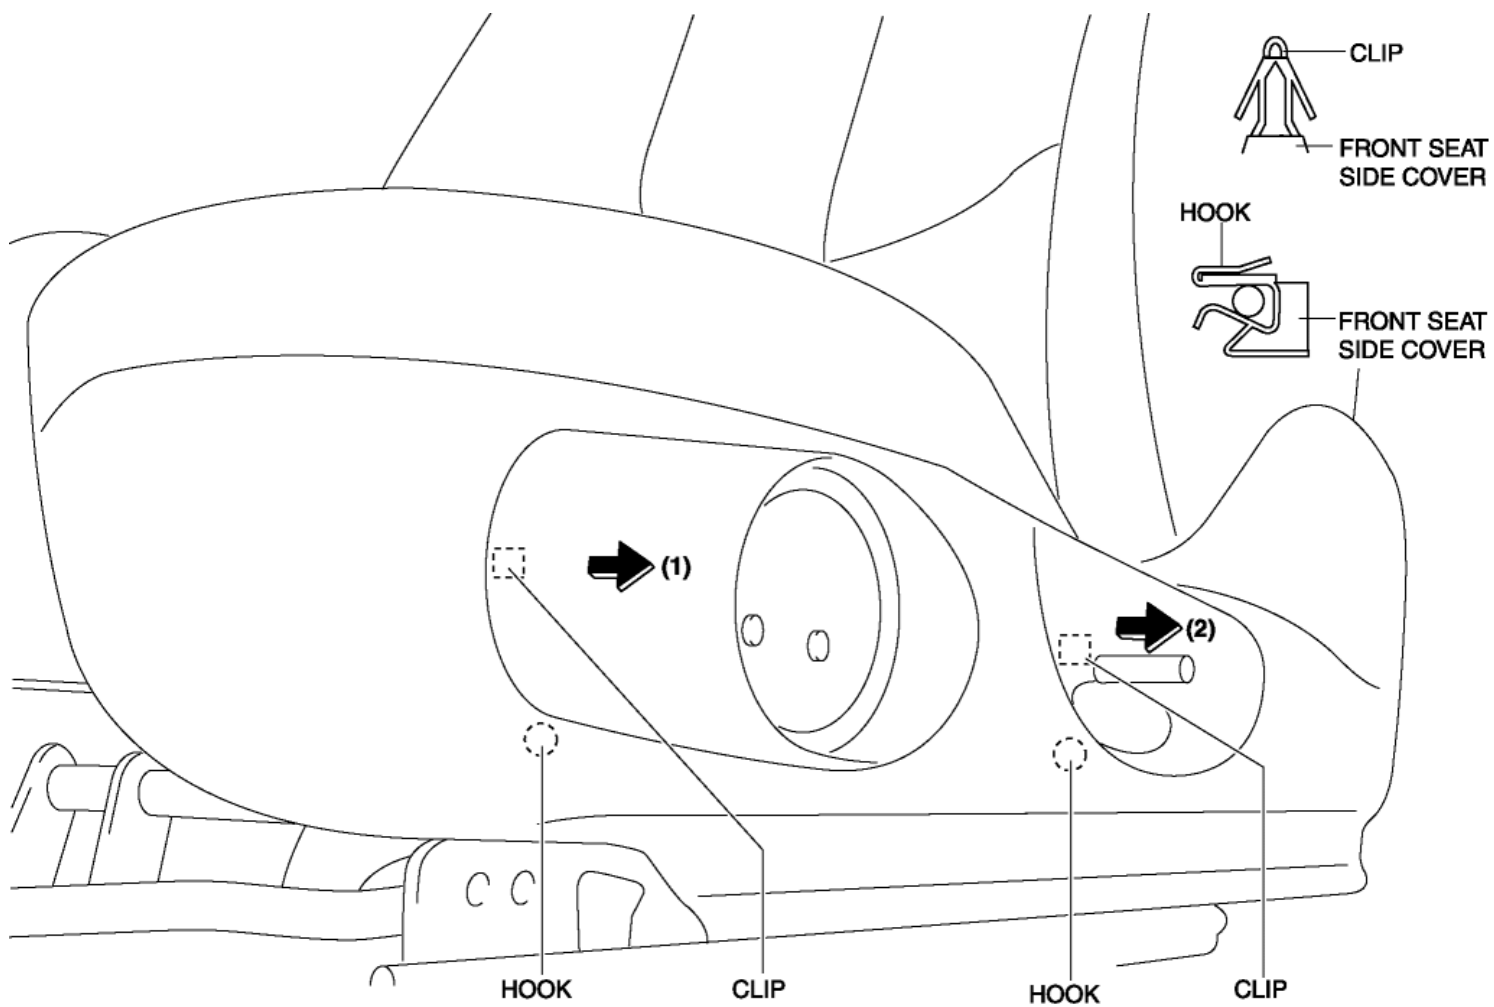


6. Pull the front seat side cover in the direction of arrow, while remove the clip.

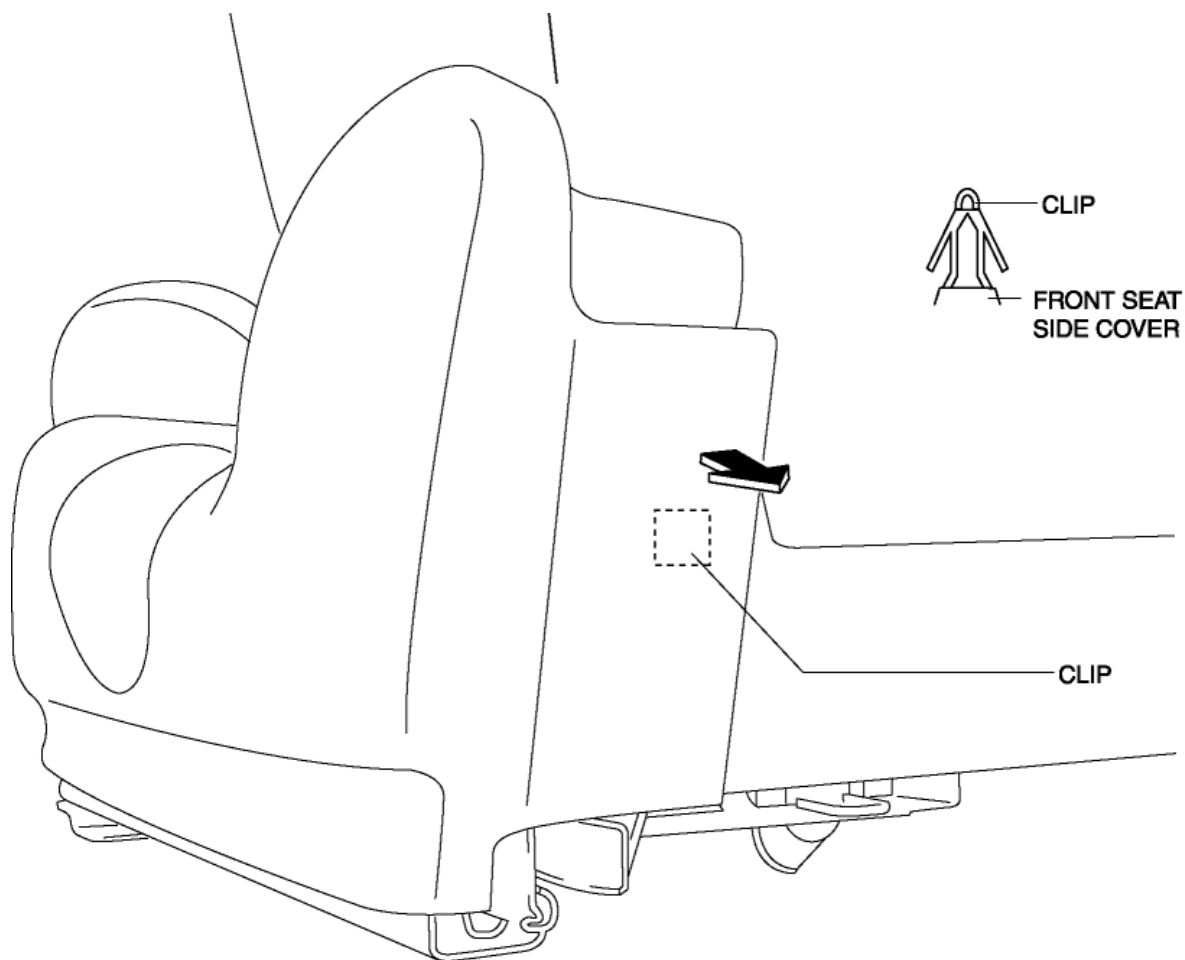


7. Remove the front seat side cover.
8. Install in the reverse order of removal.

Passenger-side


1. Remove the belt anchor cover. (See [FRONT SEAT BELT REMOVAL/ INSTALLATION.](#))
2. Remove the lower anchor of the front seat belt installation bolt. (See [FRONT SEAT BELT REMOVAL/ INSTALLATION.](#))
3. Using a cloth, remove the recliner lever installation clip and remove the recliner lever.

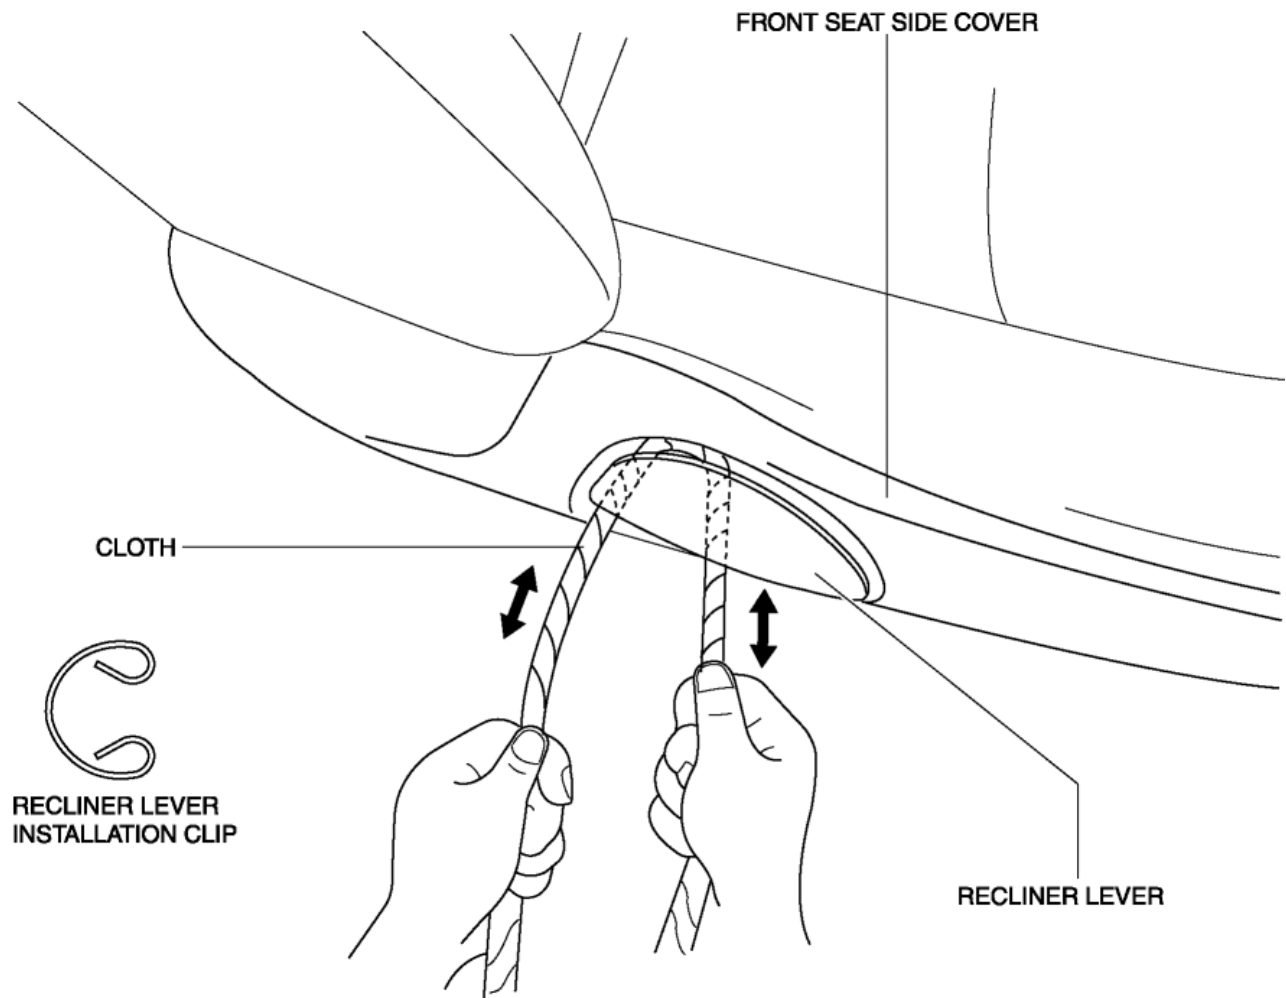

4. Pull the front seat side cover in the order of (1), (2) shown in the figure to disengage the hook and clips.

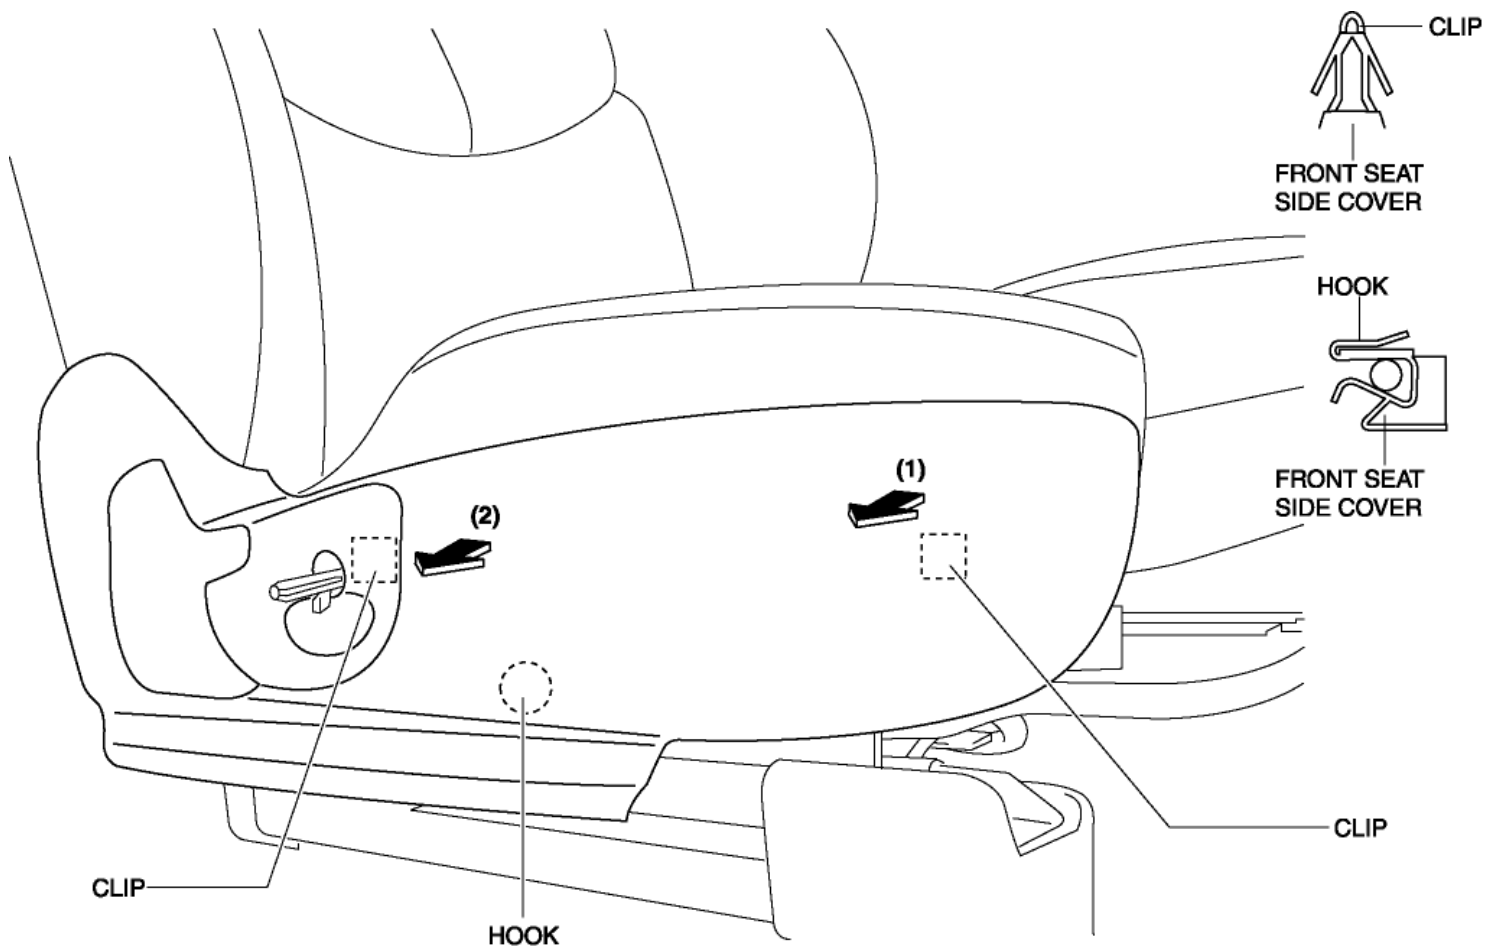

5. Pull the front seat side cover in the direction of arrow, while remove the clip.

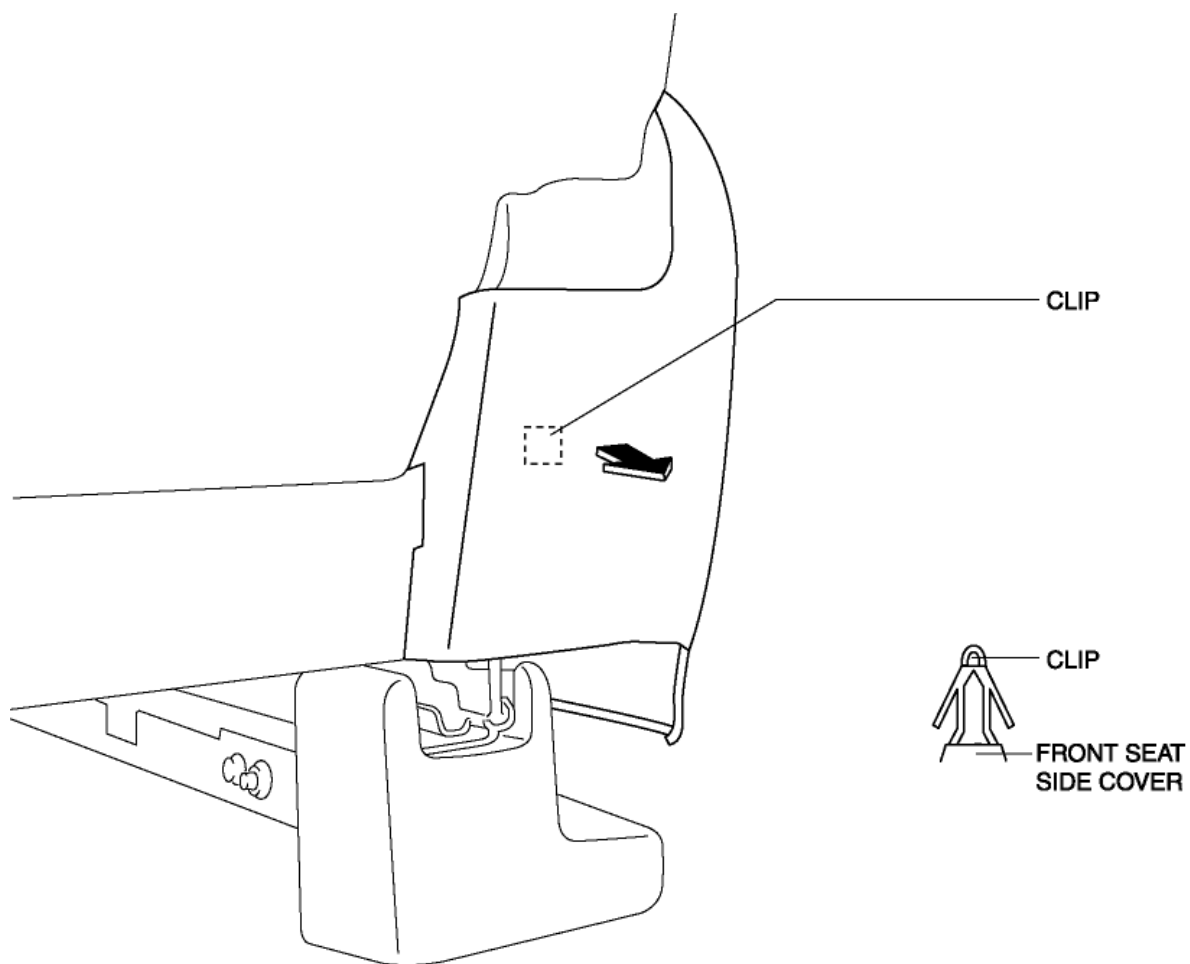

6. Remove the front seat side cover.

7. Install in the reverse order of removal.

[< Previous](#) [Next >](#)

© 2012 Mazda North American Operations, U.S.A.

[Back to Top](#)


2012 - Mazda6 - Body and Accessories

FRONT SEAT SIDE COVER REMOVAL/ INSTALLATION


Vehicles With Power Seat System

Driver-side


1. Disconnect the negative battery cable.
2. Pull the power seat switch knobs in the direction of arrow, while remove the hook.

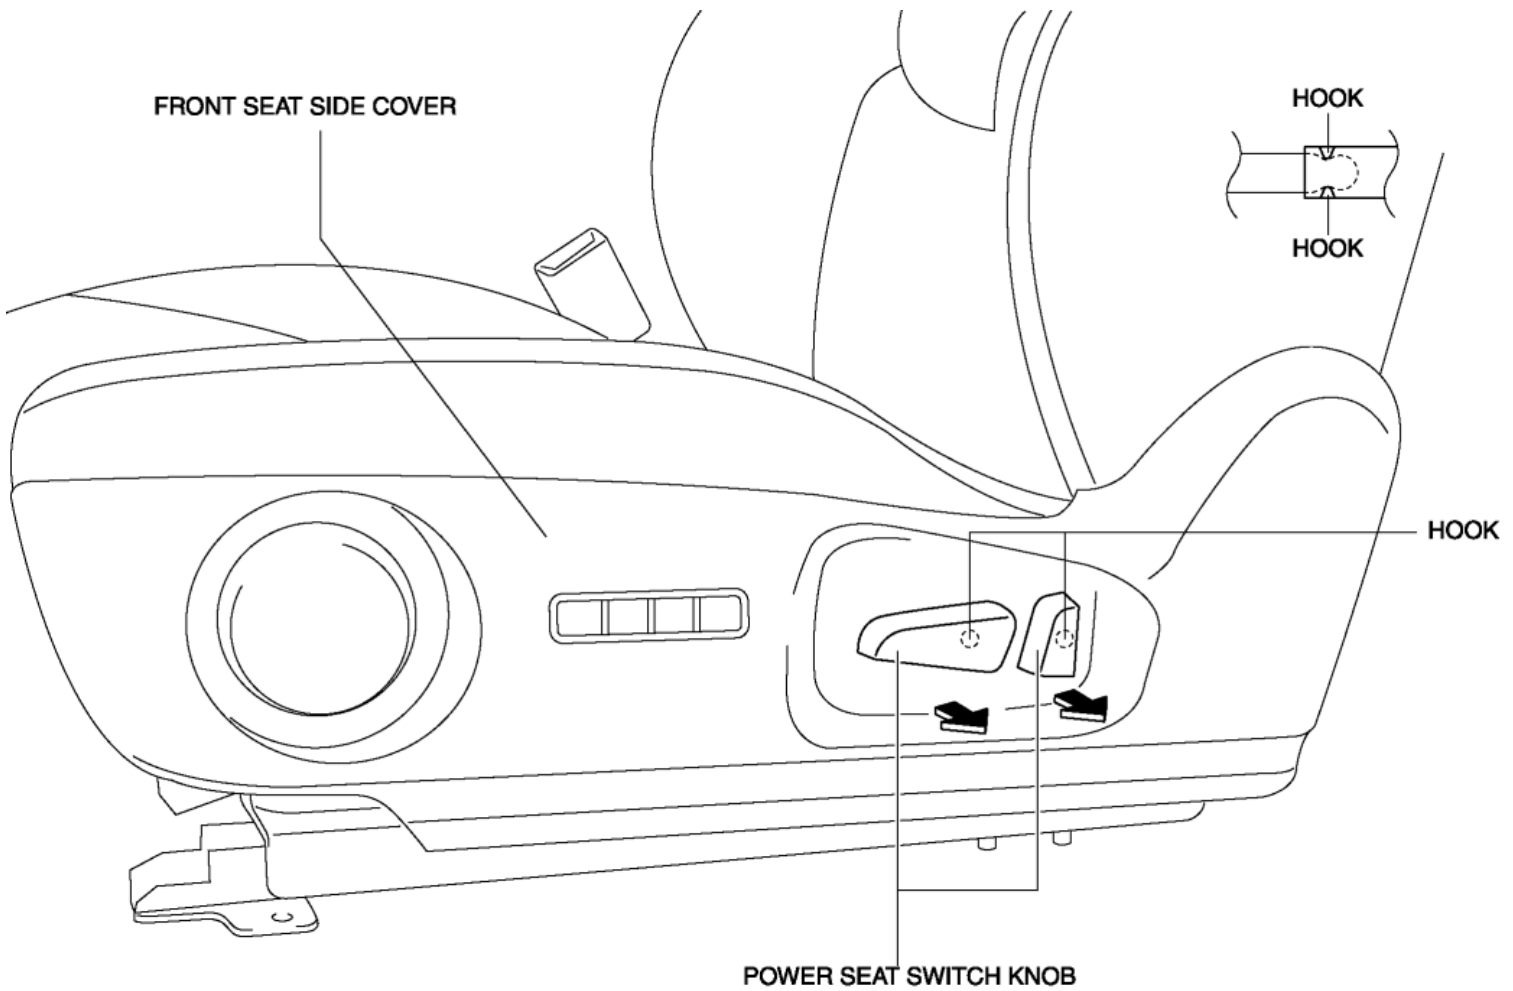


3. Using a cloth, remove the lumbar support dial installation clip and remove the lumbar support dial.

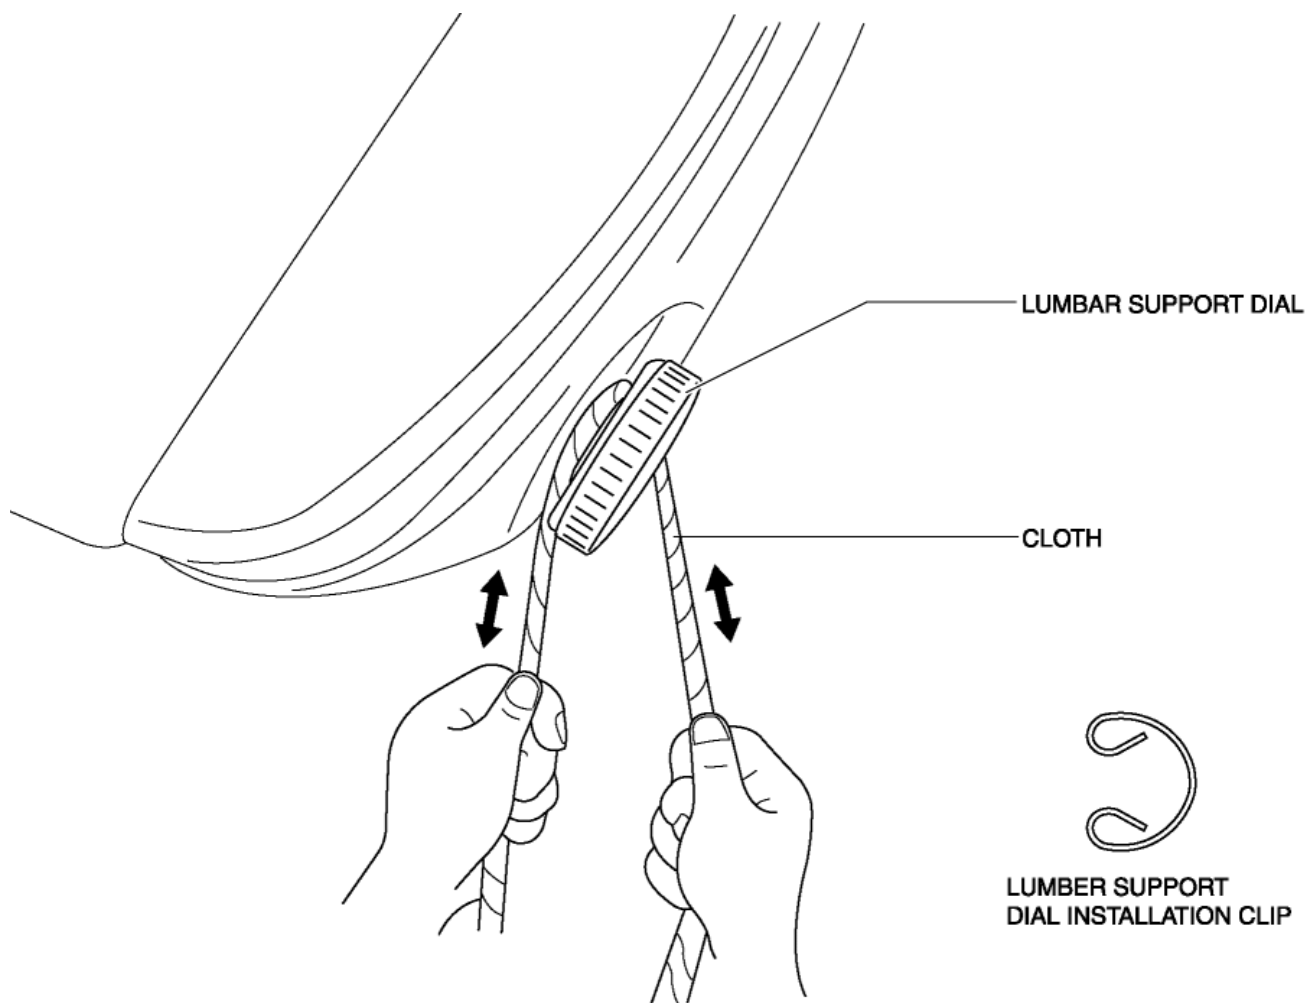

4. Pull the front seat side cover in the order of (1), (2) shown in the figure to disengage the hooks and clips.

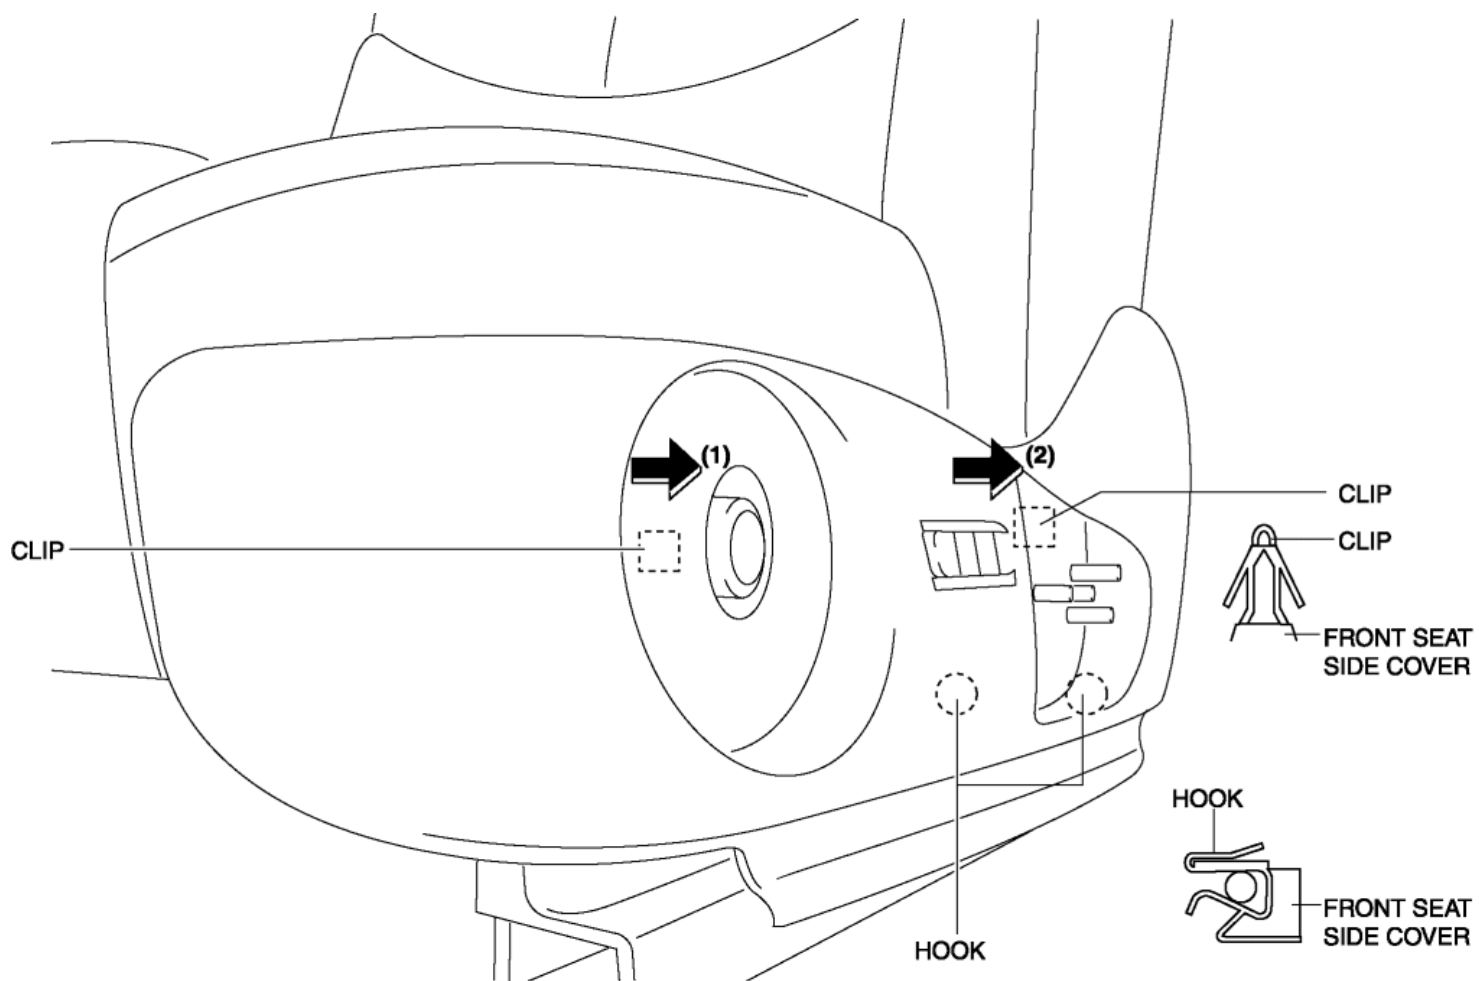


5. Pull the front seat side cover in the direction of arrow, while remove the clip.

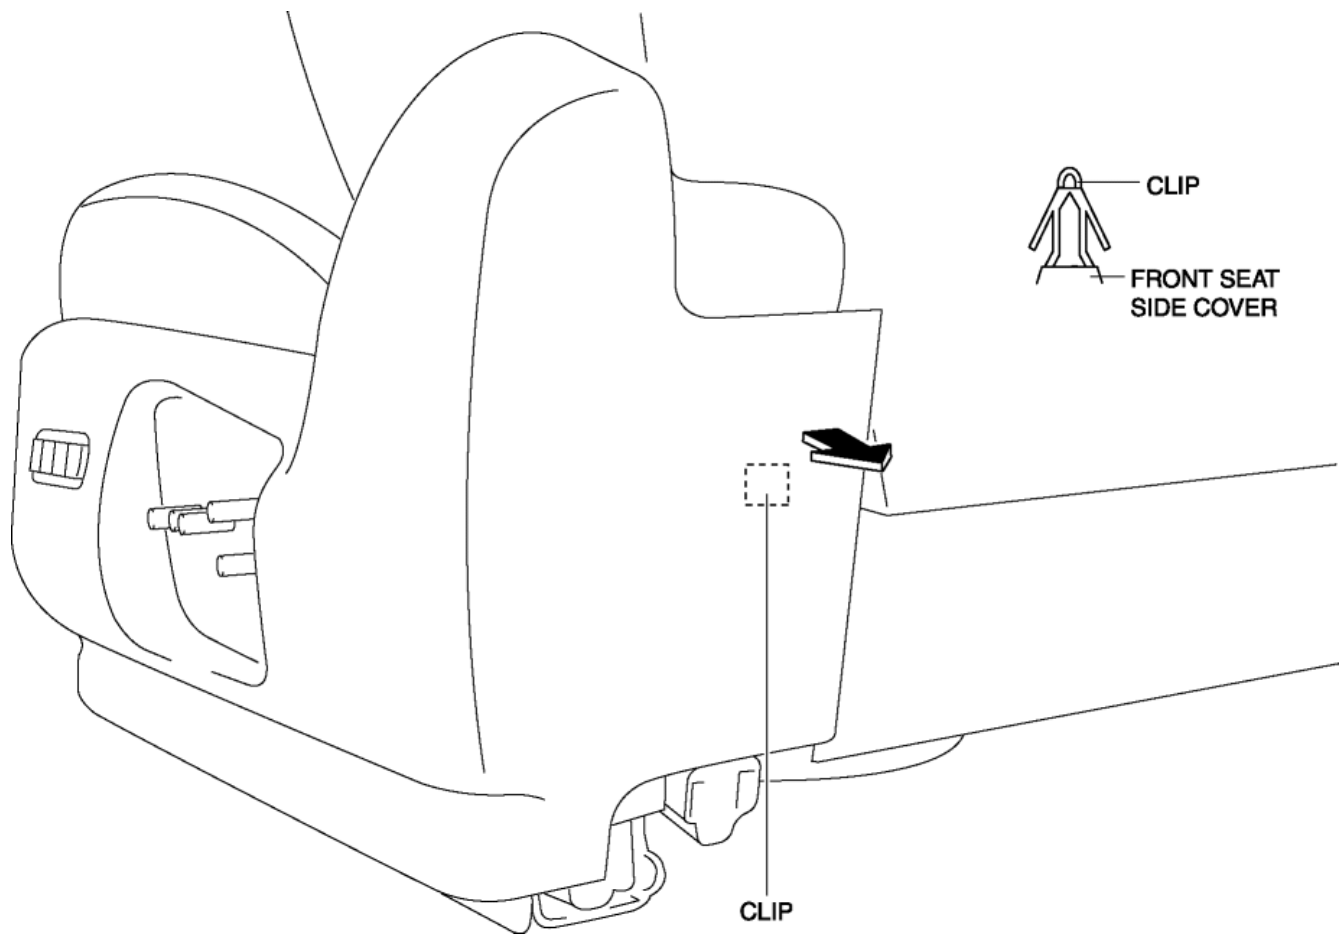


6. Remove the front seat side cover.
7. Disconnect the seat position memory switch connector.
8. Install in the reverse order of removal.

Passenger-side


1. Disconnect the negative battery cable.
2. Remove the belt anchor cover. (See [FRONT SEAT BELT REMOVAL/ INSTALLATION.](#))
3. Remove the lower anchor of the front seat belt installation bolt. (See [FRONT SEAT BELT REMOVAL/ INSTALLATION.](#))
4. Remove the power seat switch knobs in the direction of arrow, while remove the hooks.

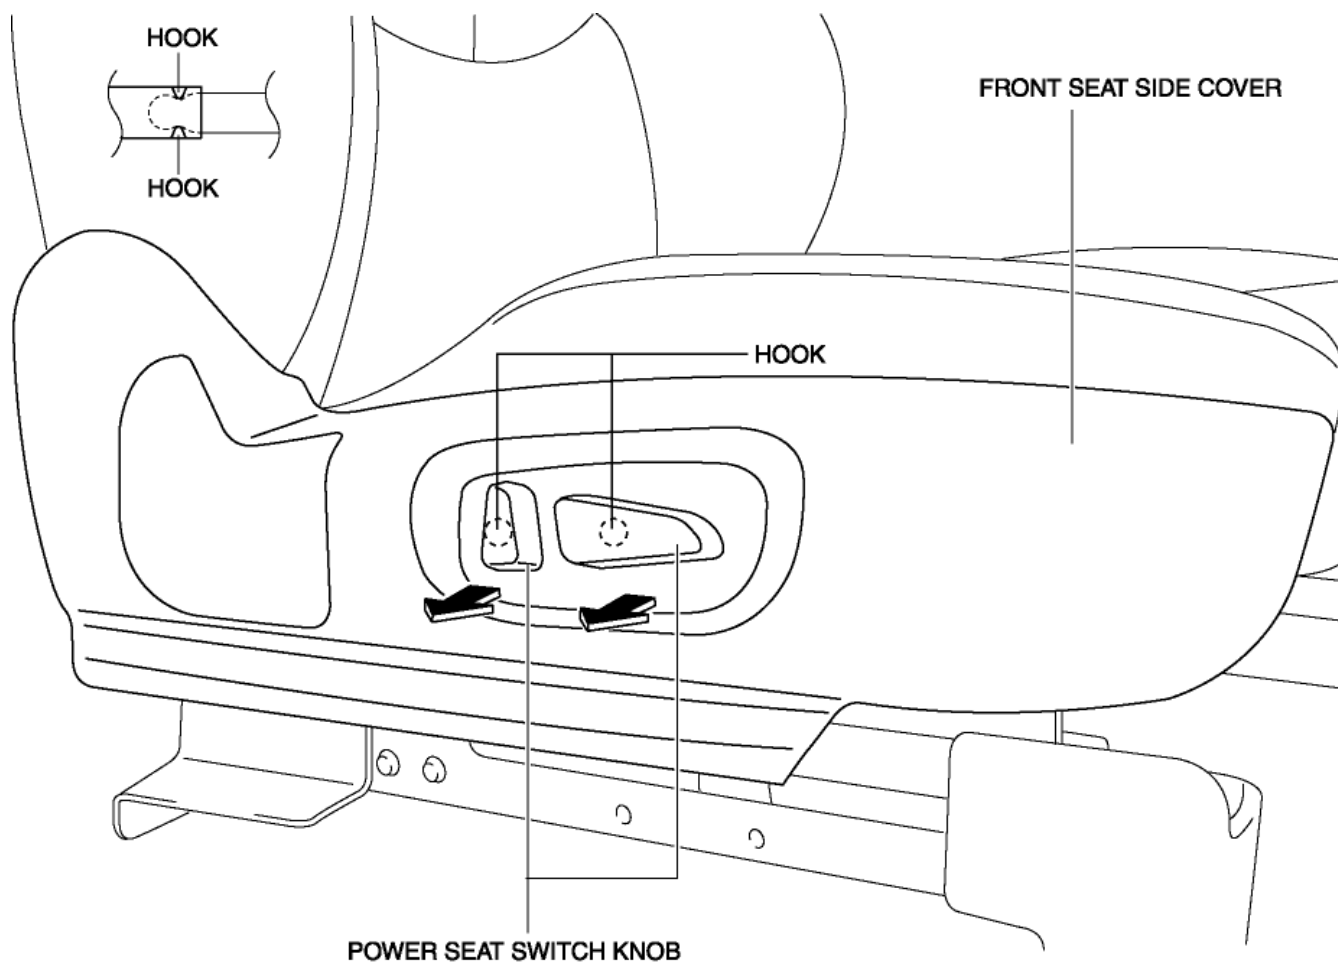

5. Pull the front seat side cover in the order of (1), (2) shown in the figure to disengage the hook and clips.

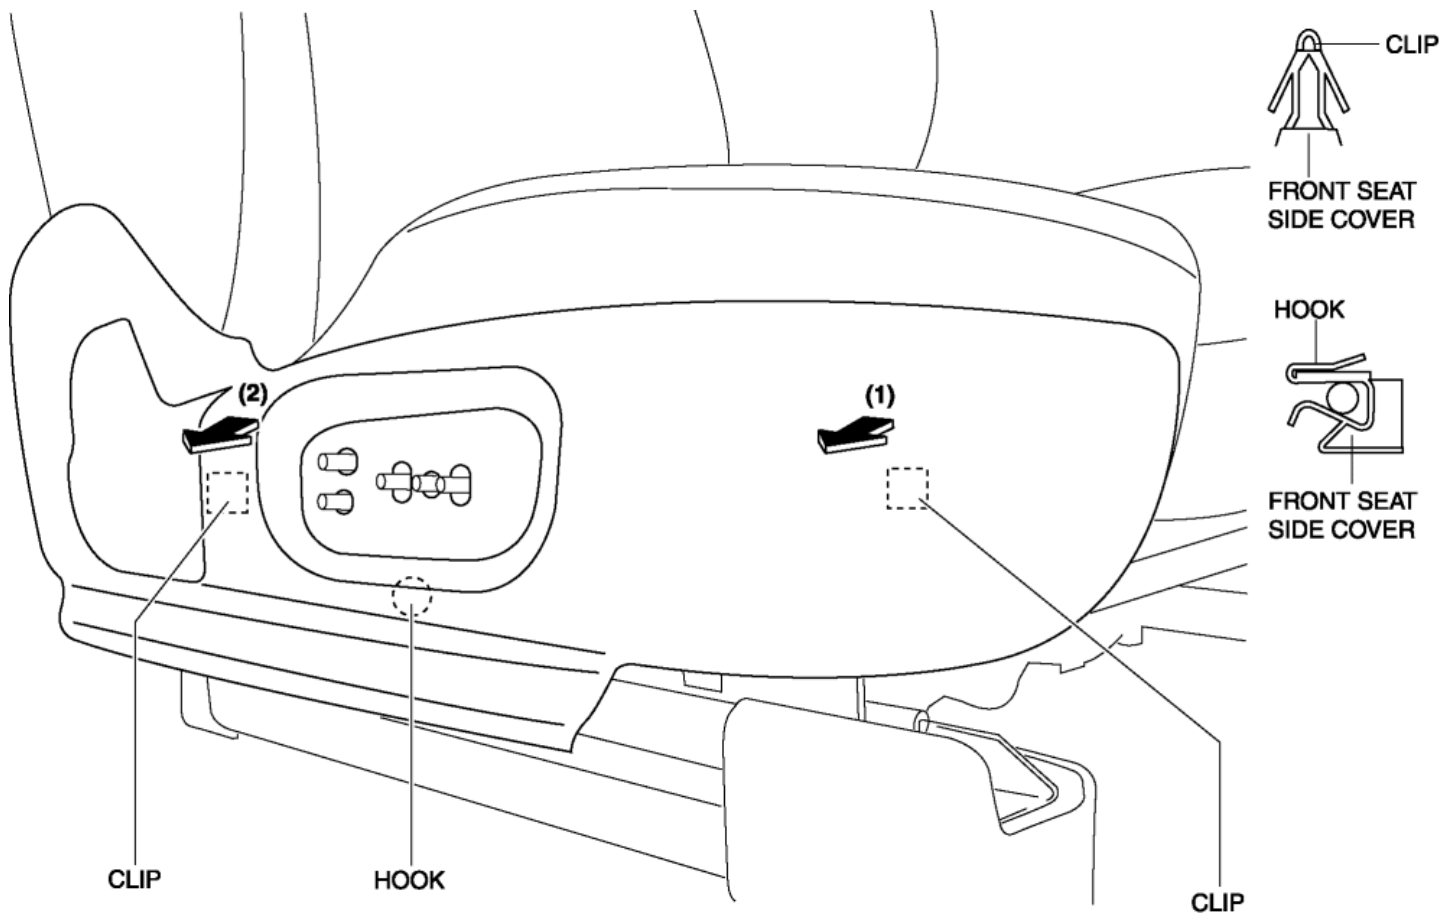

6. Pull the front seat side cover in the direction of arrow, while remove the clip.

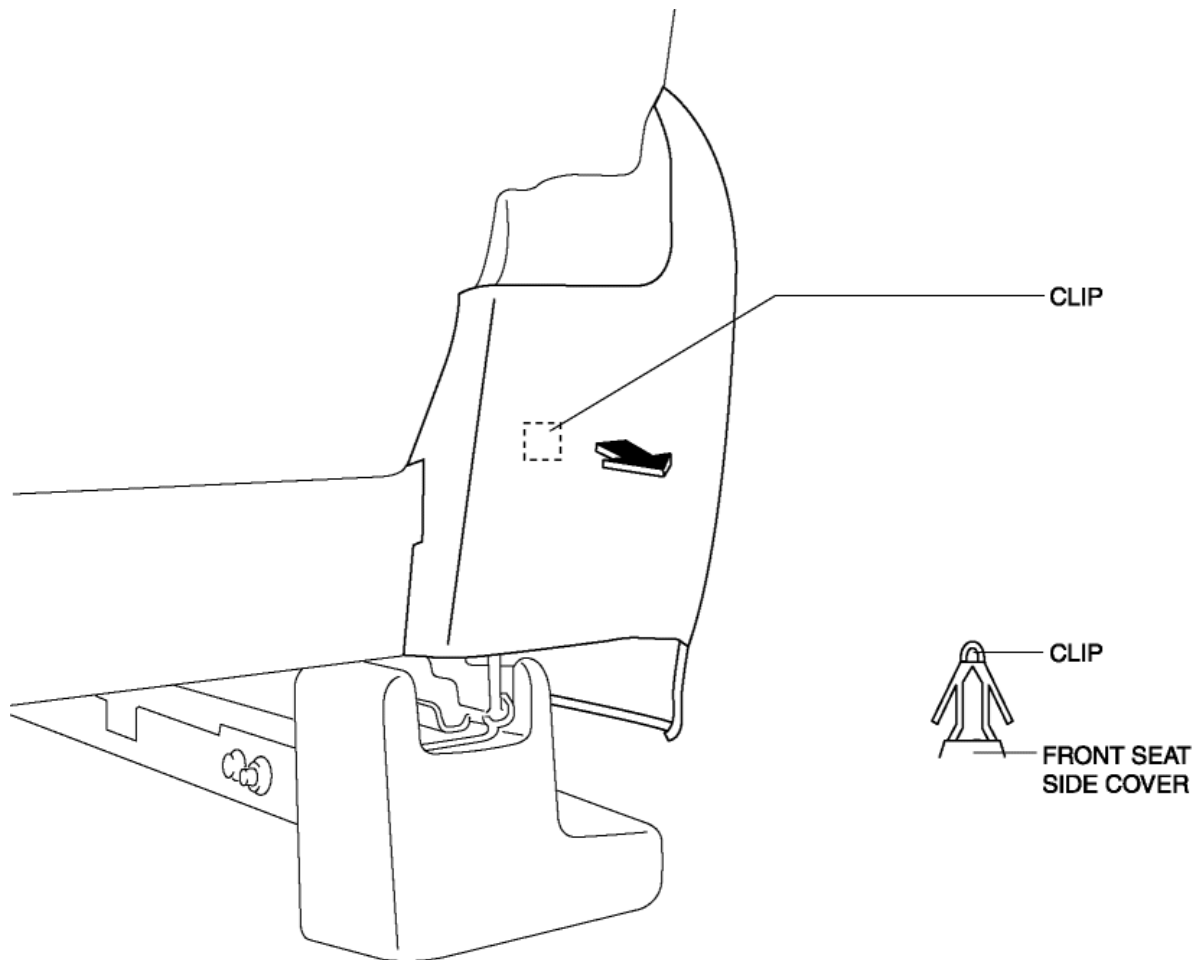

7. Remove the front seat side cover.


8. Disconnect the power seat switch connector.

9. Install in the reverse order of removal.

Vehicles Without Power Seat System


Driver-side

1. Operate the lift lever in the direction of arrow (1) shown in the figure.

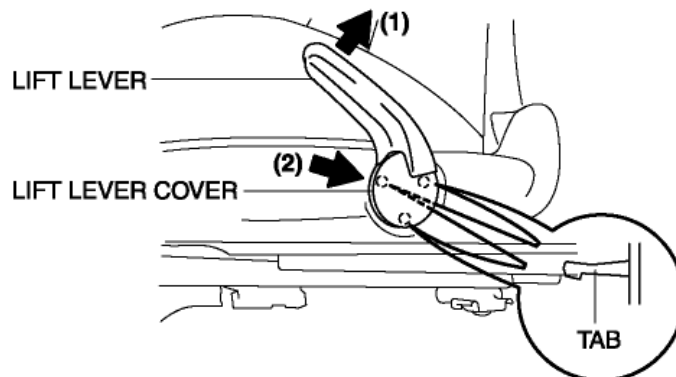


2. Insert a fastener remover from the position of arrow (2) shown in the figure, and remove the lift lever cover by disengaging the tabs.


3. Remove the screws, then remove the lift lever in the direction of the arrow.

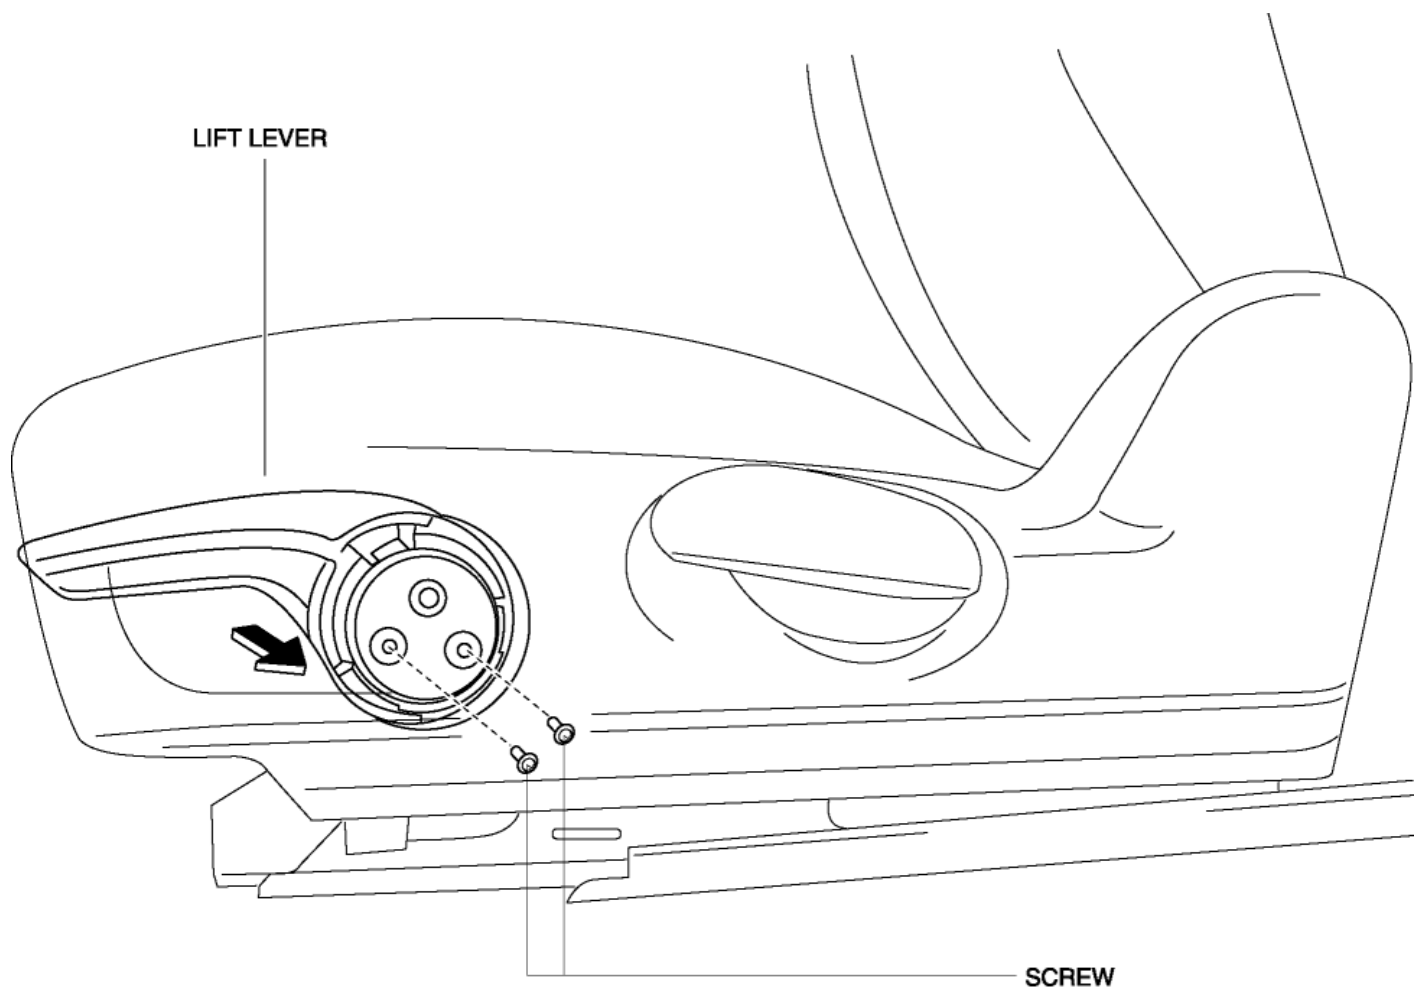


4. Using a cloth, remove the recliner lever installation clip and remove the recliner lever.

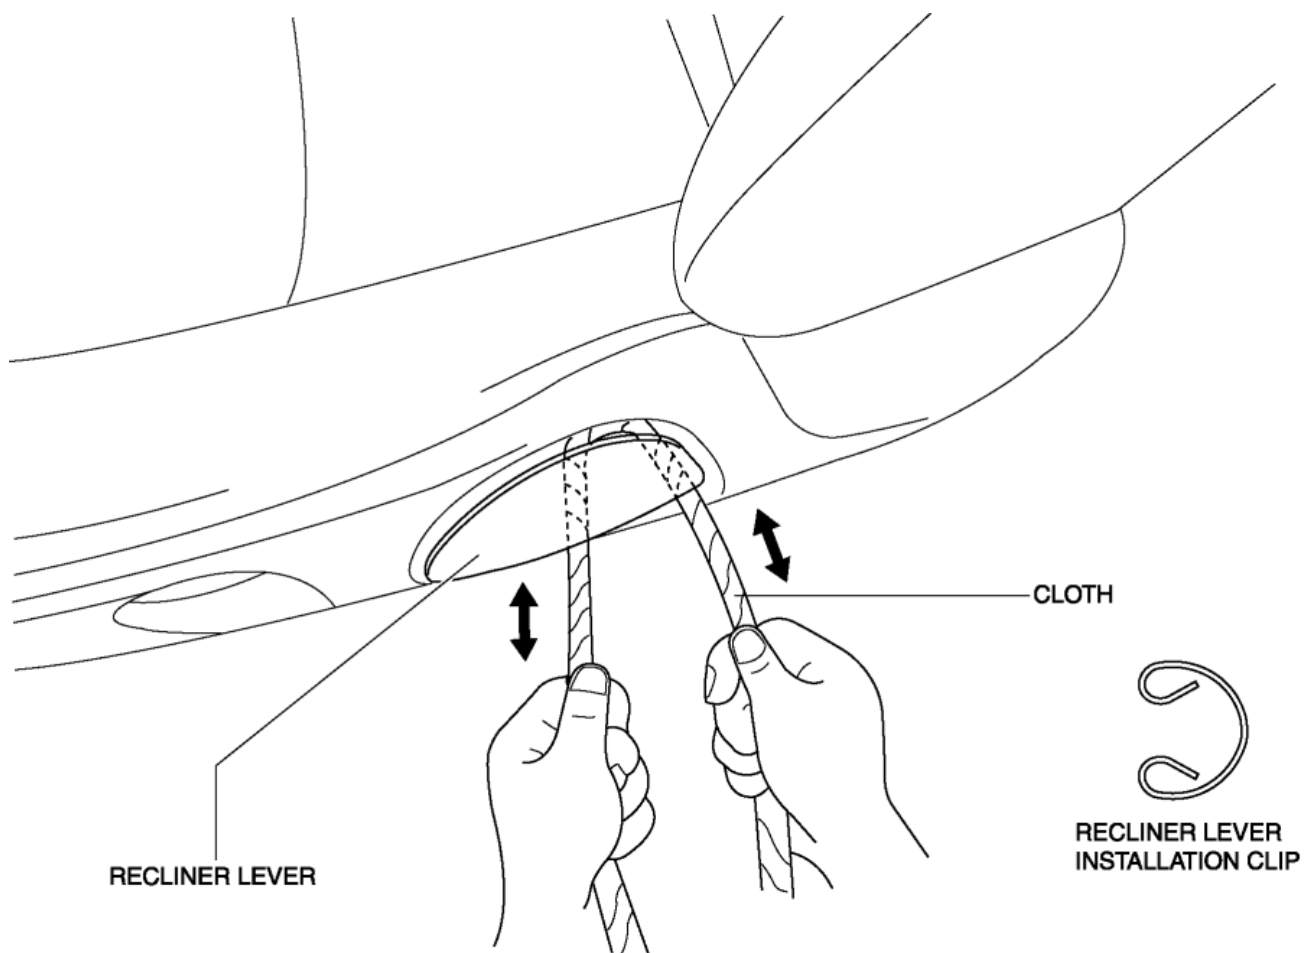

5. Pull the front seat side cover in the order of (1), (2) shown in the figure to disengage the hooks and clips.

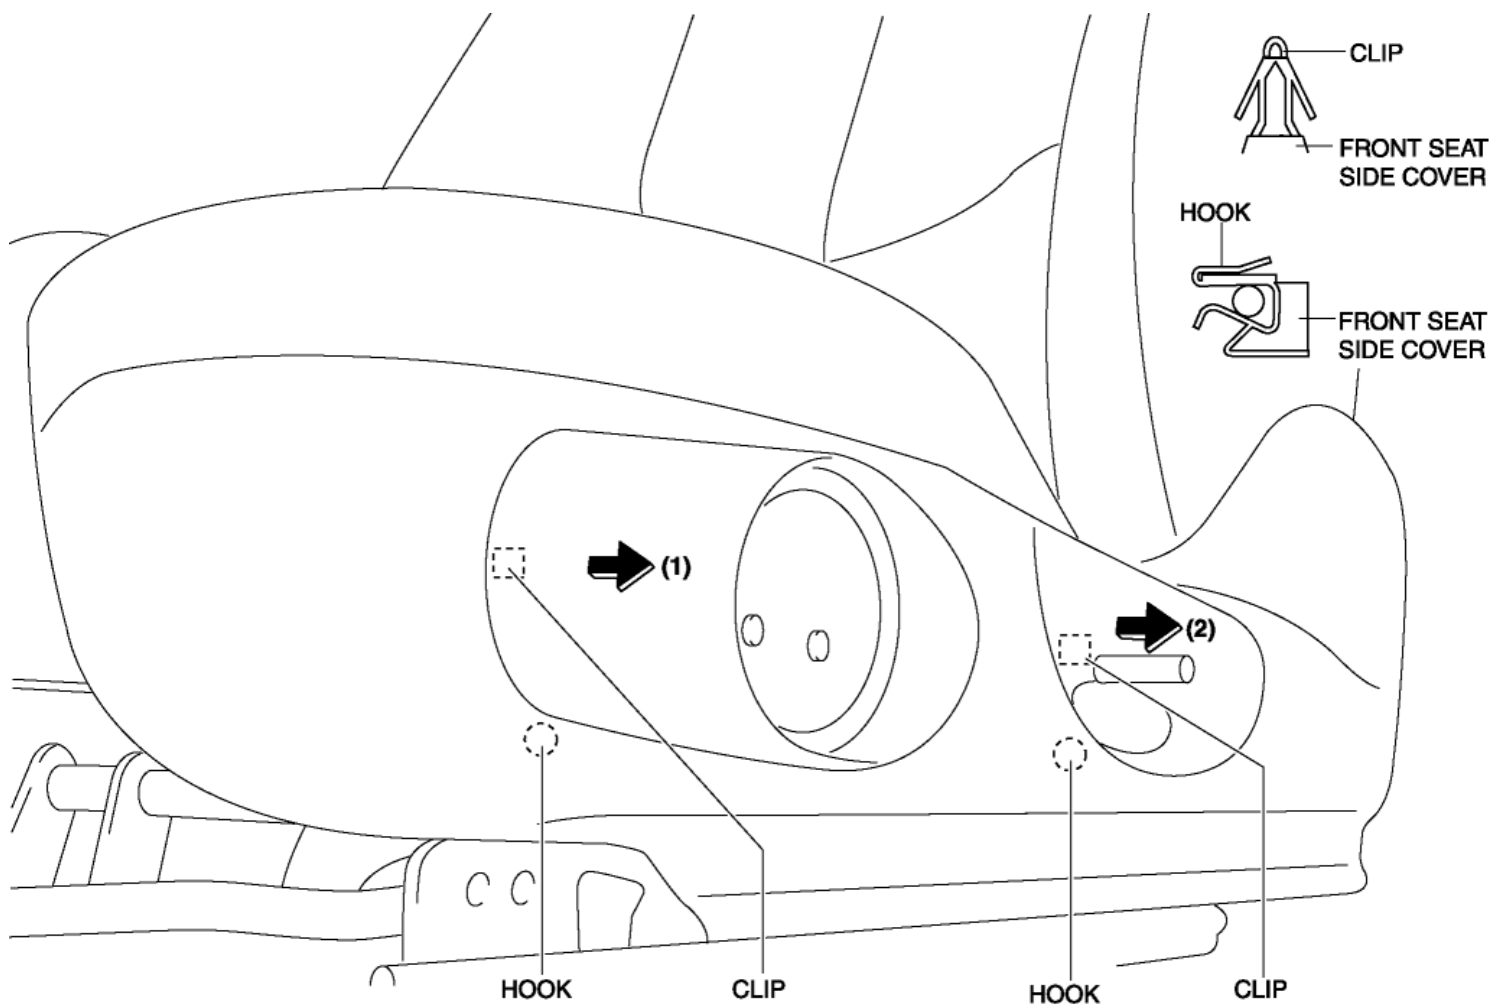


6. Pull the front seat side cover in the direction of arrow, while remove the clip.

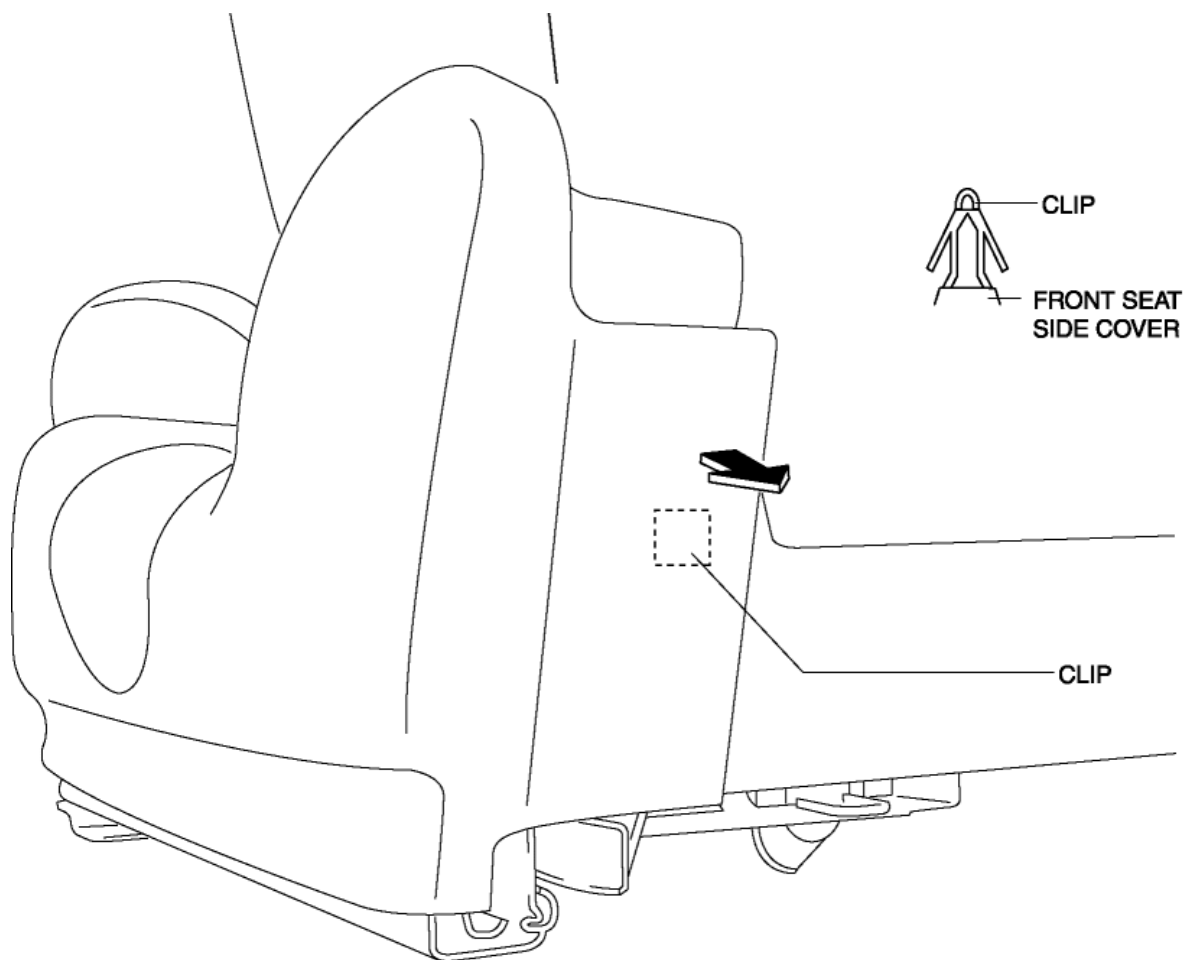


7. Remove the front seat side cover.
8. Install in the reverse order of removal.

Passenger-side


1. Remove the belt anchor cover. (See [FRONT SEAT BELT REMOVAL/ INSTALLATION.](#))
2. Remove the lower anchor of the front seat belt installation bolt. (See [FRONT SEAT BELT REMOVAL/ INSTALLATION.](#))
3. Using a cloth, remove the recliner lever installation clip and remove the recliner lever.

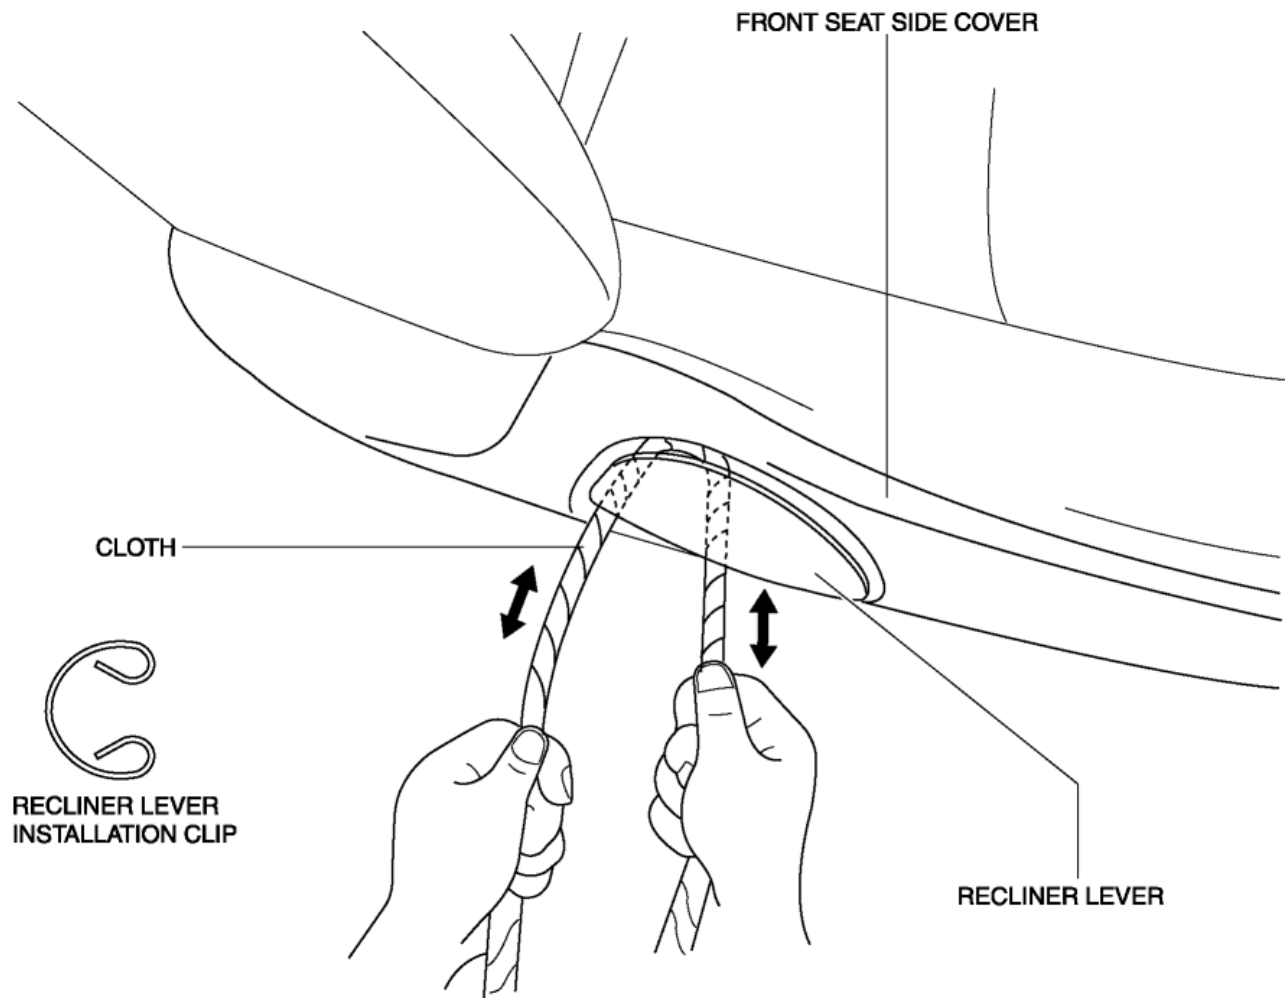

4. Pull the front seat side cover in the order of (1), (2) shown in the figure to disengage the hook and clips.

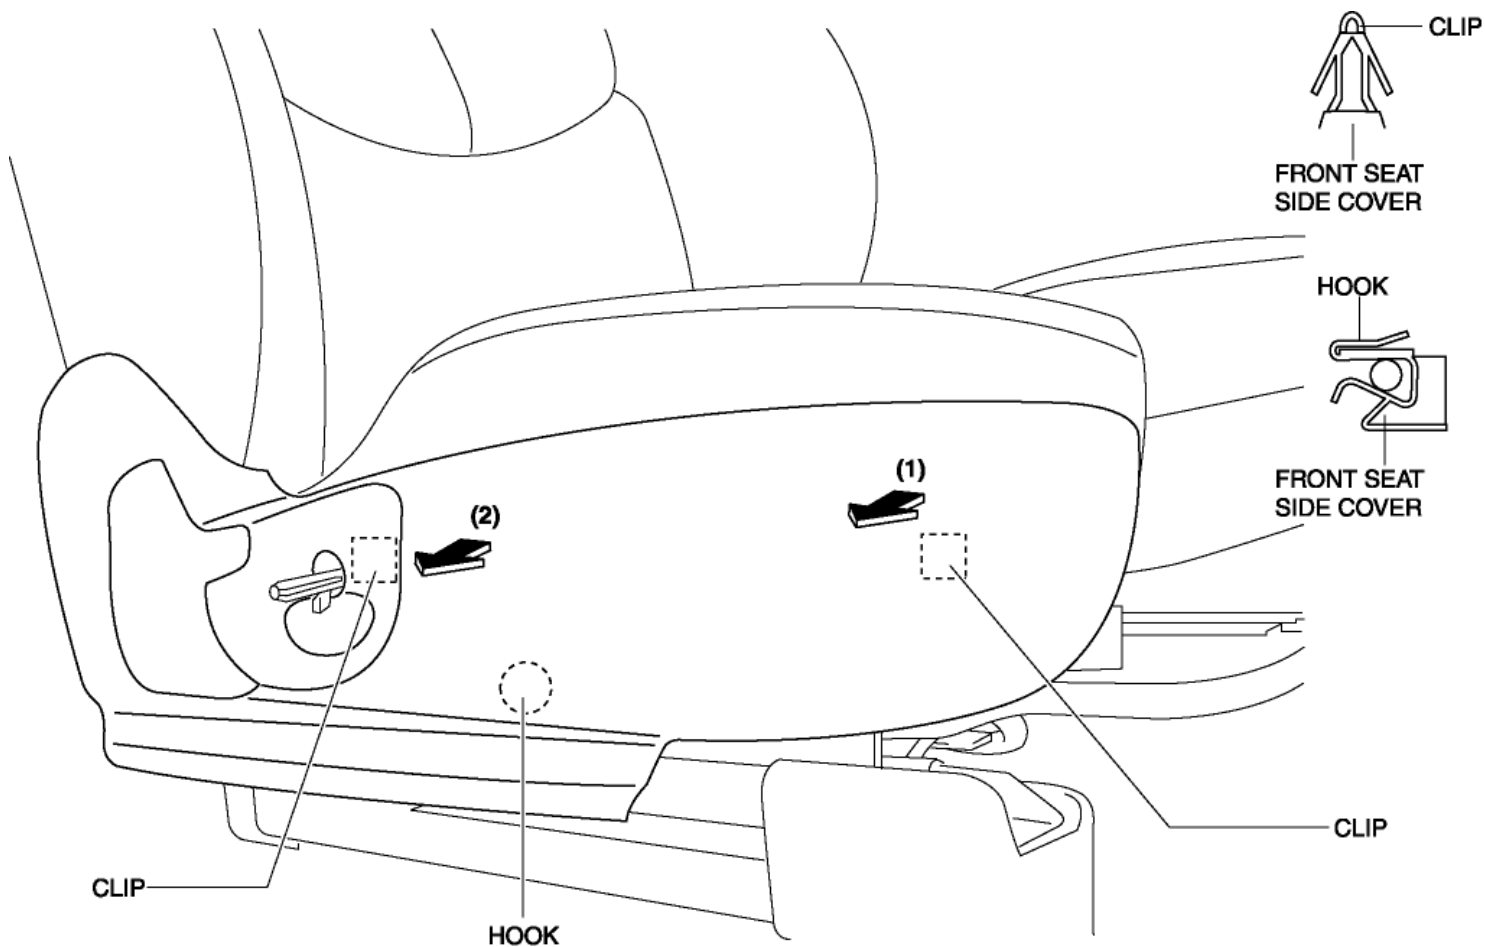

5. Pull the front seat side cover in the direction of arrow, while remove the clip.

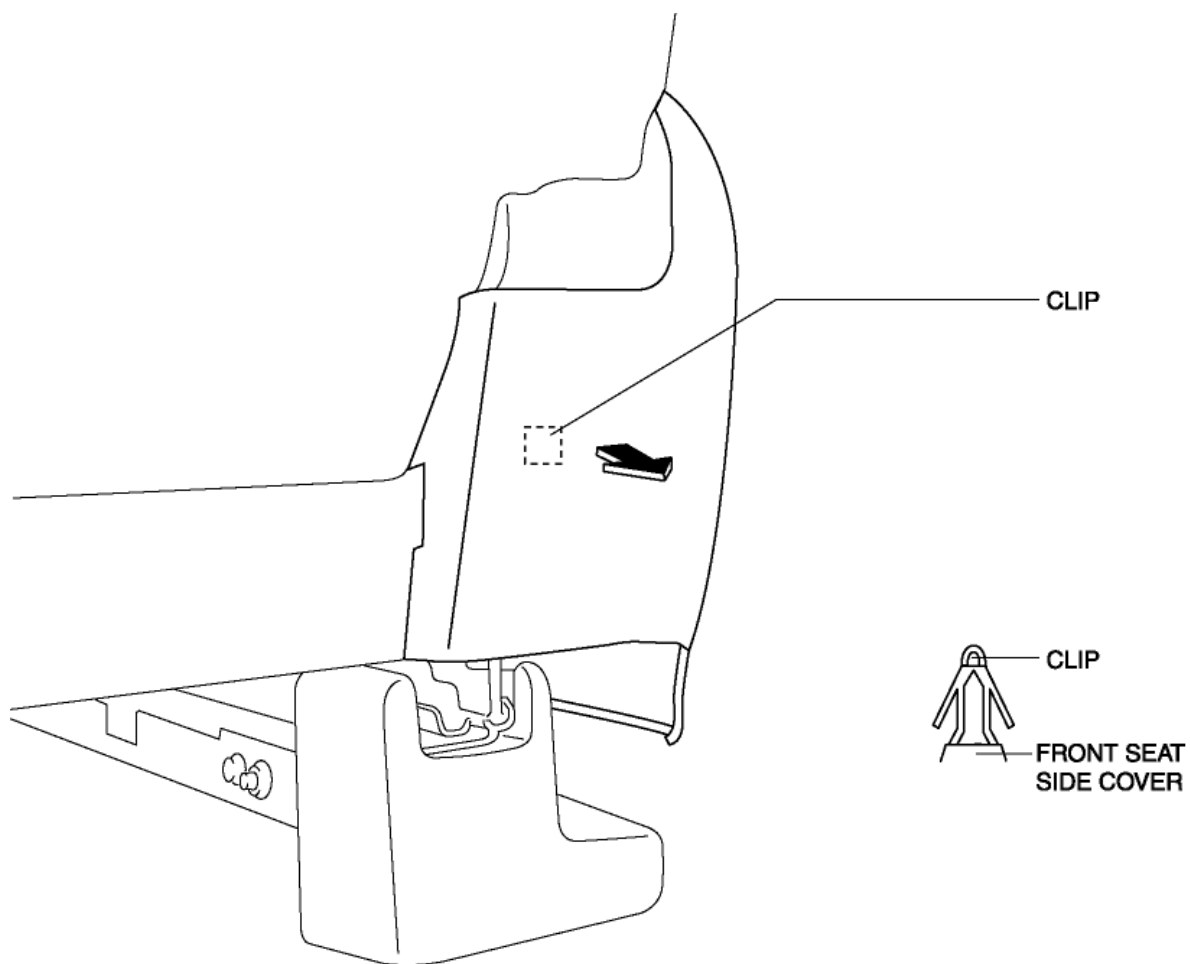

6. Remove the front seat side cover.

7. Install in the reverse order of removal.

[< Previous](#) [Next >](#)

© 2012 Mazda North American Operations, U.S.A.

[Back to Top](#)