



2012 - Mazda6 - Body and Accessories

REAR SEAT BACK FRAME REMOVAL/ INSTALLATION

1. Remove the rear seat cushion. (See [REAR SEAT CUSHION REMOVAL/ INSTALLATION](#).)
2. Remove the rear seat back. (See [REAR SEAT BACK REMOVAL/ INSTALLATION](#).)
3. Remove the rear seat back striker covers while remove the hooks.

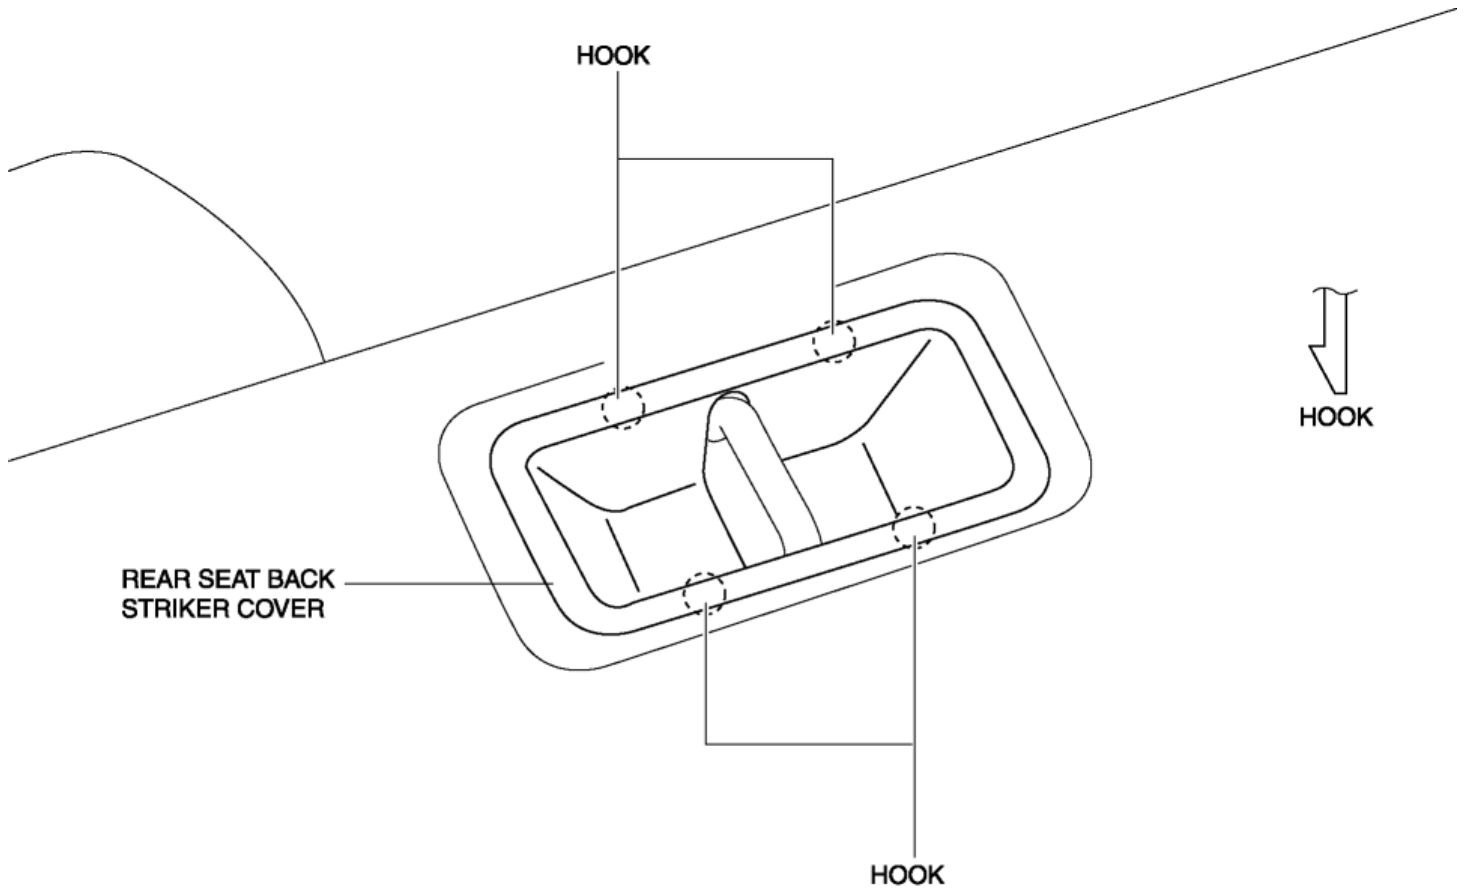


4. Peel the rear seat back mat and remove the rings C.

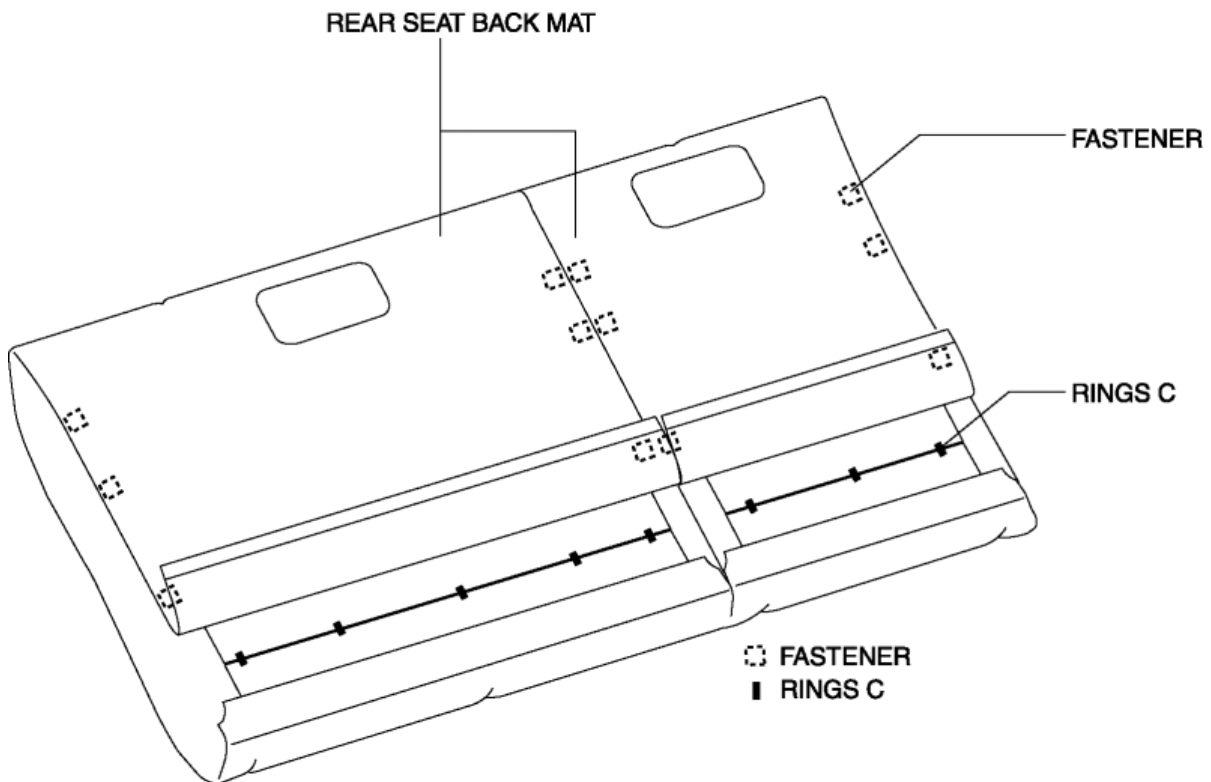


5. Peel the rear seat back mat while remove the fasteners.

6. Remove the rings C.

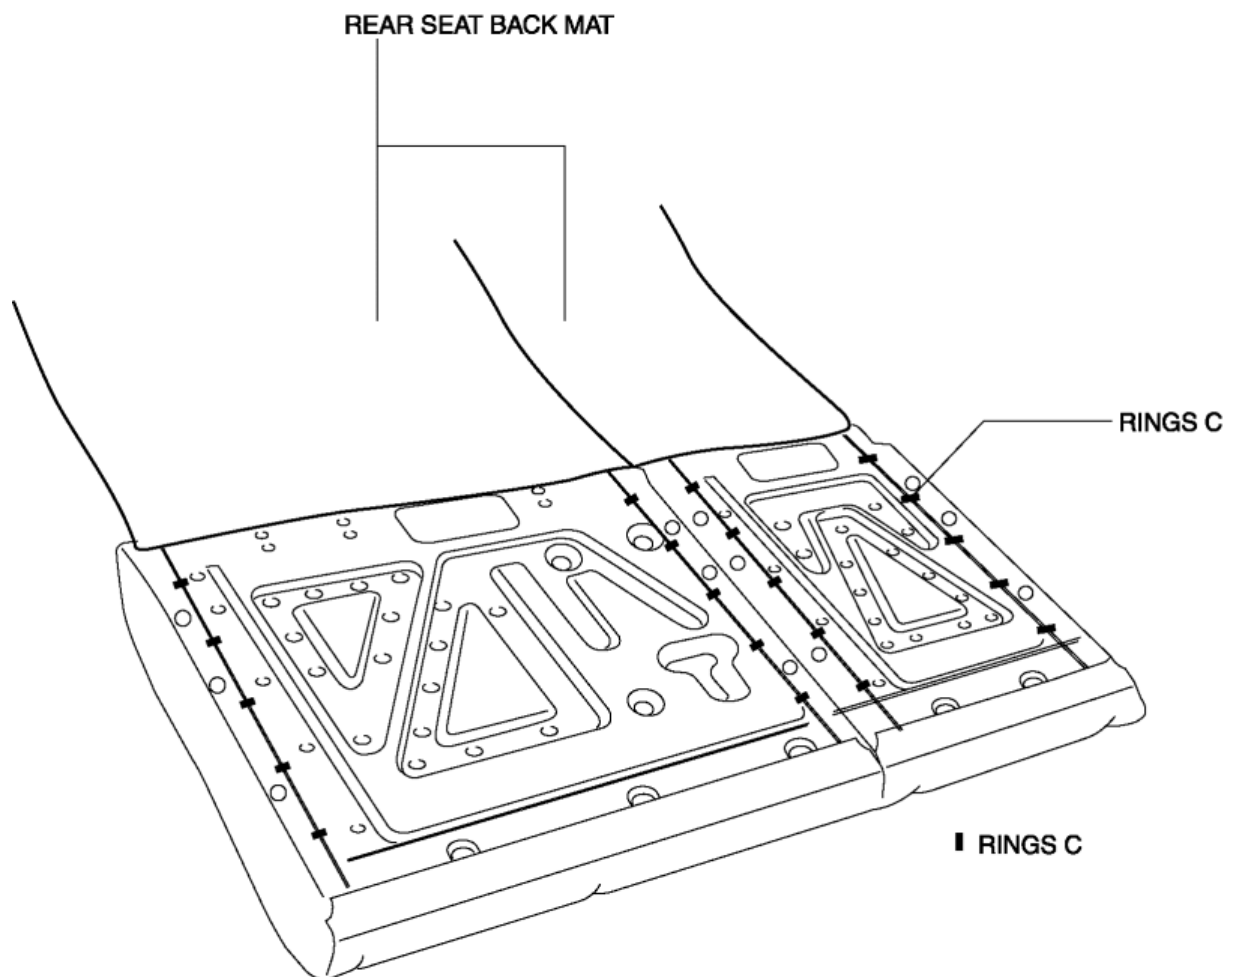


7. Remove the nuts then remove the rear seat center armrest.

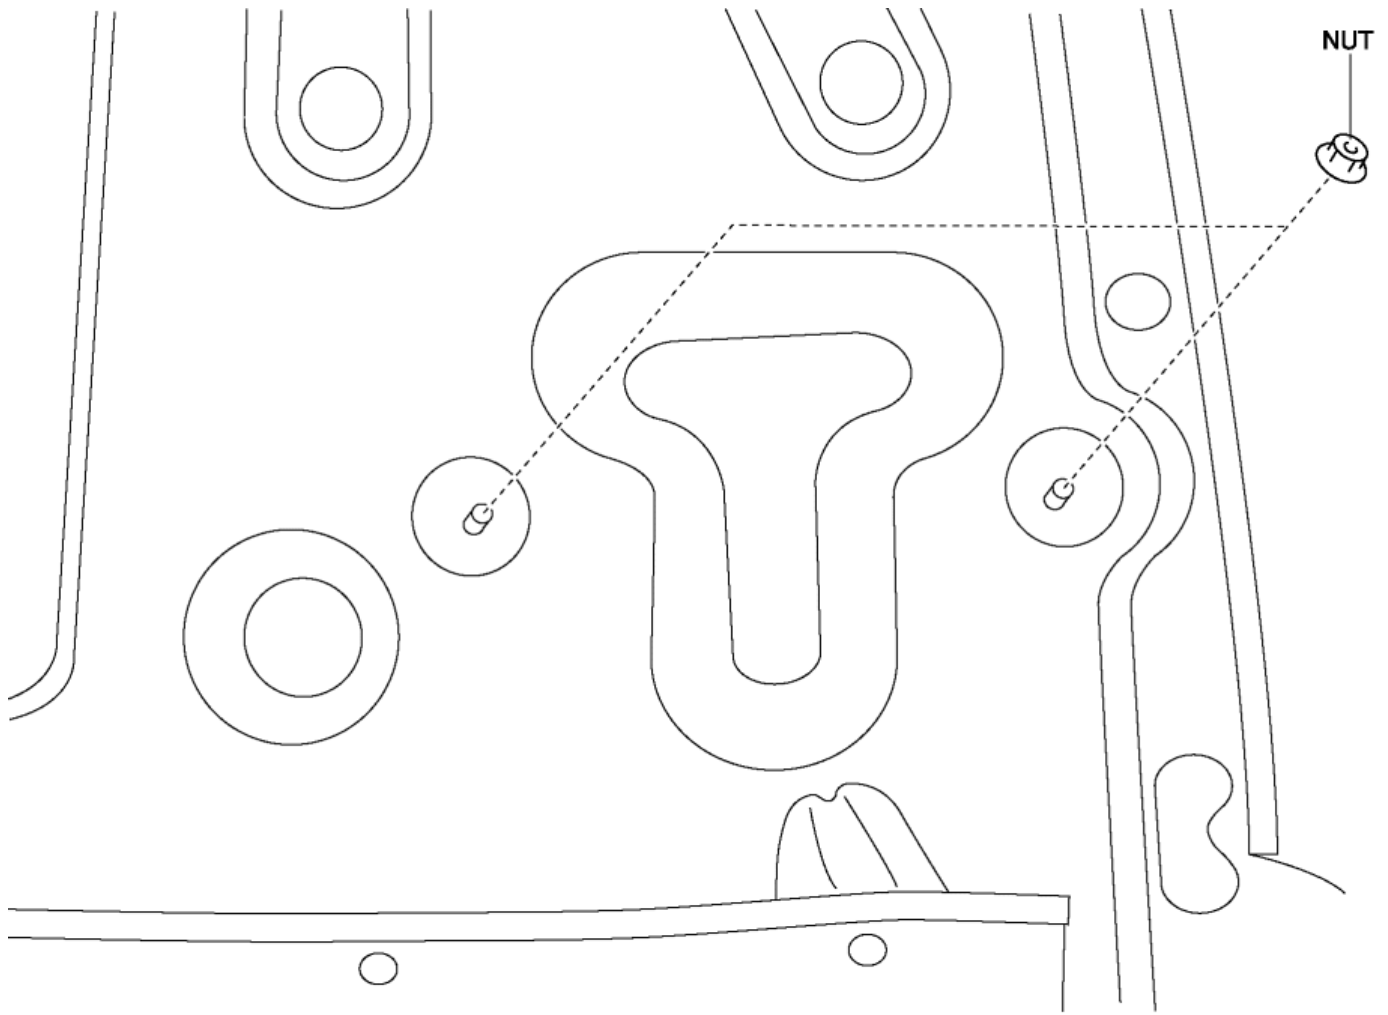


NUT: 7—10 N·m {72—101 kgf·cm, 62—88 in·lbf}

8. Peel back the rear seat back trim and pad, release the pole guide tabs in the direction of arrow (1) shown in the figure, then pull out the pole guides in the direction of arrow (2).

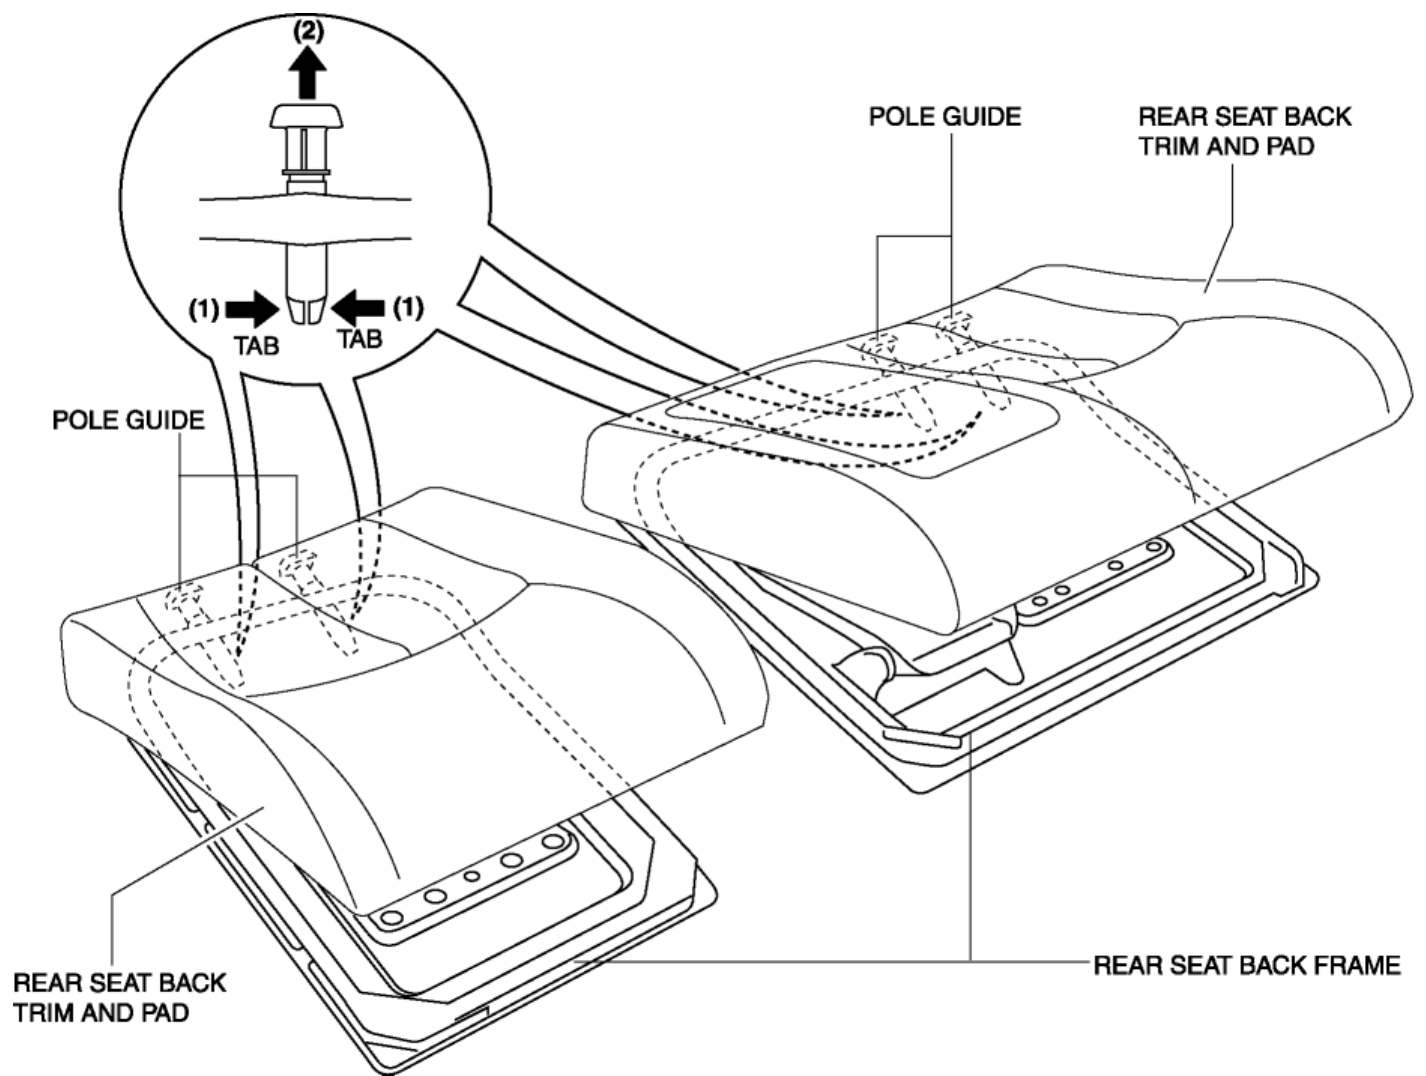

9. Remove the rear seat back frame from the rear seat back trim and pad by pulling it in the direction of the arrow.

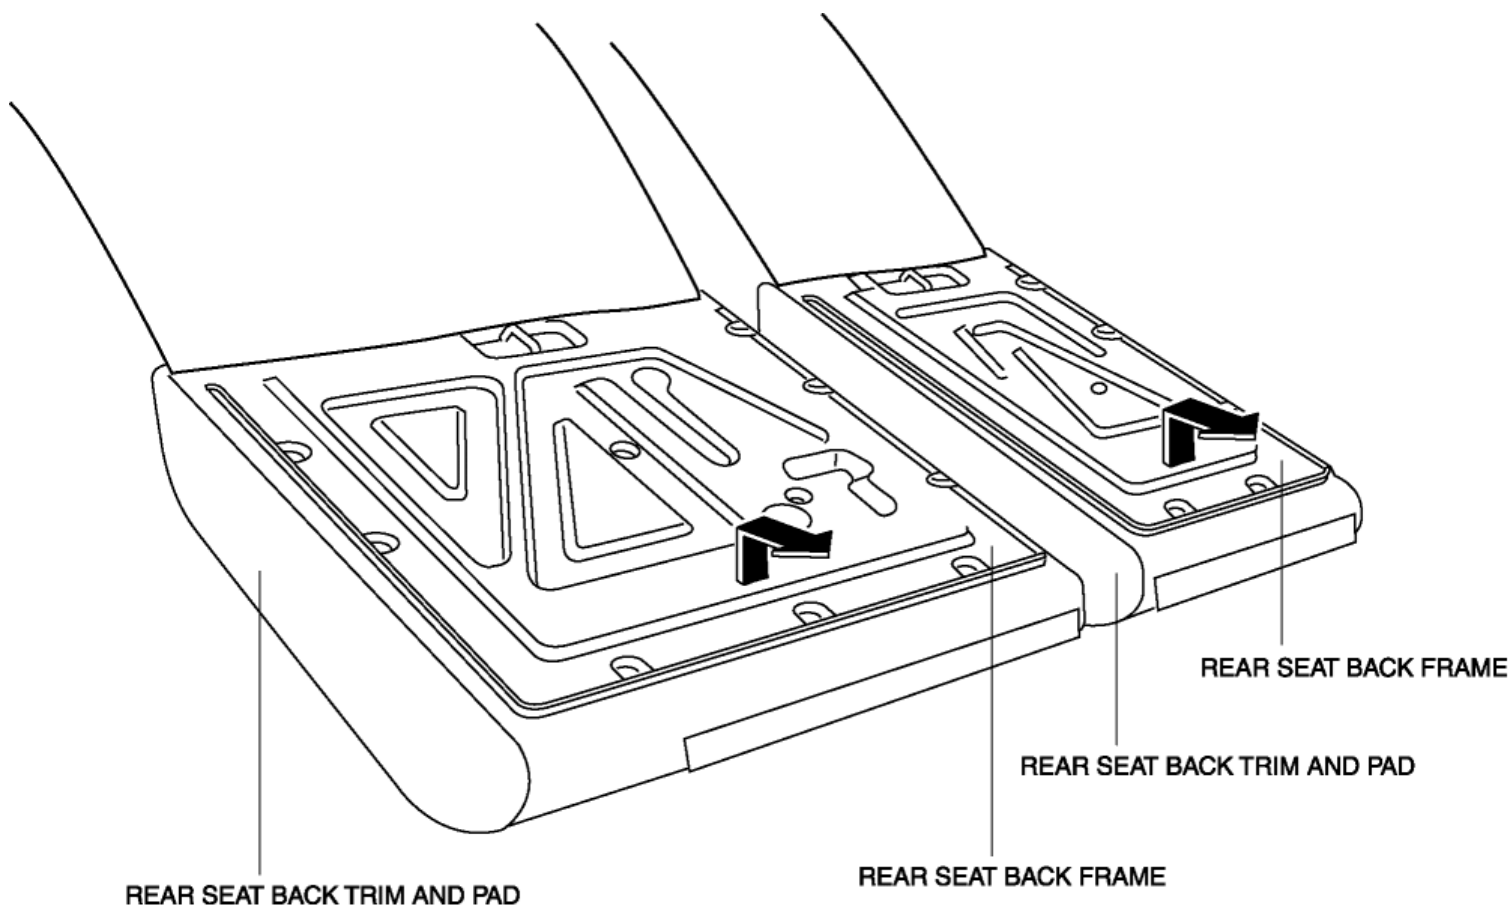

10. Install in the reverse order of removal.

[< Previous](#) [Next >](#)


© 2012 Mazda North American Operations, U.S.A.

[Back to Top](#)


2012 - Mazda6 - Body and Accessories

REAR SEAT BACK FRAME REMOVAL/ INSTALLATION

1. Remove the rear seat cushion. (See [REAR SEAT CUSHION REMOVAL/ INSTALLATION](#).)
2. Remove the rear seat back. (See [REAR SEAT BACK REMOVAL/ INSTALLATION](#).)
3. Remove the rear seat back striker covers while remove the hooks.

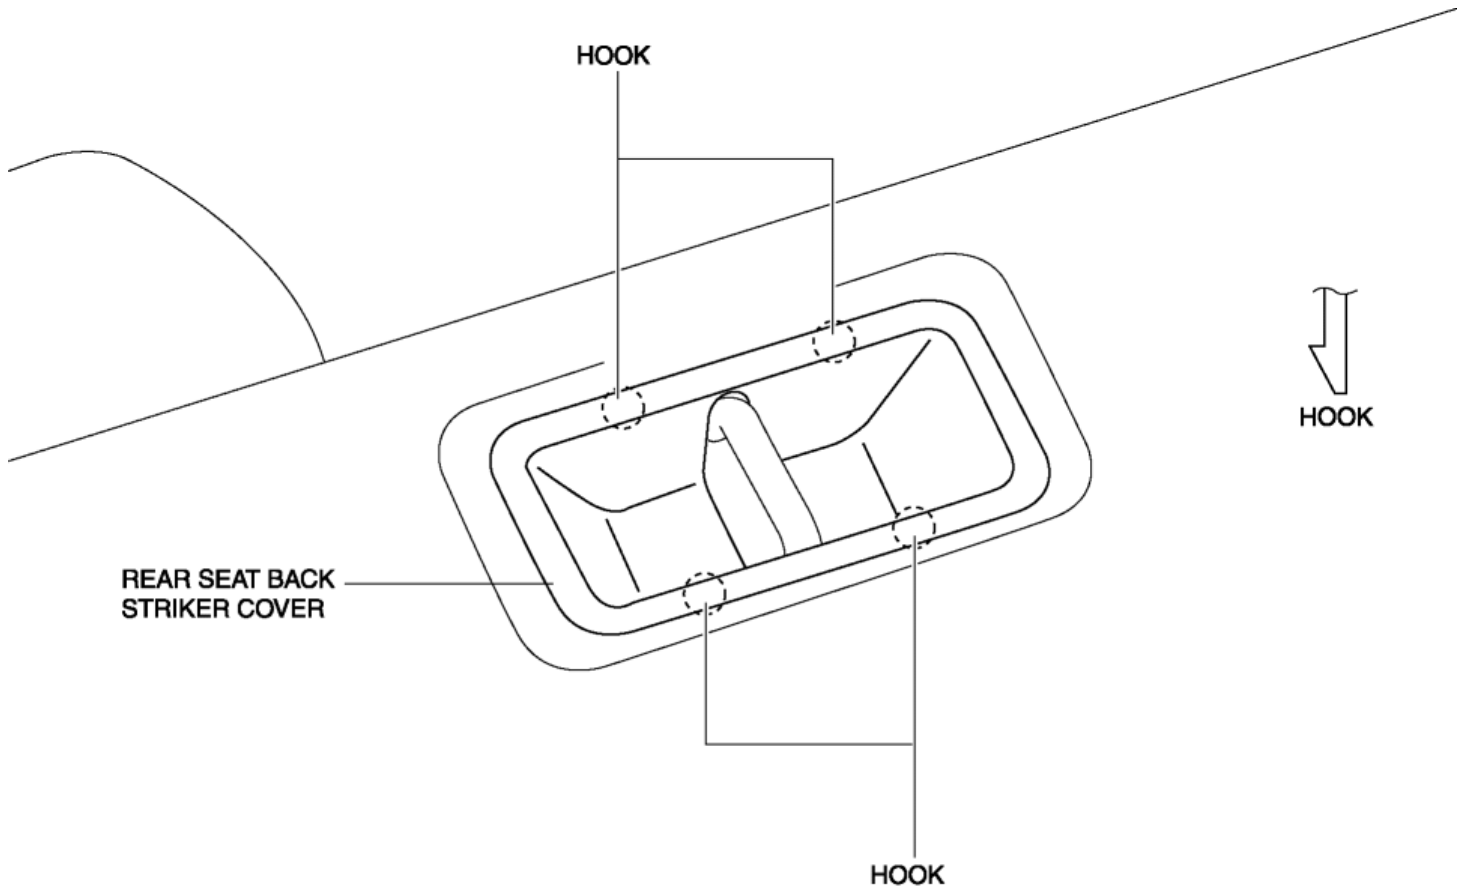


4. Peel the rear seat back mat and remove the rings C.

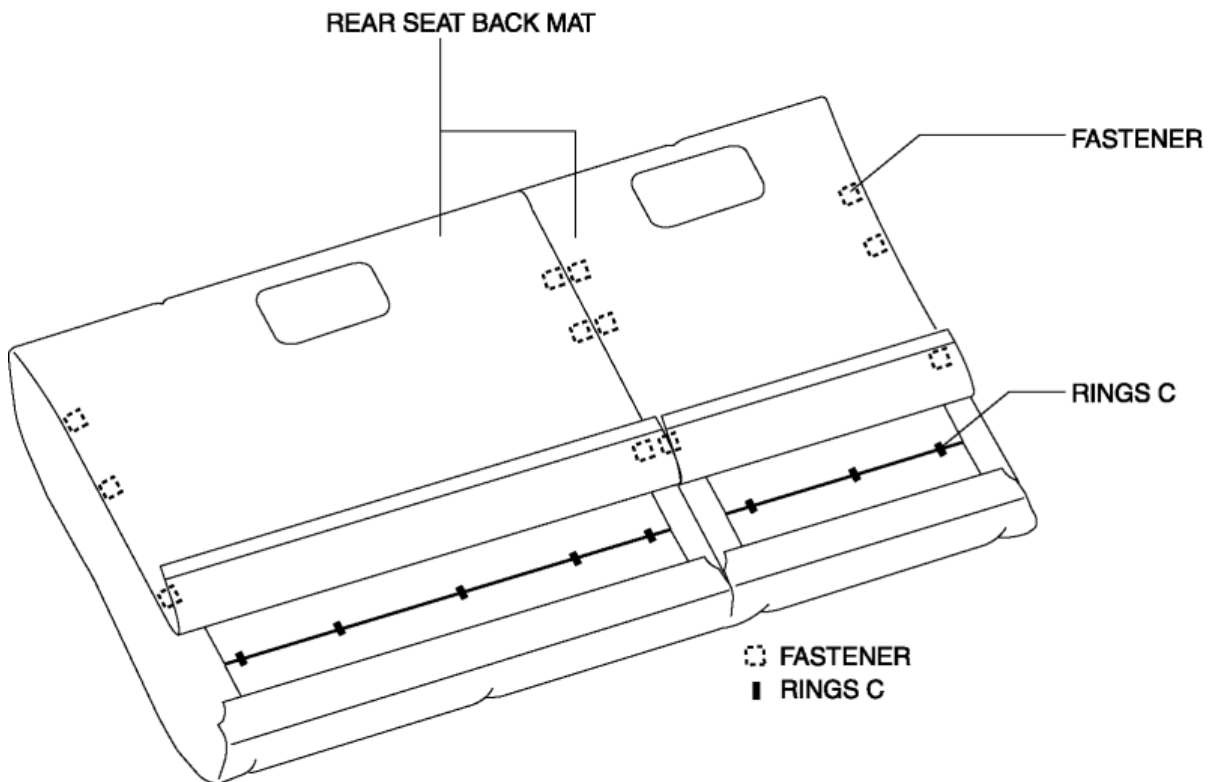


5. Peel the rear seat back mat while remove the fasteners.

6. Remove the rings C.

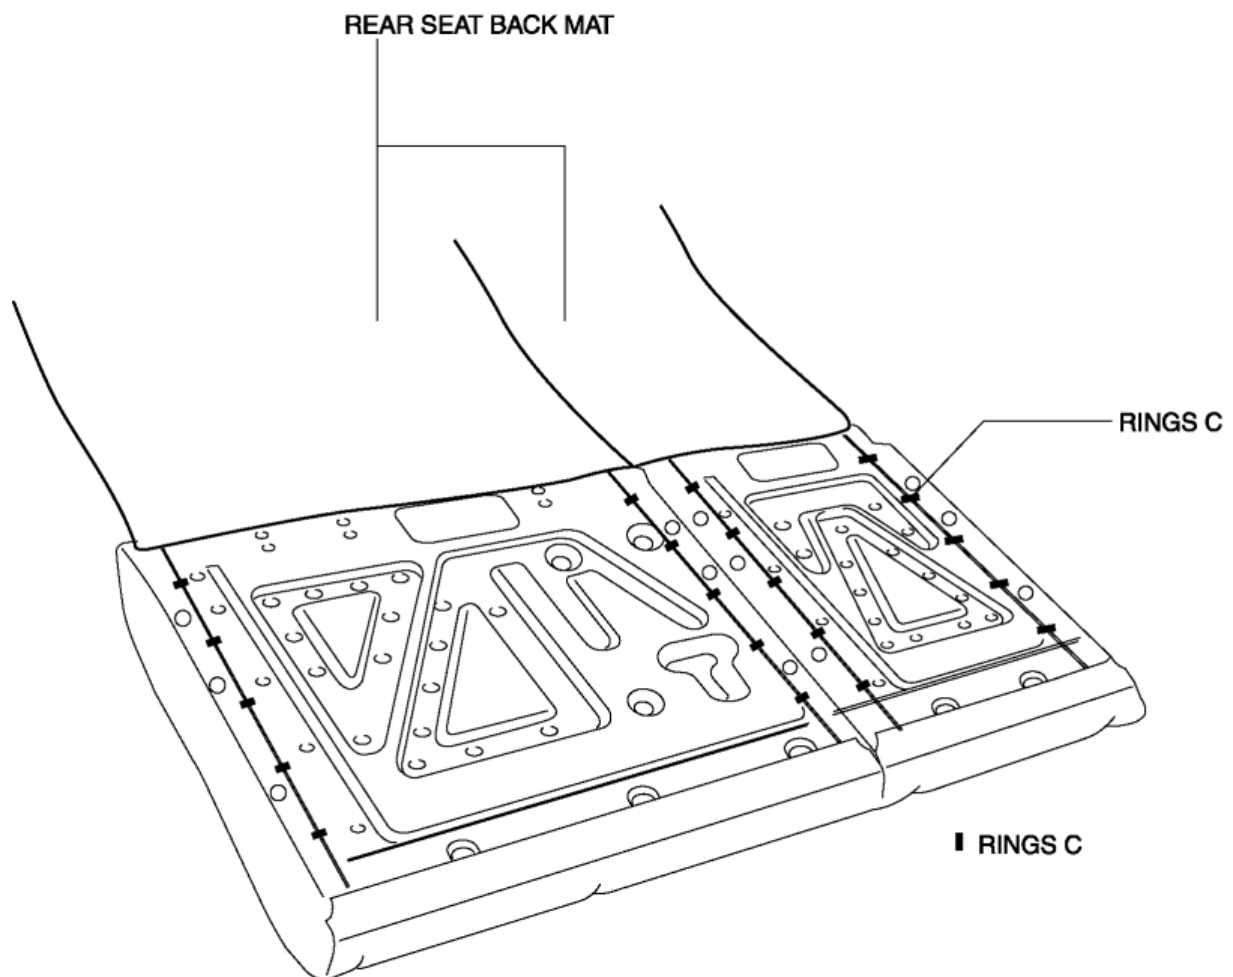


7. Remove the nuts then remove the rear seat center armrest.

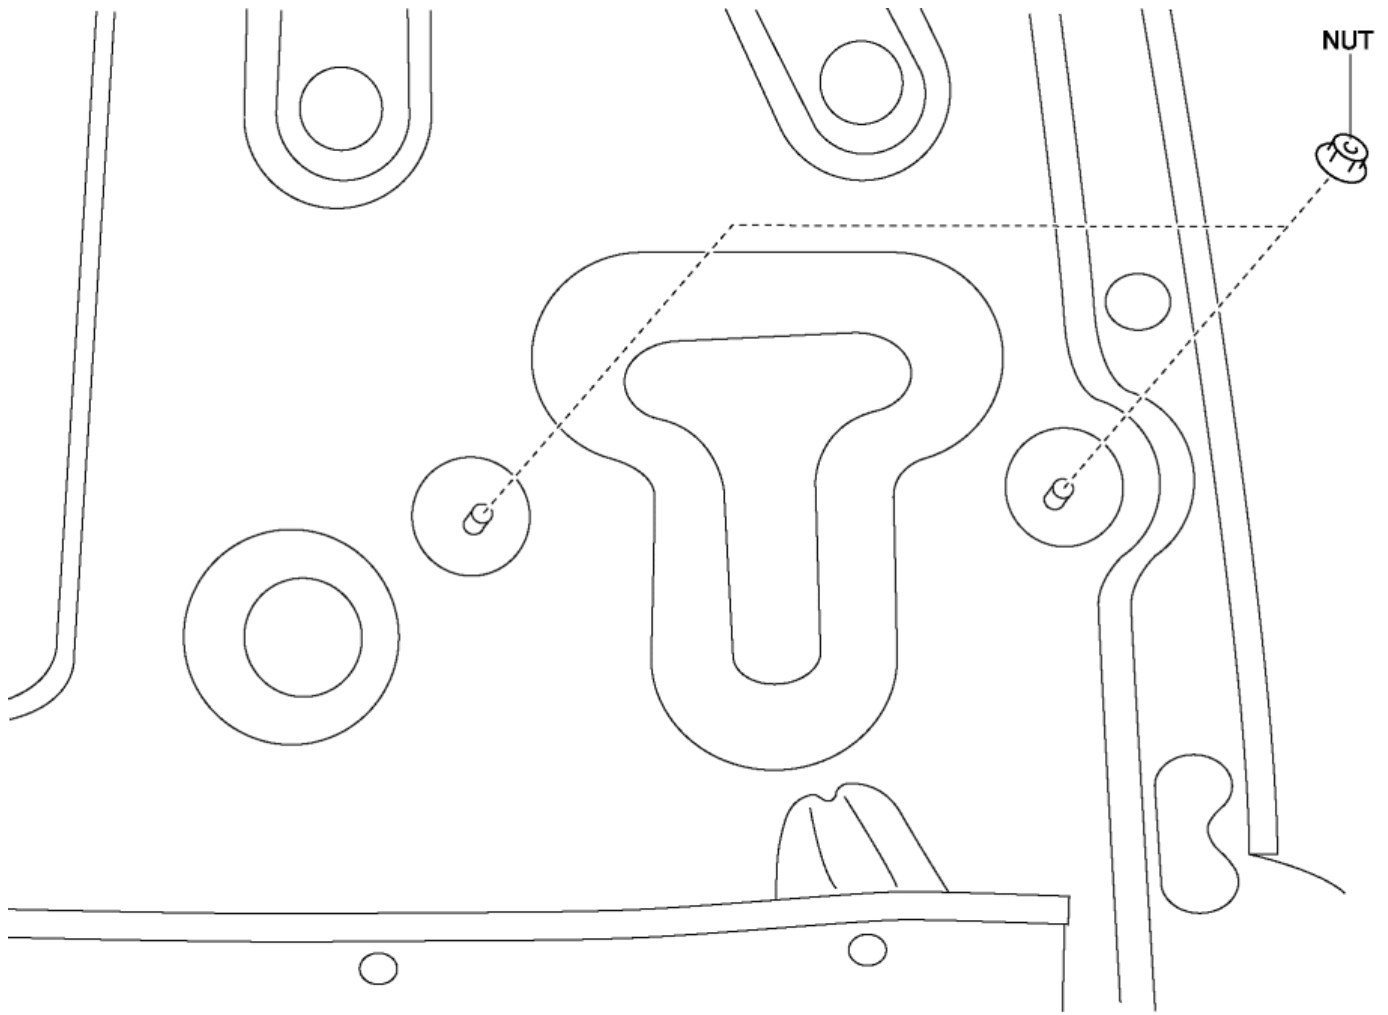


NUT: 7—10 N·m {72—101 kgf·cm, 62—88 in·lbf}

8. Peel back the rear seat back trim and pad, release the pole guide tabs in the direction of arrow (1) shown in the figure, then pull out the pole guides in the direction of arrow (2).

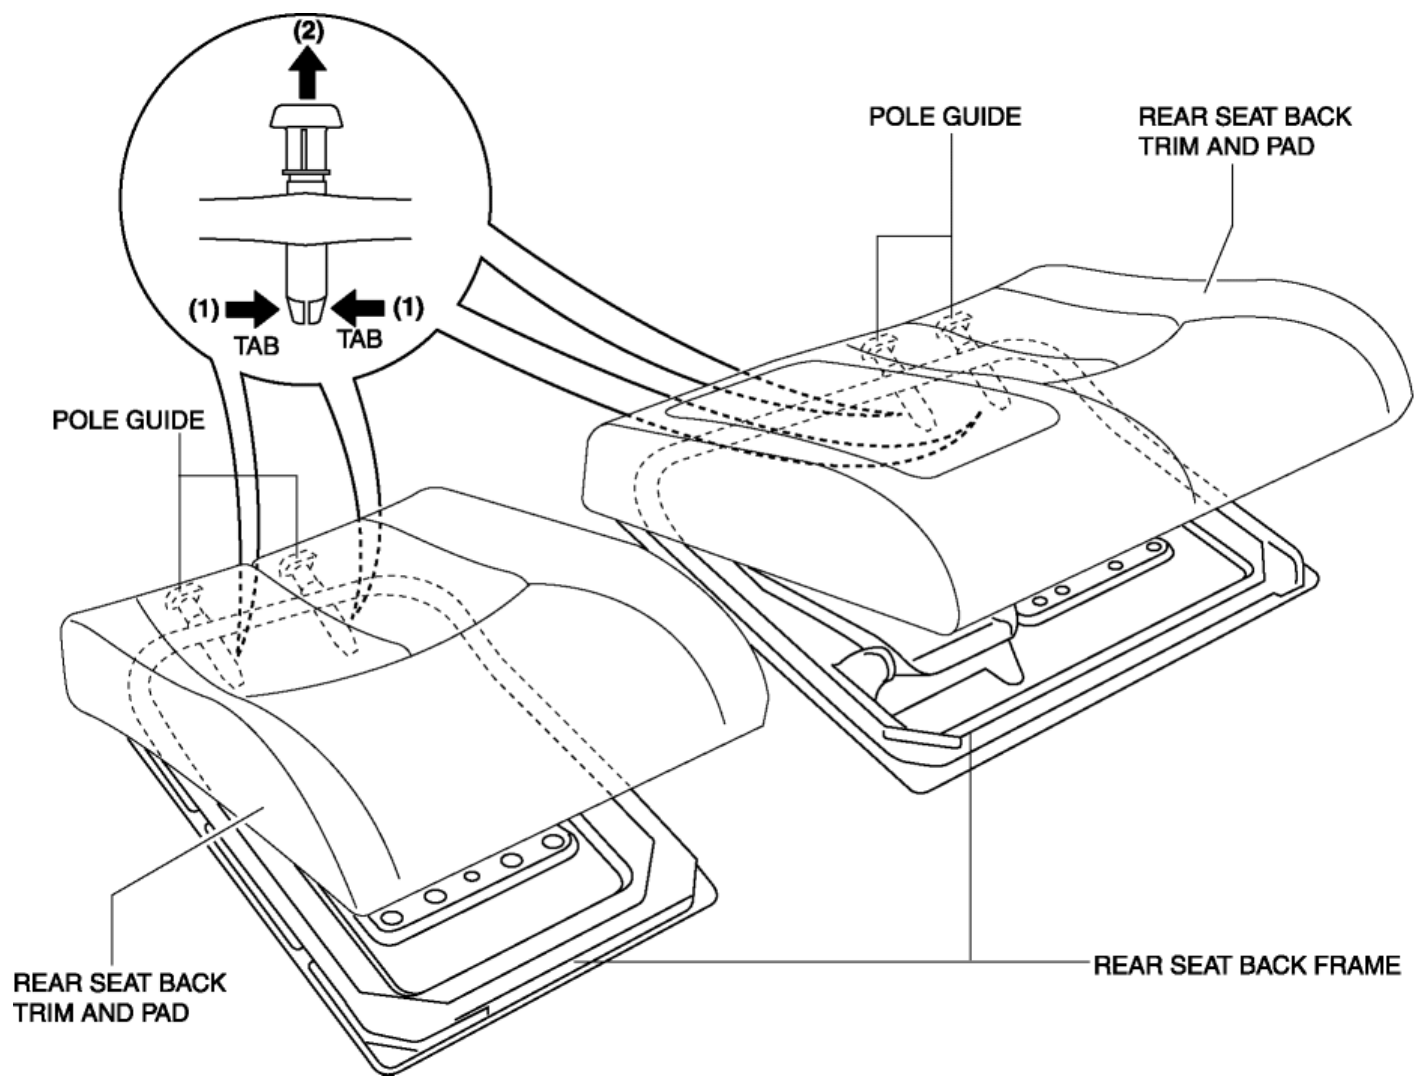

9. Remove the rear seat back frame from the rear seat back trim and pad by pulling it in the direction of the arrow.

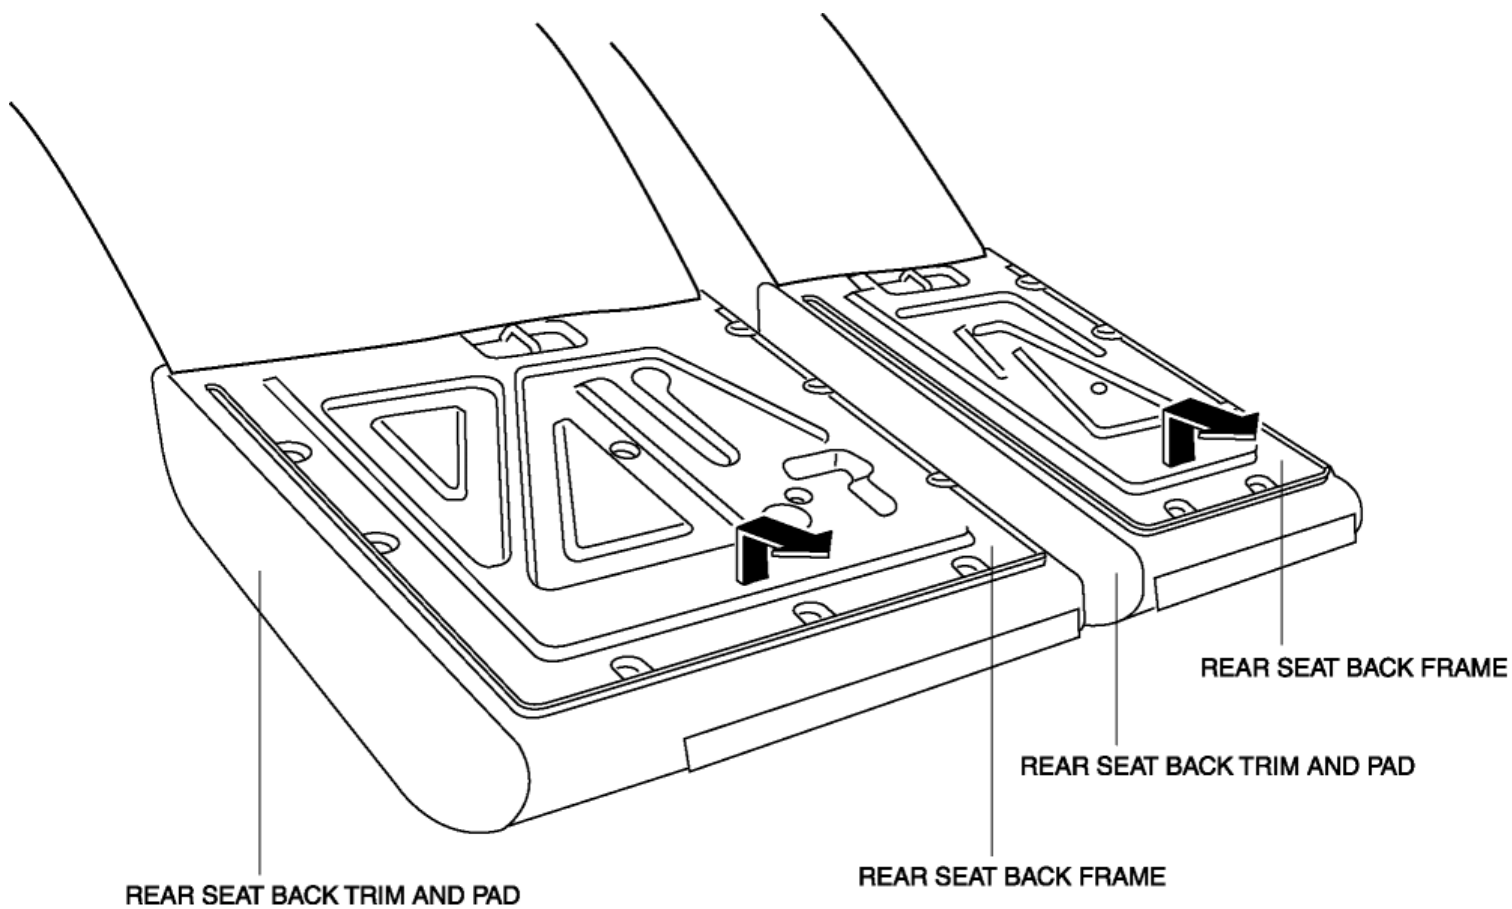

10. Install in the reverse order of removal.

[< Previous](#) [Next >](#)

© 2012 Mazda North American Operations, U.S.A.

[Back to Top](#)