



2012 - Mazda6 - Body and Accessories

REAR SEAT CUSHION REMOVAL/ INSTALLATION

1. Detach the hooks from the grommets by pulling the rear seat cushion in the direction of the arrow shown in the figure.

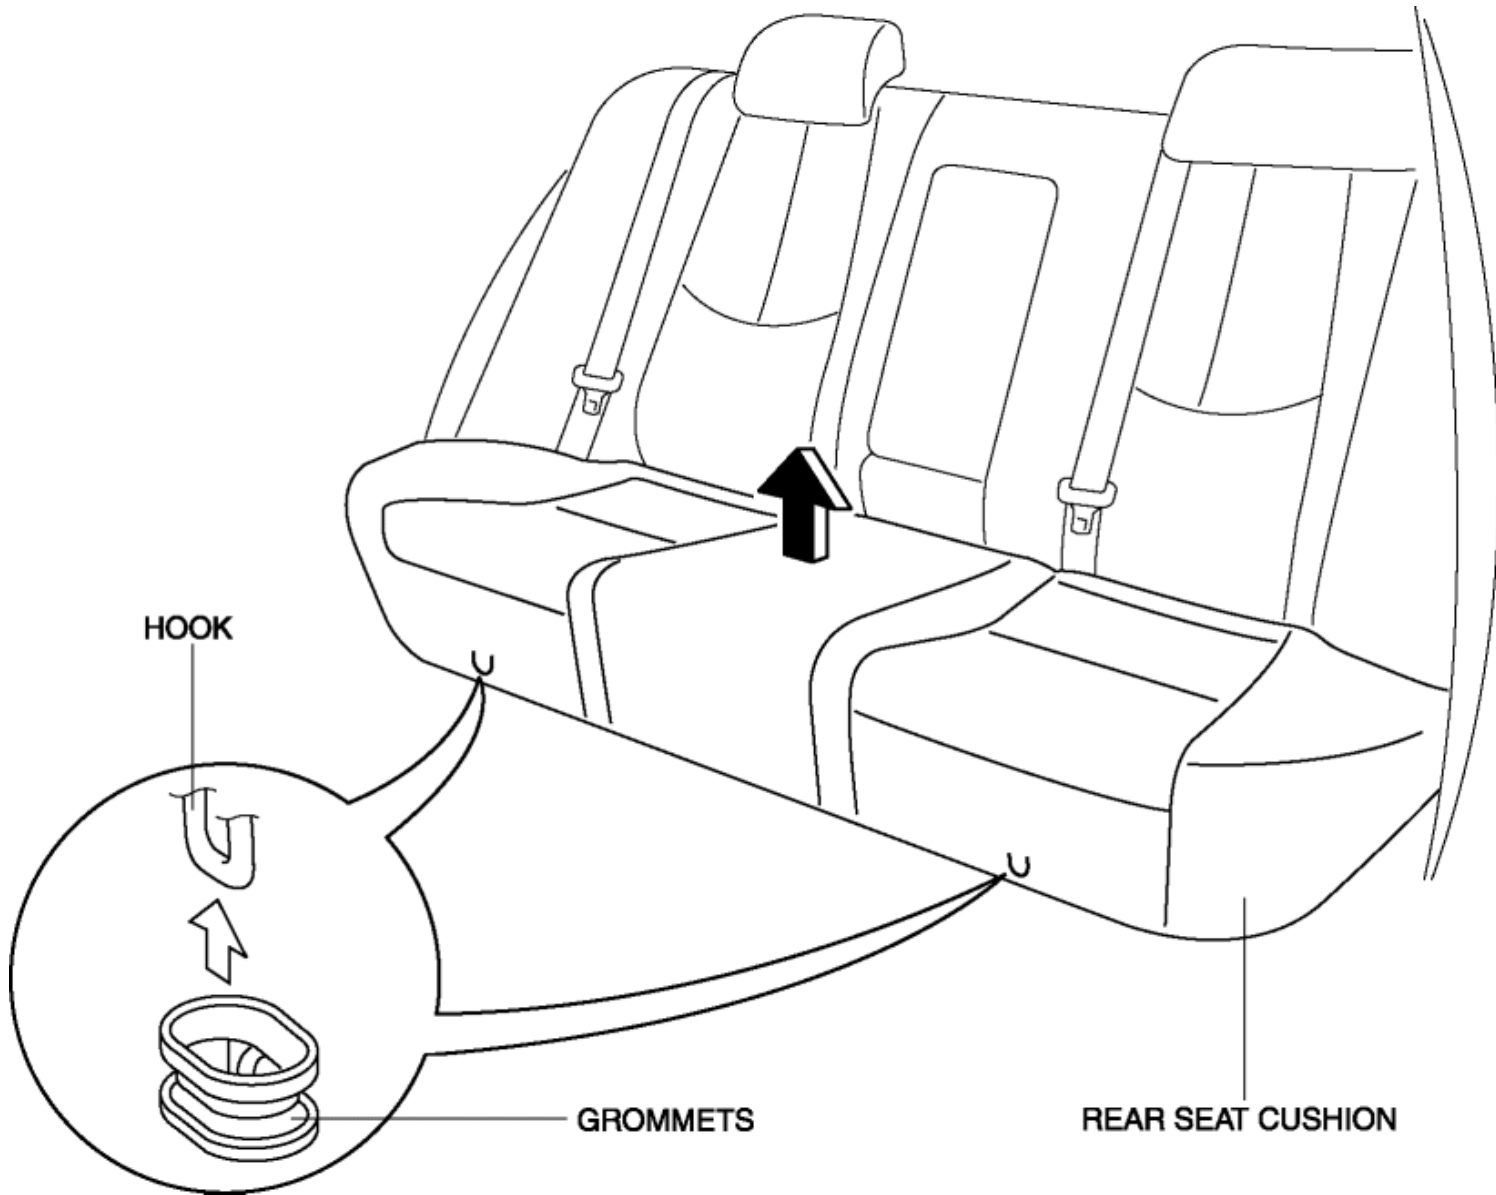

2. From the backside of the seat, detach the hook in the direction of arrow (1) shown in the figure, then remove the rear seat cushion by pulling it in the direction of arrow (2).

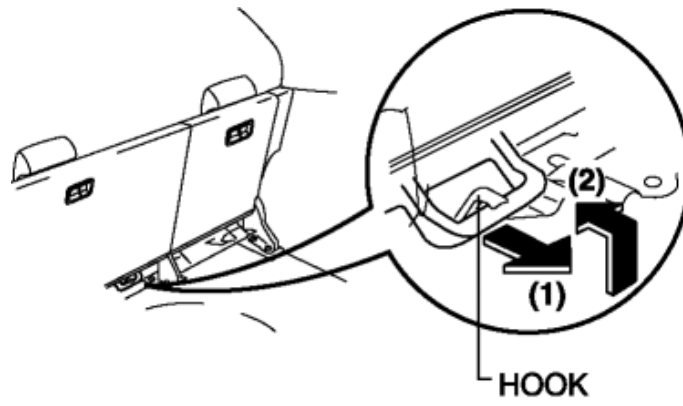

3. Install in the reverse order of removal.

[< Previous](#) [Next >](#)


© 2012 Mazda North American Operations, U.S.A.

[Back to Top](#)


2012 - Mazda6 - Body and Accessories

REAR SEAT CUSHION REMOVAL/ INSTALLATION

1. Detach the hooks from the grommets by pulling the rear seat cushion in the direction of the arrow shown in the figure.

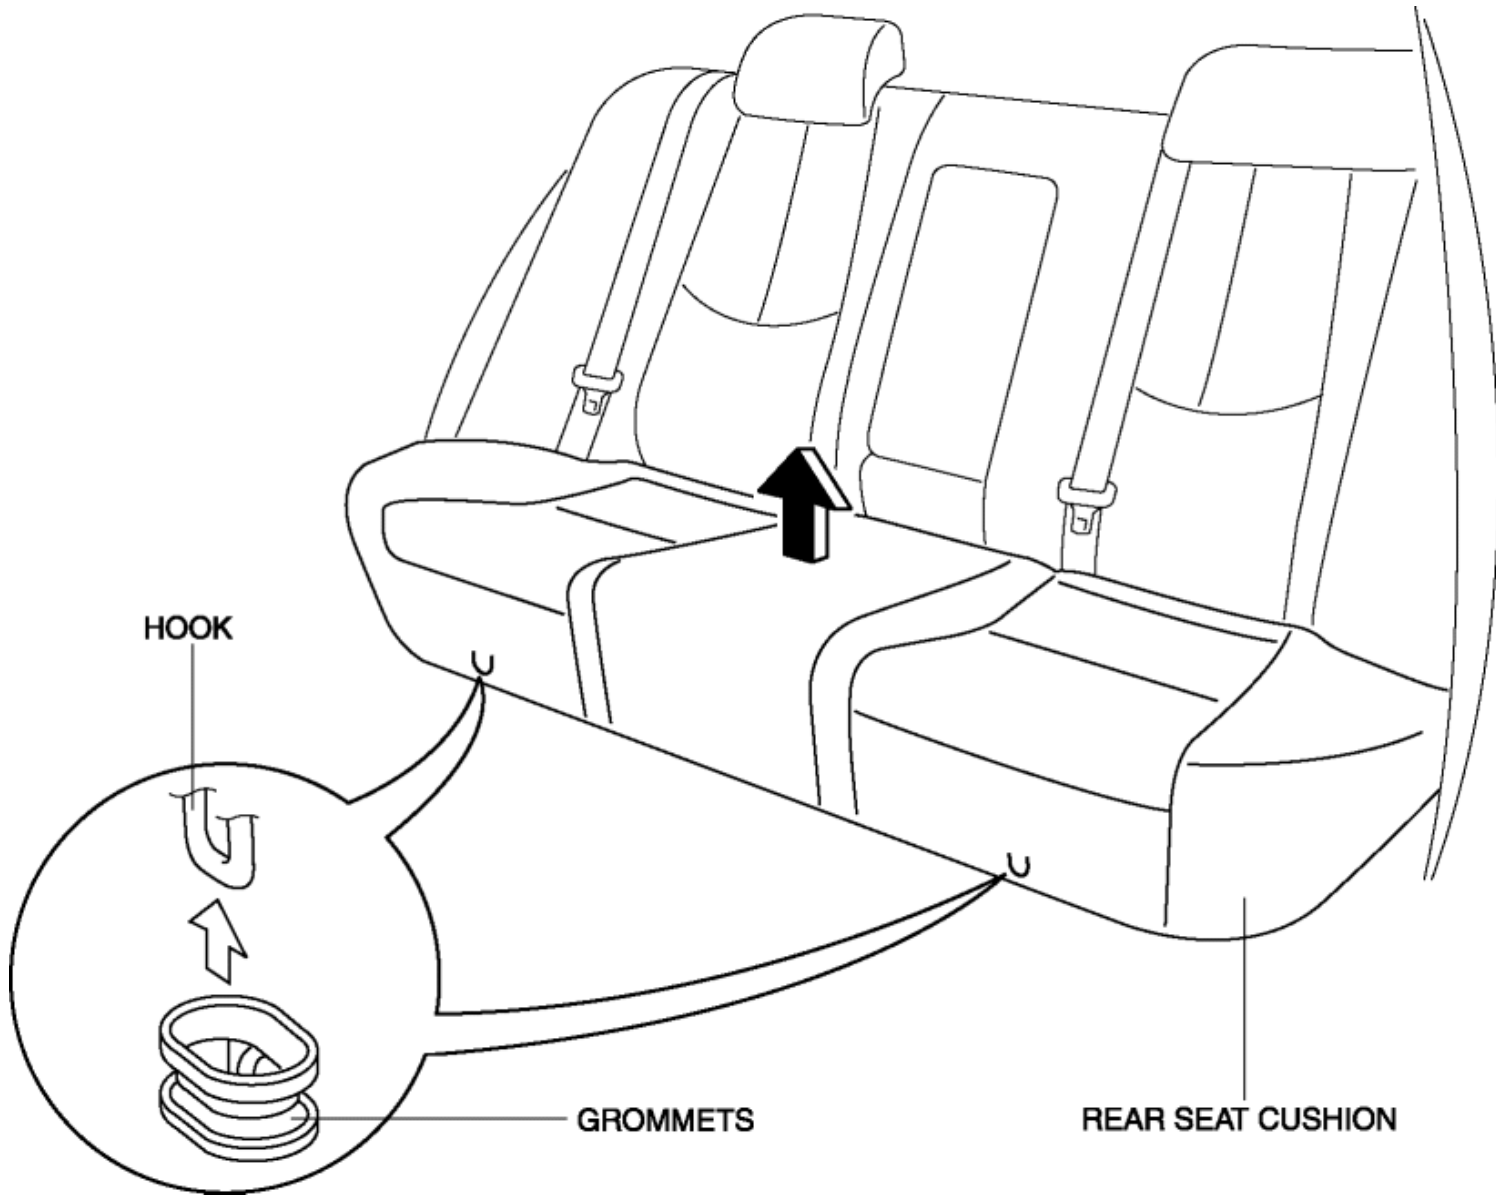

2. From the backside of the seat, detach the hook in the direction of arrow (1) shown in the figure, then remove the rear seat cushion by pulling it in the direction of arrow (2).

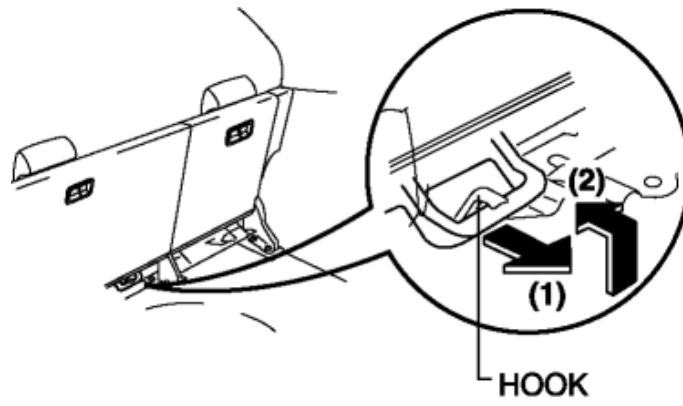

3. Install in the reverse order of removal.

[< Previous](#) [Next >](#)

© 2012 Mazda North American Operations, U.S.A.

[Back to Top](#)