


2012 - Mazda6 - Body and Accessories

REAR SEAT CUSHION TRIM REMOVAL/ INSTALLATION

1. Remove the rear seat cushion. (See [REAR SEAT CUSHION REMOVAL/ INSTALLATION](#).)
2. Remove rings C, then remove the rear seat cushion trim from the rear seat cushion pad.

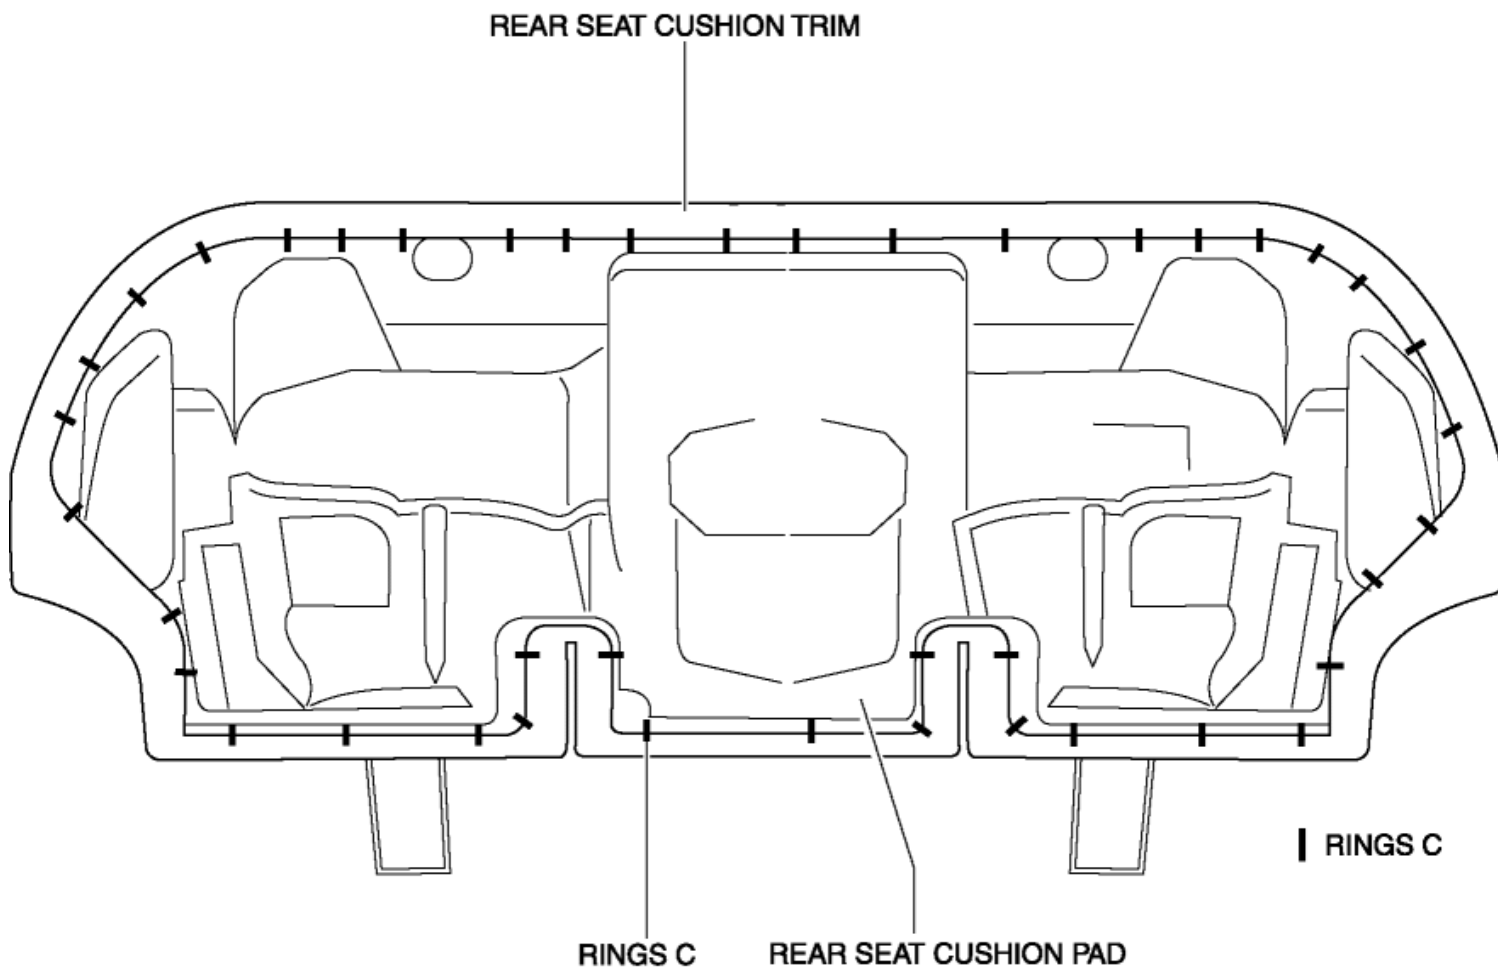


3. Install in the reverse order of removal.

2012 - Mazda6 - Body and Accessories

REAR SEAT CUSHION TRIM REMOVAL/ INSTALLATION

1. Remove the rear seat cushion. (See [REAR SEAT CUSHION REMOVAL/ INSTALLATION](#).)
2. Remove rings C, then remove the rear seat cushion trim from the rear seat cushion pad.

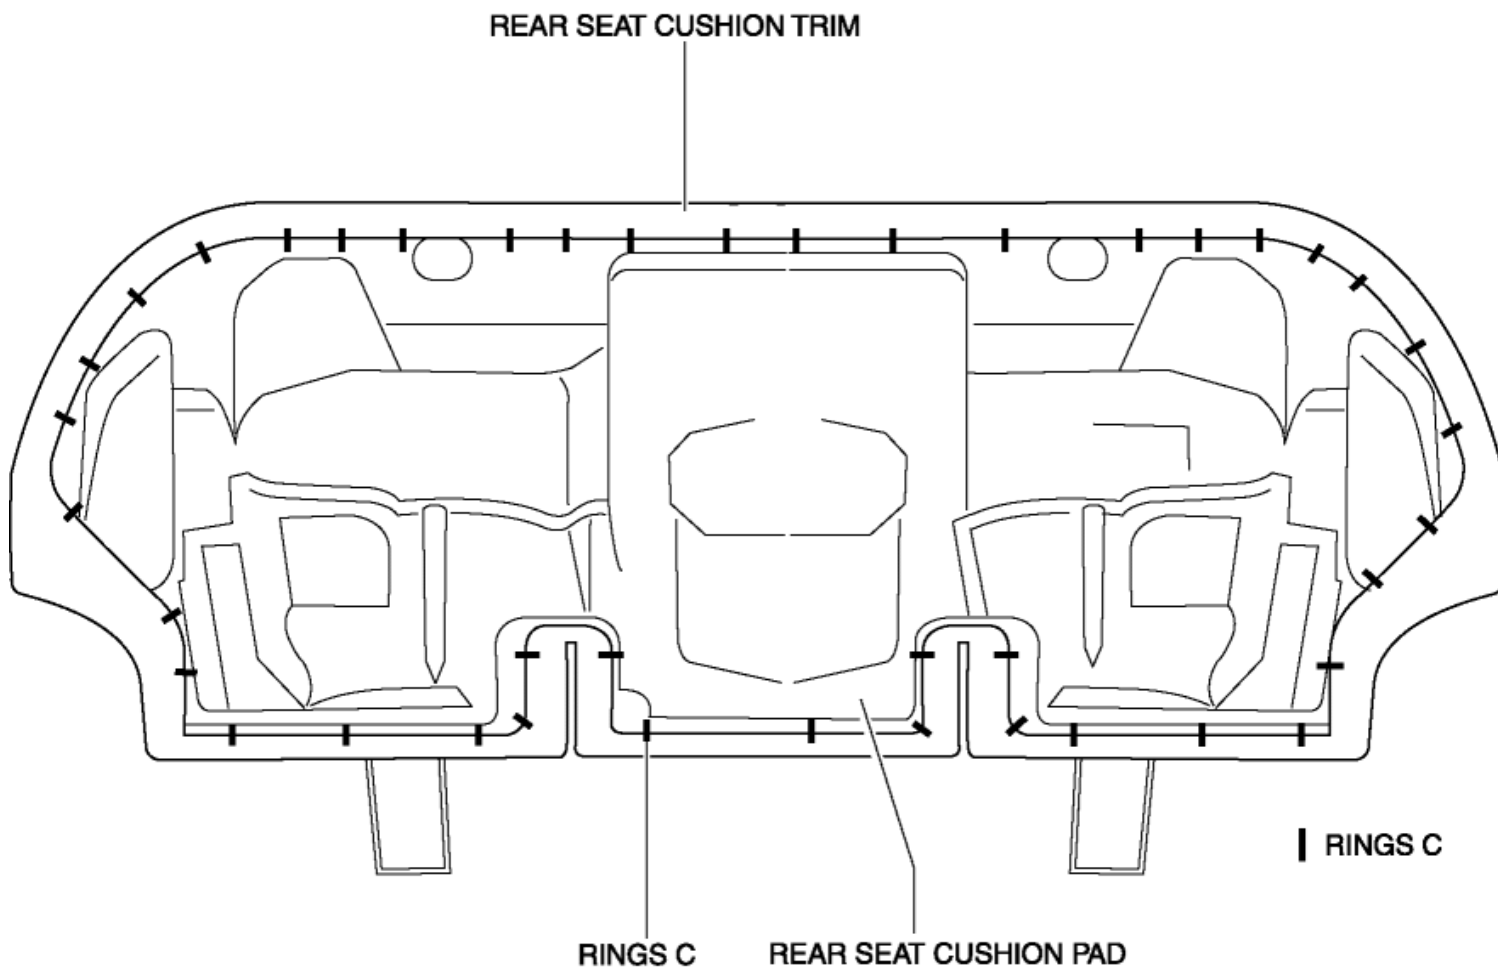

3. Install in the reverse order of removal.