


2012 - Mazda6 - Body and Accessories

SECURITY AND LOCKS LOCATION INDEX







Locks and Openers

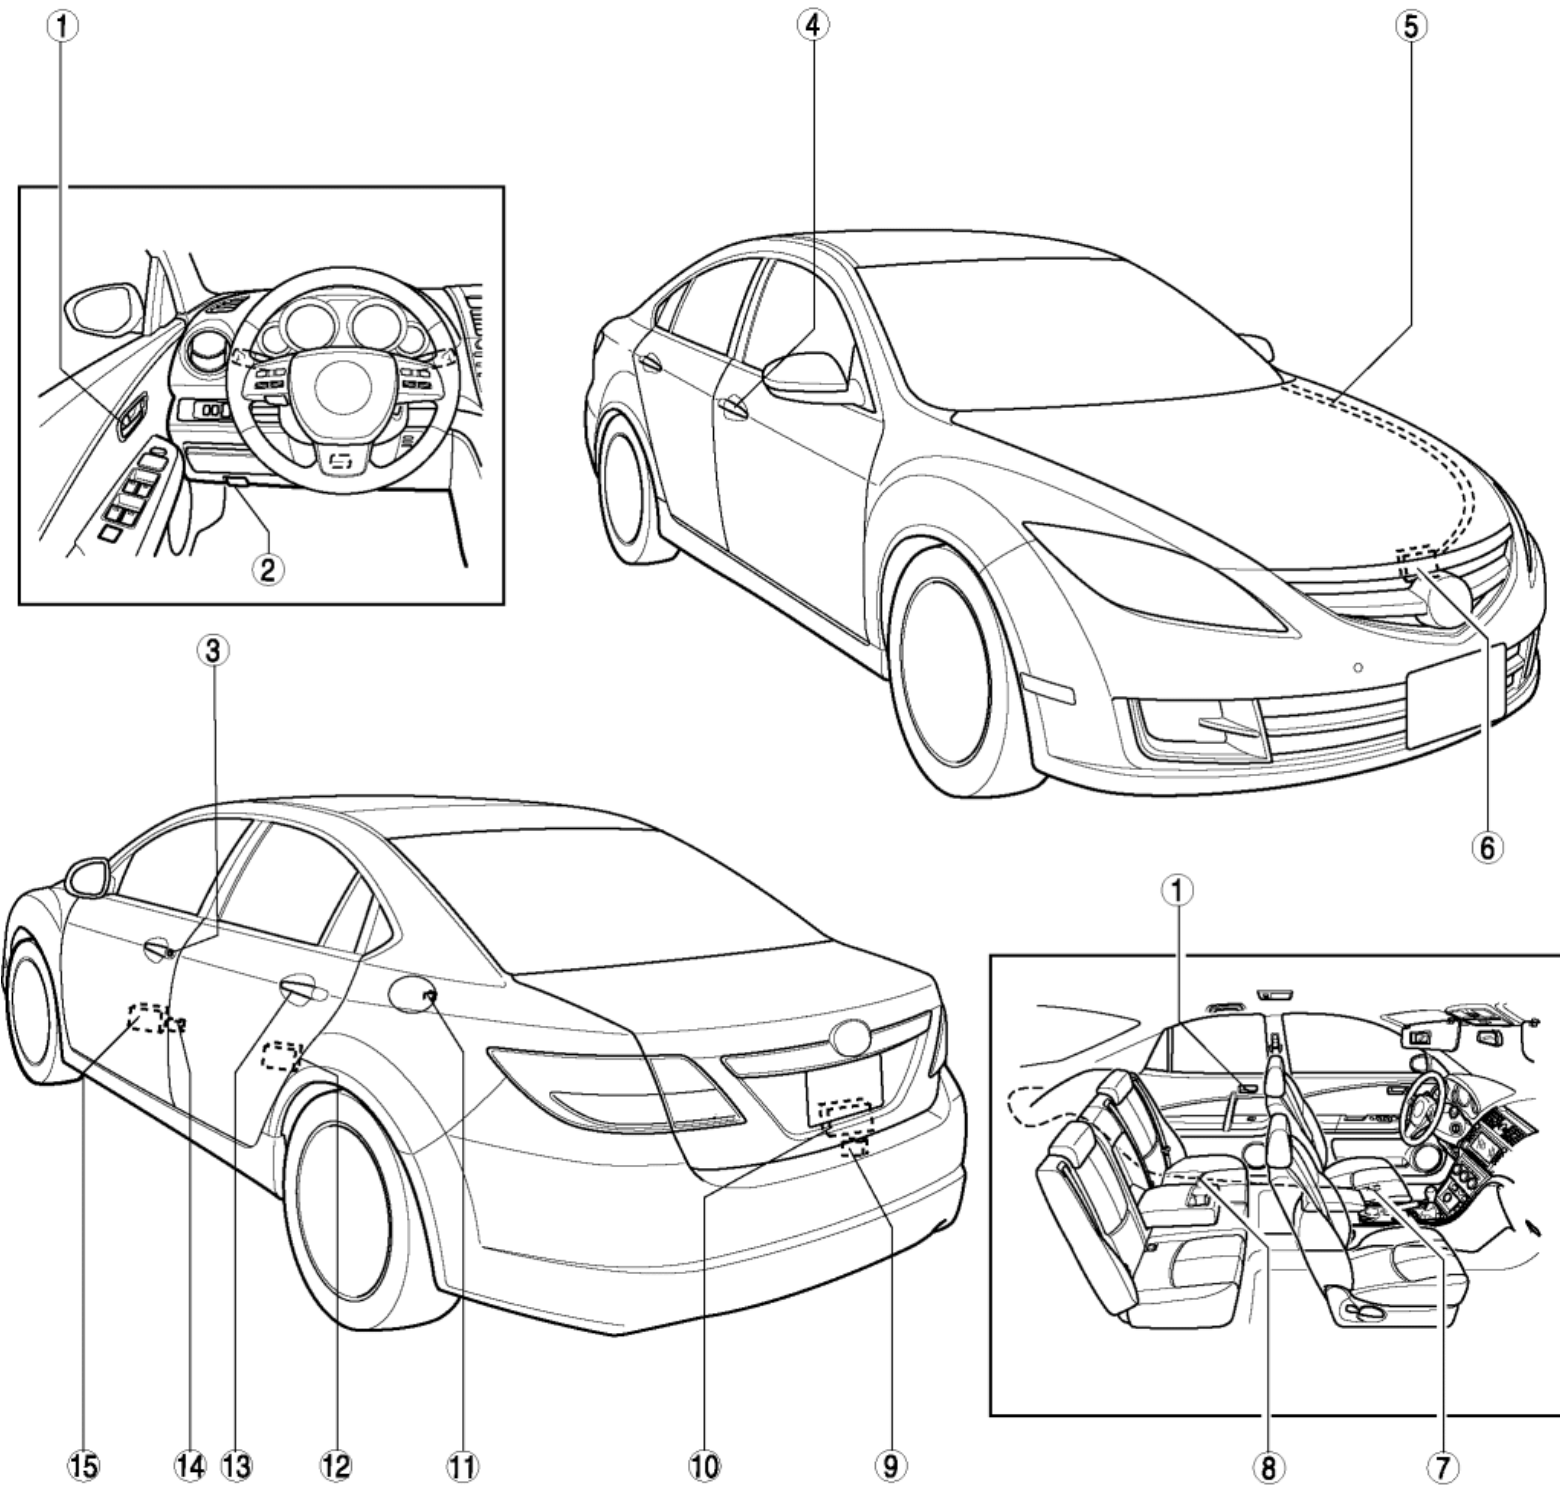

1	Inner handle (See INNER HANDLE REMOVAL/ INSTALLATION.) (See DOOR LOCK SWITCH REMOVAL/ INSTALLATION.) (See DOOR LOCK SWITCH INSPECTION.)
2	Hood release lever (See HOOD LATCH AND RELEASE LEVER REMOVAL/ INSTALLATION.)
3	Front door key cylinder (See FRONT DOOR KEY CYLINDER REMOVAL/ INSTALLATION.)
4	Front outer handle (See FRONT OUTER HANDLE REMOVAL/ INSTALLATION.)
5	Hood release cable (See HOOD LATCH AND RELEASE LEVER REMOVAL/ INSTALLATION.)
6	Hood latch (See HOOD LATCH AND RELEASE LEVER REMOVAL/ INSTALLATION.)
7	Fuel-filler lid opener lever (See FUEL-FILLER LID OPENER AND LEVER REMOVAL/ INSTALLATION.)
8	Fuel-filler lid opener cable (See FUEL-FILLER LID OPENER CABLE REMOVAL/ INSTALLATION.)
9	Trunk lid lock striker (See TRUNK LID LOCK STRIKER REMOVAL/ INSTALLATION.)
10	Trunk lid latch and release actuator (See TRUNK LID LATCH AND RELEASE ACTUATOR REMOVAL/ INSTALLATION.) (See TRUNK LID LATCH AND RELEASE ACTUATOR INSPECTION.) (See TRUNK LID LATCH SWITCH INSPECTION.) (See TRUNK LID RELEASE ACTUATOR INSPECTION.) (See TRUNK LID LATCH MANUAL RELEASE PROCEDURE.)
11	Fuel-filler lid opener (See FUEL-FILLER LID OPENER AND LEVER REMOVAL/ INSTALLATION.)
12	Rear door latch and lock actuator (See REAR DOOR LATCH AND LOCK ACTUATOR REMOVAL/ INSTALLATION.) (See REAR DOOR LATCH AND LOCK ACTUATOR INSPECTION.) (See REAR DOOR LOCK ACTUATOR INSPECTION.) (See REAR DOOR LATCH SWITCH INSPECTION.)
13	Rear outer handle (See REAR OUTER HANDLE REMOVAL/ INSTALLATION.)
14	Door lock striker


	(See DOOR LOCK STRIKER REMOVAL/ INSTALLATION.)
	Front door latch and lock actuator (See FRONT DOOR LATCH AND LOCK ACTUATOR REMOVAL/ INSTALLATION.) (See FRONT DOOR LATCH AND LOCK ACTUATOR INSPECTION.)
15	(See FRONT DOOR LATCH SWITCH INSPECTION.) (See FRONT DOOR LOCK ACTUATOR INSPECTION.) (See DOOR LOCK-LINK SWITCH INSPECTION.) (See FRONT DOOR KEY CYLINDER SWITCH INSPECTION.)

Advanced Keyless Entry And Push Button Start System/ Immobilizer System

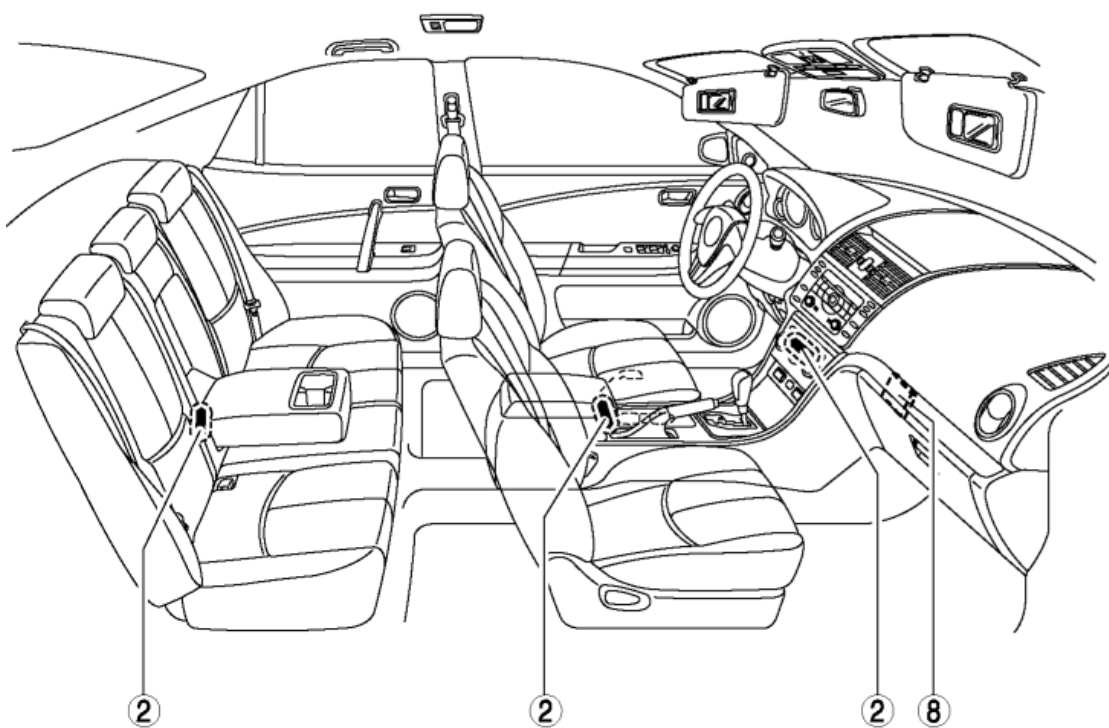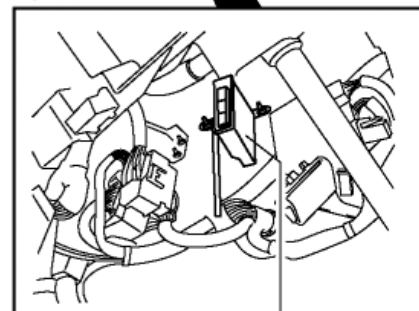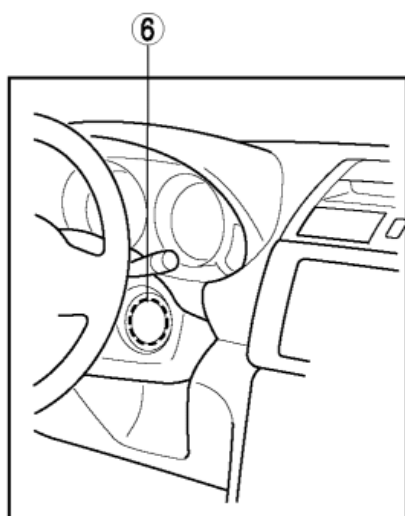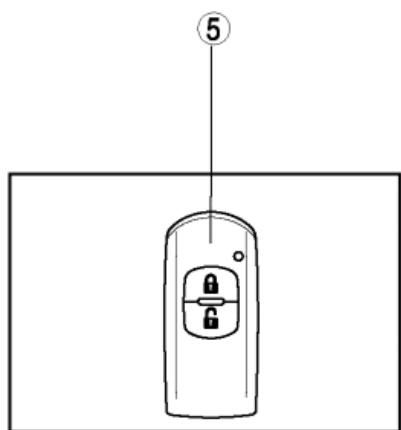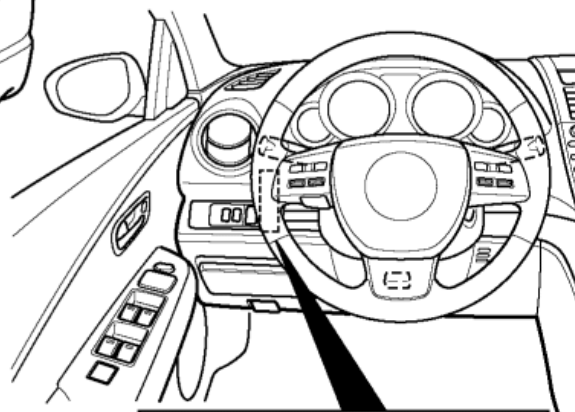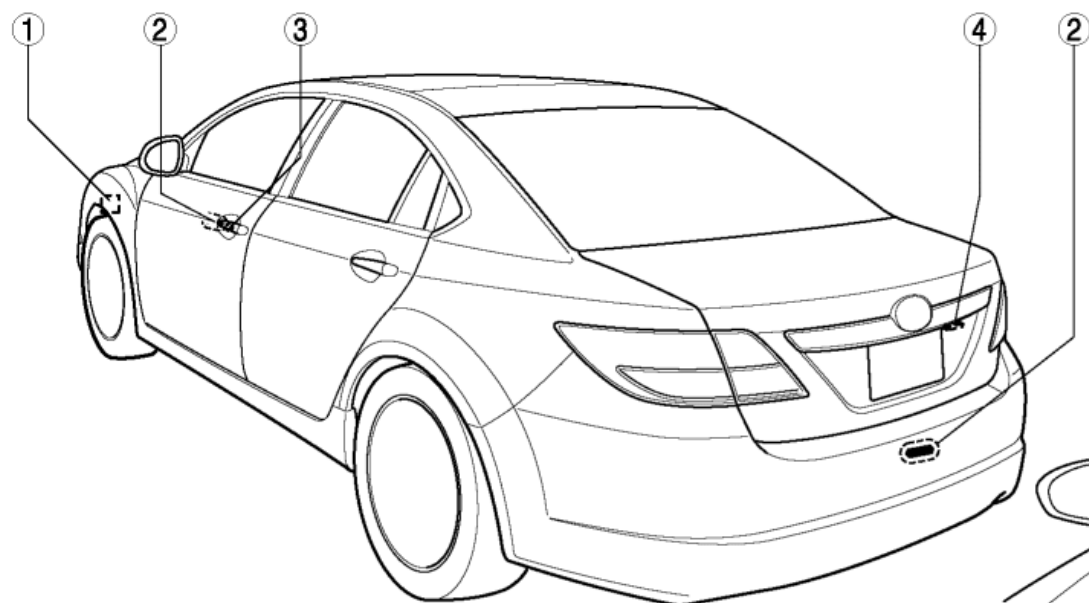

	Keyless beeper
1	(See KEYLESS BEEPER REMOVAL/ INSTALLATION [ADVANCED KEYLESS ENTRY AND PUSH BUTTON START SYSTEM] .) (See KEYLESS BEEPER INSPECTION [ADVANCED KEYLESS ENTRY AND PUSH BUTTON START SYSTEM] .)
	Keyless antenna
2	(See KEYLESS ANTENNA REMOVAL/ INSTALLATION [ADVANCED KEYLESS ENTRY AND PUSH BUTTON START SYSTEM] .) Touch sensor (See TOUCH SENSOR REMOVAL/ INSTALLATION [ADVANCED KEYLESS ENTRY AND PUSH BUTTON START SYSTEM] .)
	Request switch
3	(See REQUEST SWITCH REMOVAL/ INSTALLATION [ADVANCED KEYLESS ENTRY AND PUSH BUTTON START SYSTEM] .) (See REQUEST SWITCH INSPECTION [ADVANCED KEYLESS ENTRY AND PUSH BUTTON START SYSTEM] .)
	Trunk lid opener switch
4	(See TRUNK LID OPENER SWITCH REMOVAL/ INSTALLATION .) (See TRUNK LID OPENER SWITCH INSPECTION .)
	Advanced key
5	(See ADVANCED KEY ID CODE REGISTRATION [ADVANCED KEYLESS ENTRY AND PUSH BUTTON START SYSTEM] .) (See CLEARING ADVANCED KEY [ADVANCED KEYLESS ENTRY AND PUSH BUTTON START SYSTEM] .) (See ADVANCED KEY BATTERY REPLACEMENT [ADVANCED KEYLESS ENTRY AND PUSH BUTTON START SYSTEM] .)
	Coil antenna
6	(See COIL ANTENNA REMOVAL/ INSTALLATION [ADVANCED KEYLESS ENTRY AND PUSH BUTTON START SYSTEM] .)
	Keyless control module
7	(See KEYLESS CONTROL MODULE REMOVAL/ INSTALLATION [ADVANCED KEYLESS ENTRY AND PUSH BUTTON START SYSTEM] .) (See KEYLESS CONTROL MODULE INSPECTION [ADVANCED KEYLESS ENTRY AND PUSH BUTTON START SYSTEM] .) (See STEERING LOCK UNIT ID CODE REGISTRATION [ADVANCED KEYLESS ENTRY AND PUSH BUTTON START SYSTEM] .) (See KEYLESS CONTROL MODULE CONFIGURATION [ADVANCED KEYLESS ENTRY AND PUSH BUTTON START SYSTEM] .) (See PERSONALIZATION FEATURES SETTING PROCEDURE .) (See IMMOBILIZER SYSTEM-RELATED PARTS PROGRAMMING [ADVANCED KEYLESS ENTRY AND PUSH BUTTON START SYSTEM] .)
	Keyless receiver
8	(See KEYLESS RECEIVER INSPECTION [KEYLESS ENTRY SYSTEM] .) (See KEYLESS RECEIVER INSPECTION [ADVANCED KEYLESS ENTRY AND PUSH BUTTON START SYSTEM] .)

Keyless Entry System/ Immobilizer System

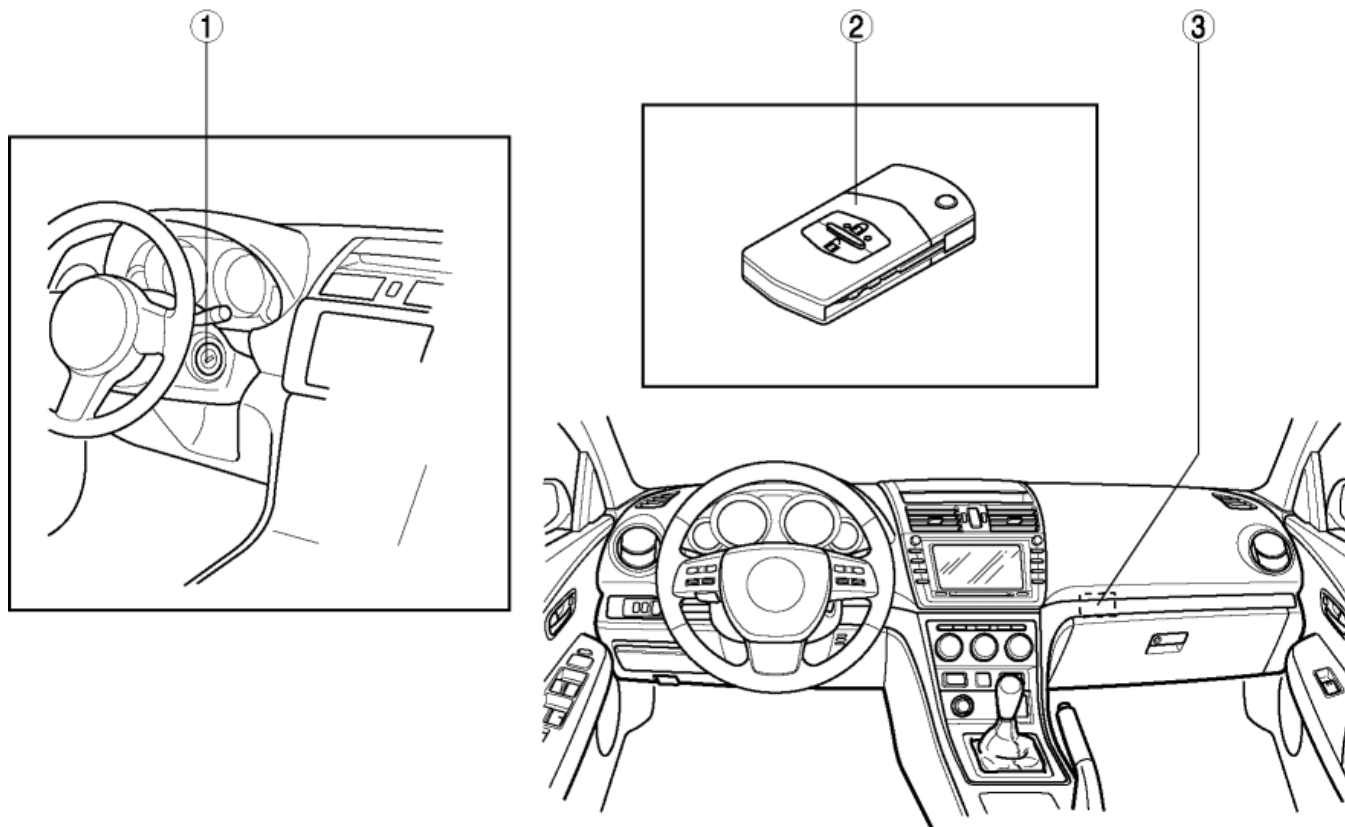


Coil antenna
1 (See COIL ANTENNA REMOVAL/ INSTALLATION [KEYLESS ENTRY SYSTEM] .)
Transmitter
2 (See TRANSMITTER BATTERY REPLACEMENT [KEYLESS ENTRY SYSTEM] .)
(See TRANSMITTER ID CODE REGISTRATION [KEYLESS ENTRY SYSTEM] .)
Keyless receiver
3 (See KEYLESS RECEIVER REMOVAL/ INSTALLATION .)
(See KEYLESS RECEIVER INSPECTION [KEYLESS ENTRY SYSTEM] .)

2012 - Mazda6 - Body and Accessories

SECURITY AND LOCKS LOCATION INDEX







Locks and Openers

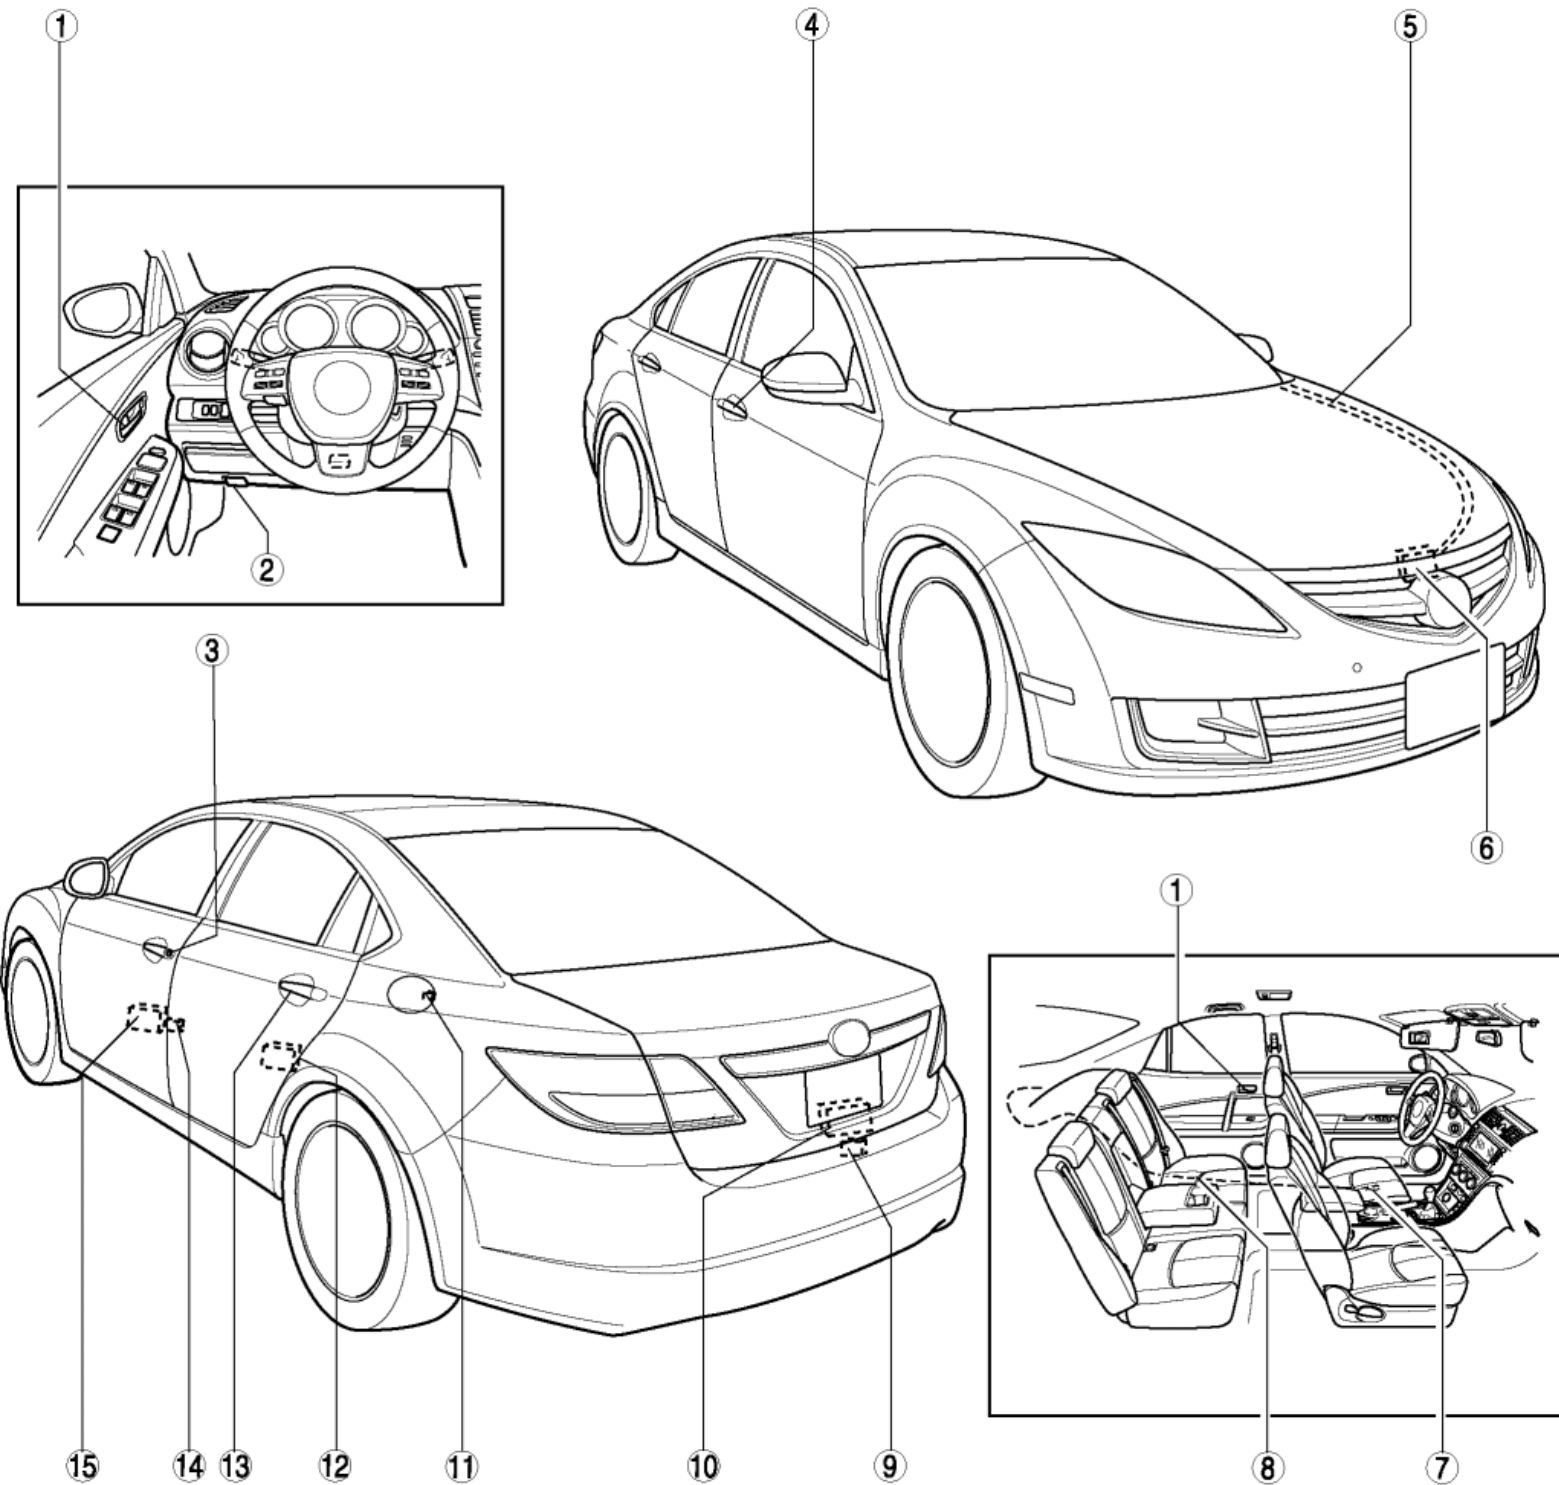

1	Inner handle (See INNER HANDLE REMOVAL/ INSTALLATION.) (See DOOR LOCK SWITCH REMOVAL/ INSTALLATION.) (See DOOR LOCK SWITCH INSPECTION.)
2	Hood release lever (See HOOD LATCH AND RELEASE LEVER REMOVAL/ INSTALLATION.)
3	Front door key cylinder (See FRONT DOOR KEY CYLINDER REMOVAL/ INSTALLATION.)
4	Front outer handle (See FRONT OUTER HANDLE REMOVAL/ INSTALLATION.)
5	Hood release cable (See HOOD LATCH AND RELEASE LEVER REMOVAL/ INSTALLATION.)
6	Hood latch (See HOOD LATCH AND RELEASE LEVER REMOVAL/ INSTALLATION.)
7	Fuel-filler lid opener lever (See FUEL-FILLER LID OPENER AND LEVER REMOVAL/ INSTALLATION.)
8	Fuel-filler lid opener cable (See FUEL-FILLER LID OPENER CABLE REMOVAL/ INSTALLATION.)
9	Trunk lid lock striker (See TRUNK LID LOCK STRIKER REMOVAL/ INSTALLATION.)
10	Trunk lid latch and release actuator (See TRUNK LID LATCH AND RELEASE ACTUATOR REMOVAL/ INSTALLATION.) (See TRUNK LID LATCH AND RELEASE ACTUATOR INSPECTION.) (See TRUNK LID LATCH SWITCH INSPECTION.) (See TRUNK LID RELEASE ACTUATOR INSPECTION.) (See TRUNK LID LATCH MANUAL RELEASE PROCEDURE.)
11	Fuel-filler lid opener (See FUEL-FILLER LID OPENER AND LEVER REMOVAL/ INSTALLATION.)
12	Rear door latch and lock actuator (See REAR DOOR LATCH AND LOCK ACTUATOR REMOVAL/ INSTALLATION.) (See REAR DOOR LATCH AND LOCK ACTUATOR INSPECTION.) (See REAR DOOR LOCK ACTUATOR INSPECTION.) (See REAR DOOR LATCH SWITCH INSPECTION.)
13	Rear outer handle (See REAR OUTER HANDLE REMOVAL/ INSTALLATION.)
14	Door lock striker


	(See DOOR LOCK STRIKER REMOVAL/ INSTALLATION.)
	Front door latch and lock actuator (See FRONT DOOR LATCH AND LOCK ACTUATOR REMOVAL/ INSTALLATION.) (See FRONT DOOR LATCH AND LOCK ACTUATOR INSPECTION.)
15	(See FRONT DOOR LATCH SWITCH INSPECTION.) (See FRONT DOOR LOCK ACTUATOR INSPECTION.) (See DOOR LOCK-LINK SWITCH INSPECTION.) (See FRONT DOOR KEY CYLINDER SWITCH INSPECTION.)

Advanced Keyless Entry And Push Button Start System/ Immobilizer System

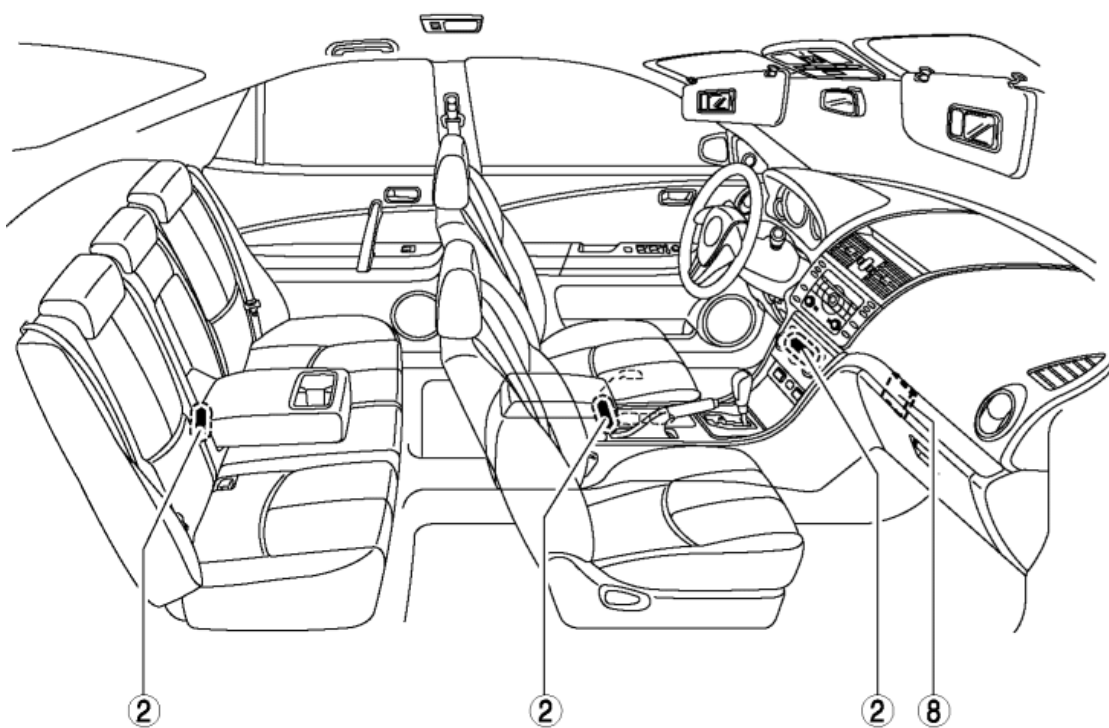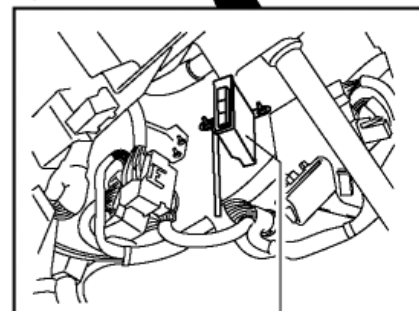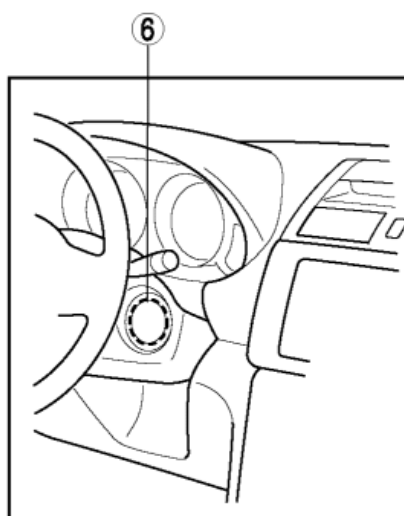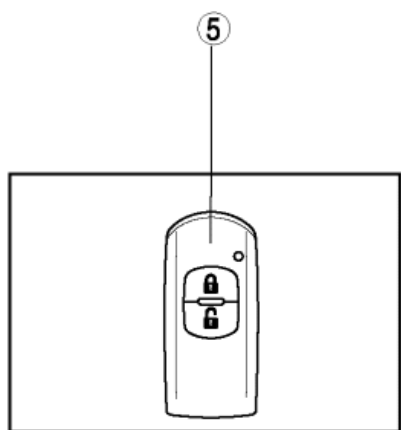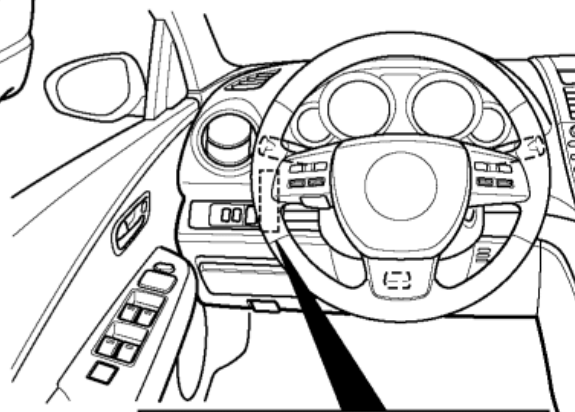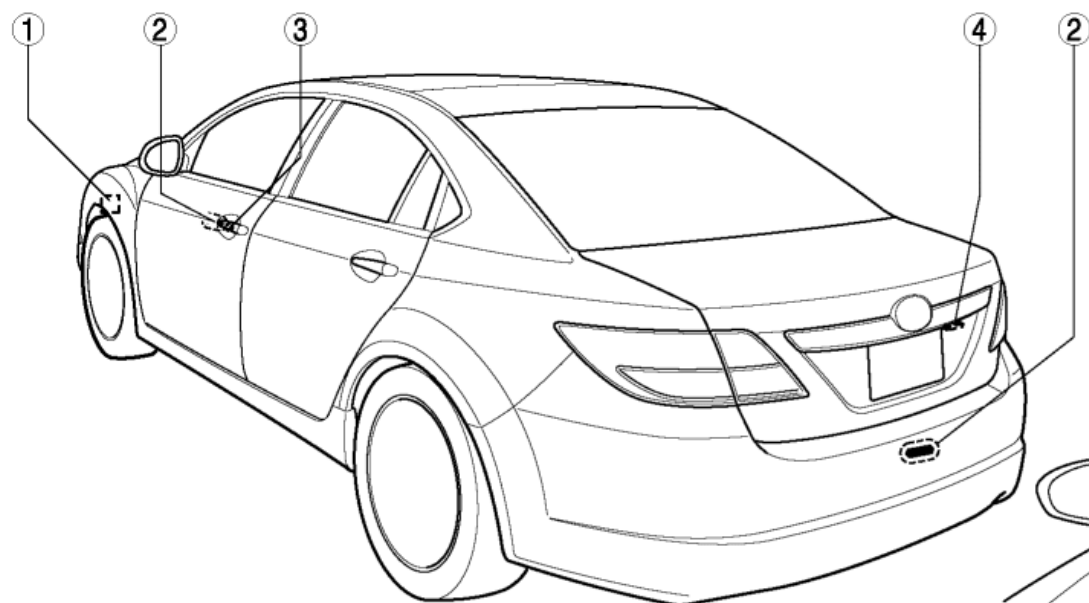

	Keyless beeper
1	(See KEYLESS BEEPER REMOVAL/ INSTALLATION [ADVANCED KEYLESS ENTRY AND PUSH BUTTON START SYSTEM] .) (See KEYLESS BEEPER INSPECTION [ADVANCED KEYLESS ENTRY AND PUSH BUTTON START SYSTEM] .)
	Keyless antenna
2	(See KEYLESS ANTENNA REMOVAL/ INSTALLATION [ADVANCED KEYLESS ENTRY AND PUSH BUTTON START SYSTEM] .) Touch sensor (See TOUCH SENSOR REMOVAL/ INSTALLATION [ADVANCED KEYLESS ENTRY AND PUSH BUTTON START SYSTEM] .)
	Request switch
3	(See REQUEST SWITCH REMOVAL/ INSTALLATION [ADVANCED KEYLESS ENTRY AND PUSH BUTTON START SYSTEM] .) (See REQUEST SWITCH INSPECTION [ADVANCED KEYLESS ENTRY AND PUSH BUTTON START SYSTEM] .)
	Trunk lid opener switch
4	(See TRUNK LID OPENER SWITCH REMOVAL/ INSTALLATION .) (See TRUNK LID OPENER SWITCH INSPECTION .)
	Advanced key
5	(See ADVANCED KEY ID CODE REGISTRATION [ADVANCED KEYLESS ENTRY AND PUSH BUTTON START SYSTEM] .) (See CLEARING ADVANCED KEY [ADVANCED KEYLESS ENTRY AND PUSH BUTTON START SYSTEM] .) (See ADVANCED KEY BATTERY REPLACEMENT [ADVANCED KEYLESS ENTRY AND PUSH BUTTON START SYSTEM] .)
	Coil antenna
6	(See COIL ANTENNA REMOVAL/ INSTALLATION [ADVANCED KEYLESS ENTRY AND PUSH BUTTON START SYSTEM] .)
	Keyless control module
7	(See KEYLESS CONTROL MODULE REMOVAL/ INSTALLATION [ADVANCED KEYLESS ENTRY AND PUSH BUTTON START SYSTEM] .) (See KEYLESS CONTROL MODULE INSPECTION [ADVANCED KEYLESS ENTRY AND PUSH BUTTON START SYSTEM] .) (See STEERING LOCK UNIT ID CODE REGISTRATION [ADVANCED KEYLESS ENTRY AND PUSH BUTTON START SYSTEM] .) (See KEYLESS CONTROL MODULE CONFIGURATION [ADVANCED KEYLESS ENTRY AND PUSH BUTTON START SYSTEM] .) (See PERSONALIZATION FEATURES SETTING PROCEDURE .) (See IMMOBILIZER SYSTEM-RELATED PARTS PROGRAMMING [ADVANCED KEYLESS ENTRY AND PUSH BUTTON START SYSTEM] .)
	Keyless receiver
8	(See KEYLESS RECEIVER INSPECTION [KEYLESS ENTRY SYSTEM] .) (See KEYLESS RECEIVER INSPECTION [ADVANCED KEYLESS ENTRY AND PUSH BUTTON START SYSTEM] .)

Keyless Entry System/ Immobilizer System

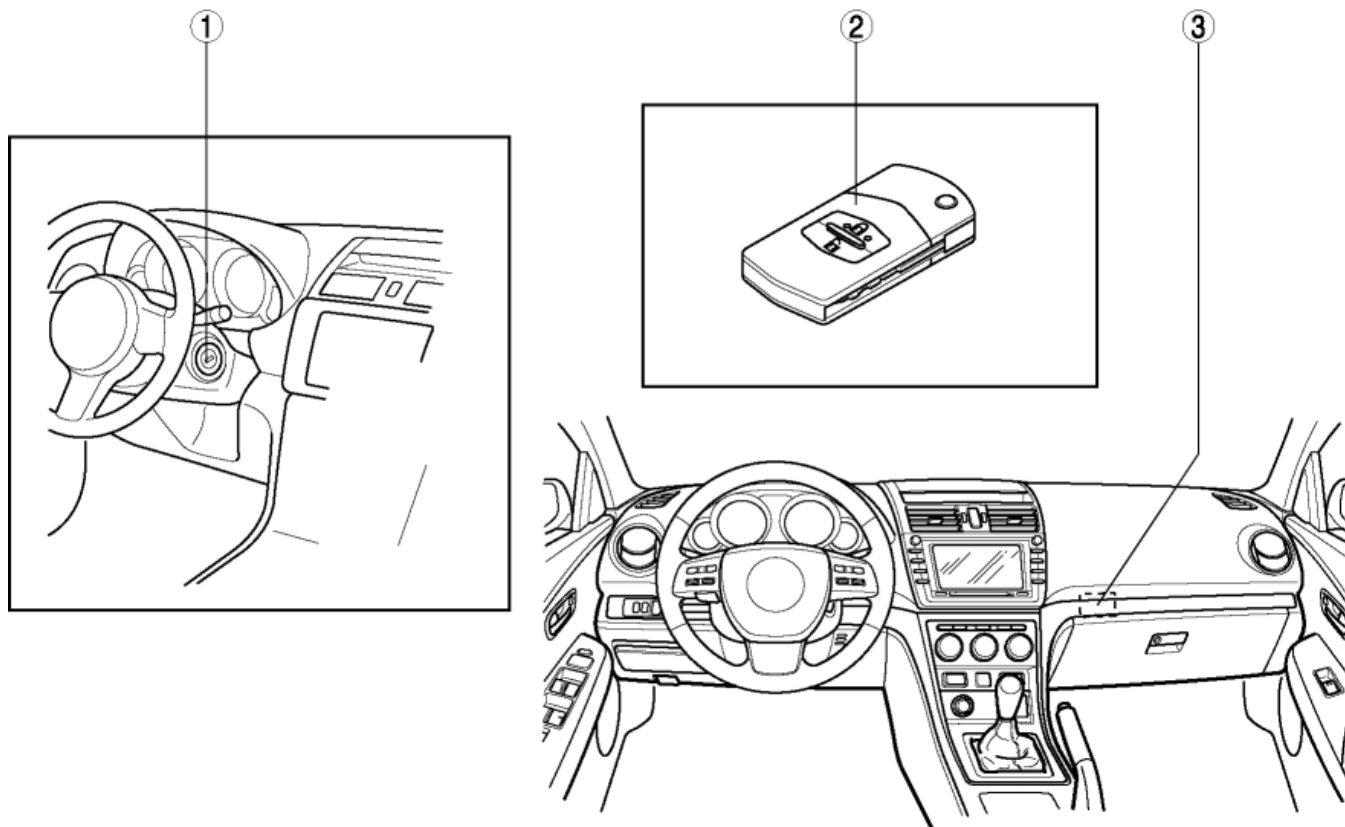

Coil antenna
1 (See COIL ANTENNA REMOVAL/ INSTALLATION [KEYLESS ENTRY SYSTEM] .)
Transmitter
2 (See TRANSMITTER BATTERY REPLACEMENT [KEYLESS ENTRY SYSTEM] .)
(See TRANSMITTER ID CODE REGISTRATION [KEYLESS ENTRY SYSTEM] .)
Keyless receiver
3 (See KEYLESS RECEIVER REMOVAL/ INSTALLATION .)
(See KEYLESS RECEIVER INSPECTION [KEYLESS ENTRY SYSTEM] .)