


2012 - Mazda6 - Body and Accessories

REAR DOOR LATCH AND LOCK ACTUATOR REMOVAL/ INSTALLATION

1. Fully open the rear door glass.
2. Disconnect the negative battery cable.
3. Remove the following parts:
 - a. Rear door trim (See [REAR DOOR TRIM REMOVAL/ INSTALLATION](#).)
 - b. Rear inner handle (See [INNER HANDLE REMOVAL/ INSTALLATION](#).)
 - c. Rear door speaker (See [REAR DOOR SPEAKER REMOVAL/ INSTALLATION](#).)
 - d. Rear door quarter glass (See [REAR DOOR QUARTER GLASS REMOVAL/ INSTALLATION](#).)
 - e. Rear door glass (See [REAR DOOR GLASS REMOVAL/ INSTALLATION](#).)
 - f. Rear door module panel (See [REAR DOOR MODULE PANEL REMOVAL/ INSTALLATION](#).)
4. Remove the screw.

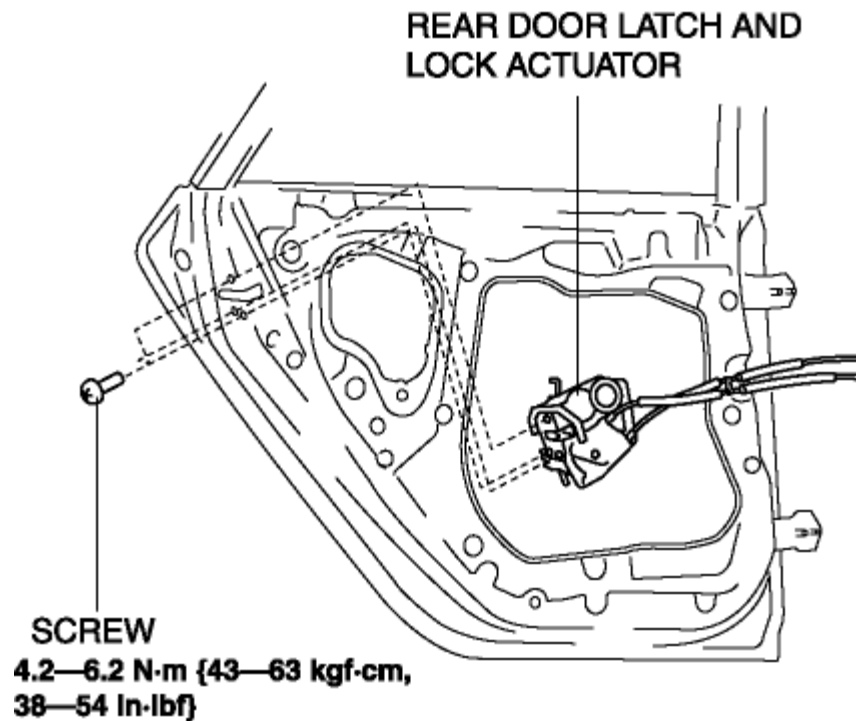


5. Remove the rear door latch and lock actuator.
6. Install in the reverse order of removal.

2012 - Mazda6 - Body and Accessories

REAR DOOR LATCH AND LOCK ACTUATOR REMOVAL/ INSTALLATION

1. Fully open the rear door glass.
2. Disconnect the negative battery cable.
3. Remove the following parts:
 - a. Rear door trim (See [REAR DOOR TRIM REMOVAL/ INSTALLATION](#).)
 - b. Rear inner handle (See [INNER HANDLE REMOVAL/ INSTALLATION](#).)
 - c. Rear door speaker (See [REAR DOOR SPEAKER REMOVAL/ INSTALLATION](#).)
 - d. Rear door quarter glass (See [REAR DOOR QUARTER GLASS REMOVAL/ INSTALLATION](#).)
 - e. Rear door glass (See [REAR DOOR GLASS REMOVAL/ INSTALLATION](#).)
 - f. Rear door module panel (See [REAR DOOR MODULE PANEL REMOVAL/ INSTALLATION](#).)
4. Remove the screw.

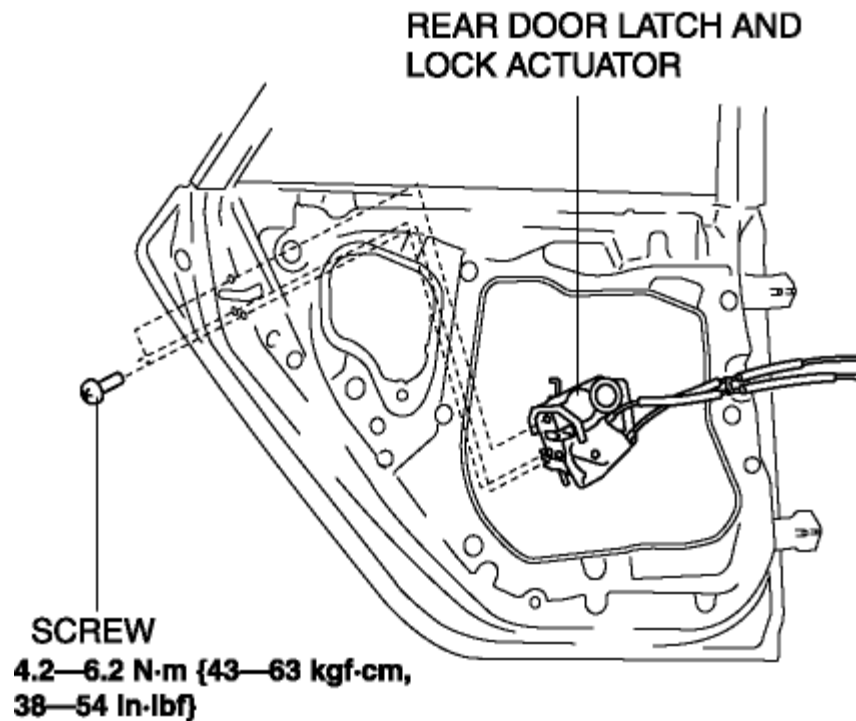

5. Remove the rear door latch and lock actuator.
6. Install in the reverse order of removal.

