


2012 - Mazda6 - Body and Accessories



REAR DOOR LATCH SWITCH INSPECTION

1. Fully open the rear door glass.
2. Disconnect the negative battery cable.
3. Remove the following parts:
 - a. Rear door trim (See [REAR DOOR TRIM REMOVAL/ INSTALLATION.](#))
 - b. Rear door speaker (See [REAR DOOR SPEAKER REMOVAL/ INSTALLATION.](#))
 - c. Rear door quarter glass (See [REAR DOOR QUARTER GLASS REMOVAL/ INSTALLATION.](#))
 - d. Rear door glass (See [REAR DOOR GLASS REMOVAL/ INSTALLATION.](#))
 - e. Rear door module panel (See [REAR DOOR MODULE PANEL REMOVAL/ INSTALLATION.](#))
 - f. Rear door latch and lock actuator (See [REAR DOOR LATCH AND LOCK ACTUATOR REMOVAL/ INSTALLATION.](#))
4. Press the latch in using a flathead screwdriver to inspect the latch lever condition.


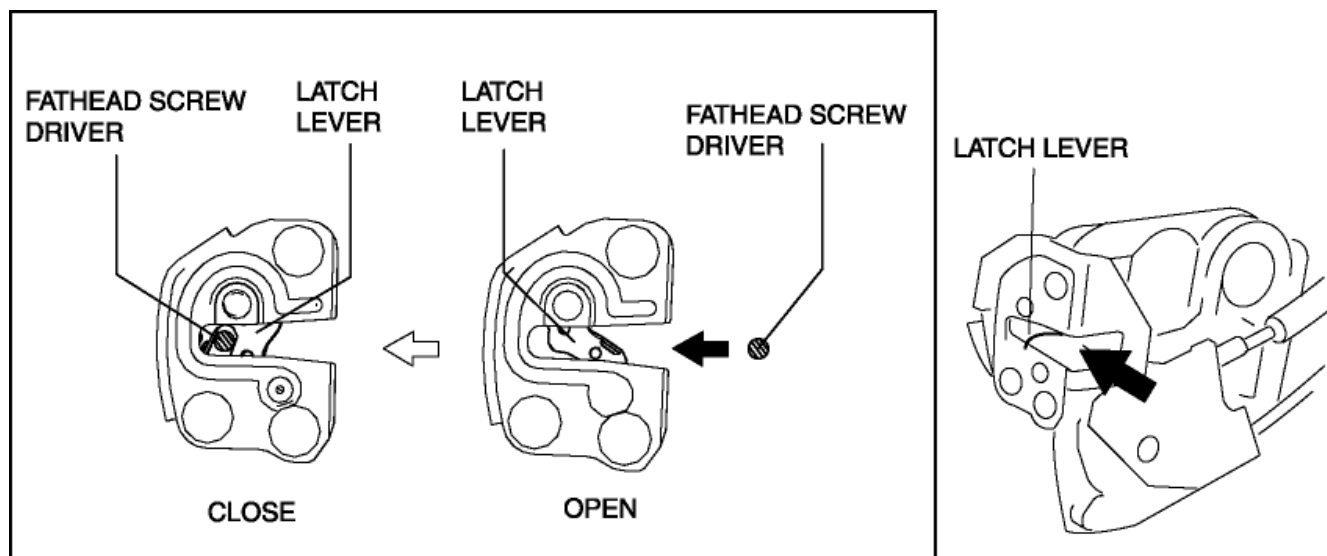


5. Verify that the continuity is as indicated in the table.

RH

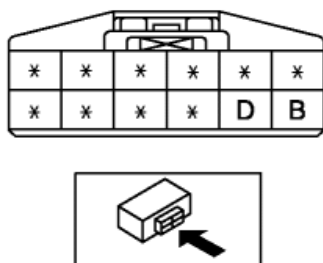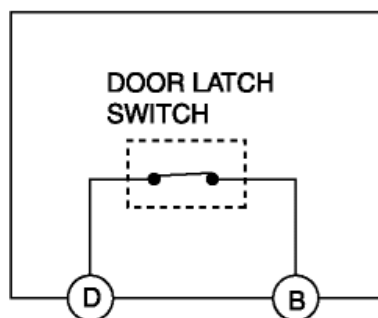

LH

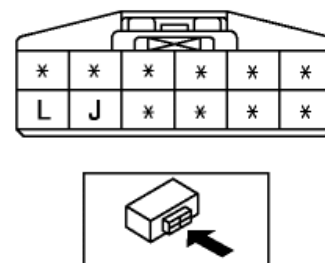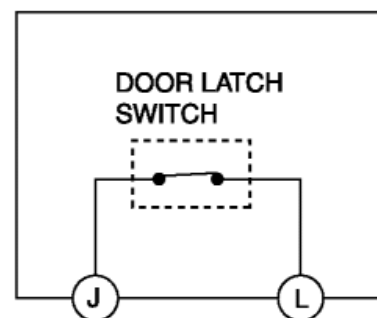

- If not as indicated in the table, replace the rear door latch and lock actuator.

: CONTINUITY

DOOR LATCH SWITCH	TERMINAL	
	RH:B LH:L	RH:D LH:J
OPEN		
CLOSE		

[< Previous](#) [Next >](#)


© 2012 Mazda North American Operations, U.S.A.

[Back to Top](#)

2012 - Mazda6 - Body and Accessories



REAR DOOR LATCH SWITCH INSPECTION

1. Fully open the rear door glass.
2. Disconnect the negative battery cable.
3. Remove the following parts:
 - a. Rear door trim (See [REAR DOOR TRIM REMOVAL/ INSTALLATION.](#))
 - b. Rear door speaker (See [REAR DOOR SPEAKER REMOVAL/ INSTALLATION.](#))
 - c. Rear door quarter glass (See [REAR DOOR QUARTER GLASS REMOVAL/ INSTALLATION.](#))
 - d. Rear door glass (See [REAR DOOR GLASS REMOVAL/ INSTALLATION.](#))
 - e. Rear door module panel (See [REAR DOOR MODULE PANEL REMOVAL/ INSTALLATION.](#))
 - f. Rear door latch and lock actuator (See [REAR DOOR LATCH AND LOCK ACTUATOR REMOVAL/ INSTALLATION.](#))
4. Press the latch in using a flathead screwdriver to inspect the latch lever condition.


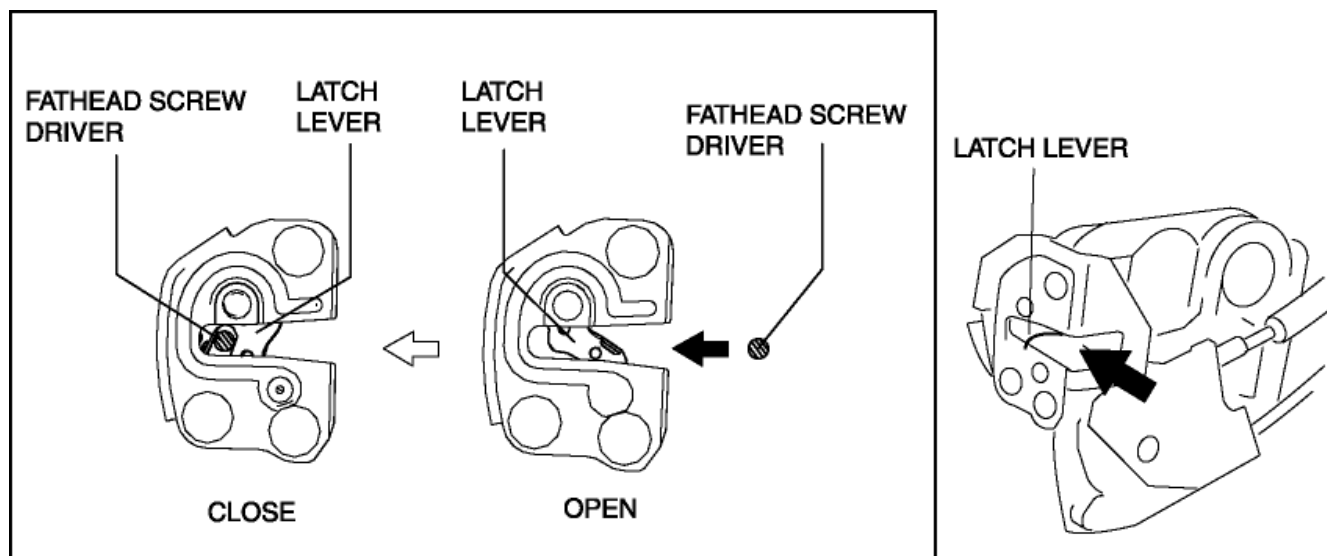


5. Verify that the continuity is as indicated in the table.

RH

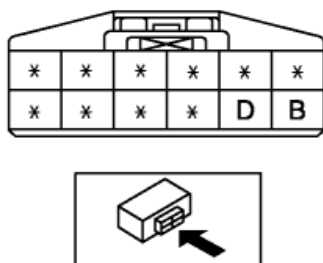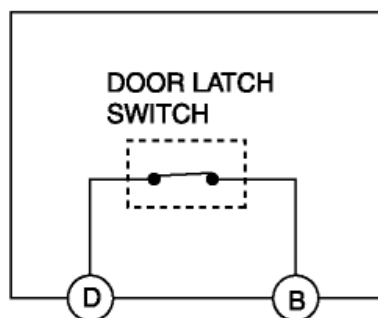

LH

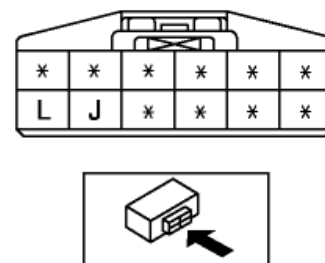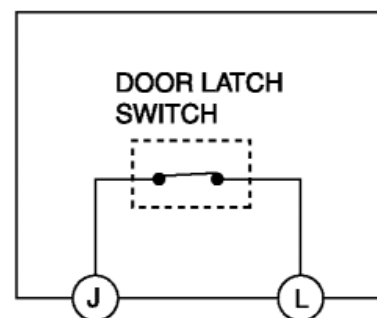

- If not as indicated in the table, replace the rear door latch and lock actuator.

: CONTINUITY

DOOR LATCH SWITCH	TERMINAL	
	RH:B LH:L	RH:D LH:J
OPEN		
CLOSE		

[< Previous](#) [Next >](#)

© 2012 Mazda North American Operations, U.S.A.

[Back to Top](#)