



2012 - Mazda6 - Body and Accessories

REAR OUTER HANDLE REMOVAL/ INSTALLATION


1. Fully close the rear door glass.
2. Disconnect the negative battery cable.
3. Remove the rear door trim. (See [REAR DOOR TRIM REMOVAL/ INSTALLATION.](#))
4. Remove the hole cover.

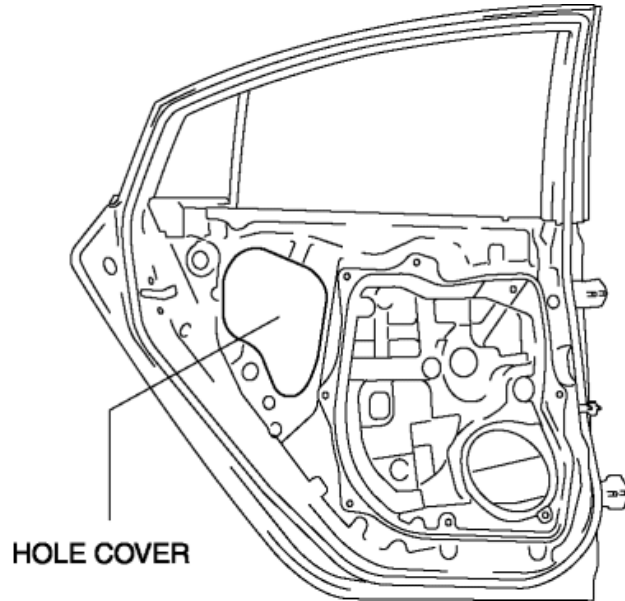

5. Remove the service hole cover.

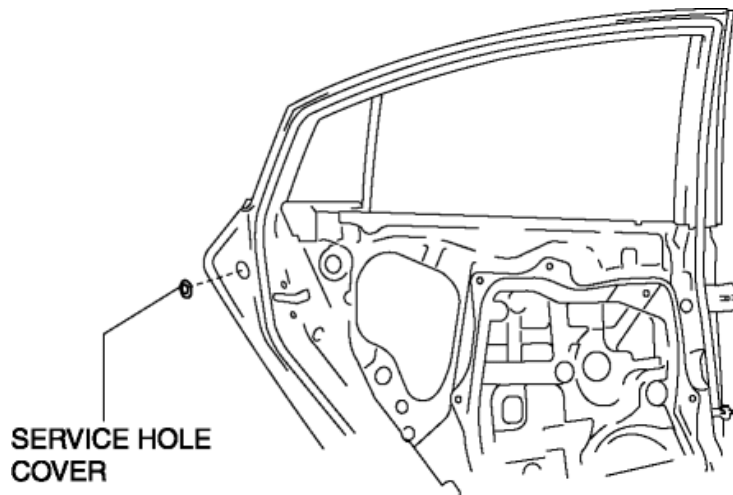


6. Remove the screw from the service hole.

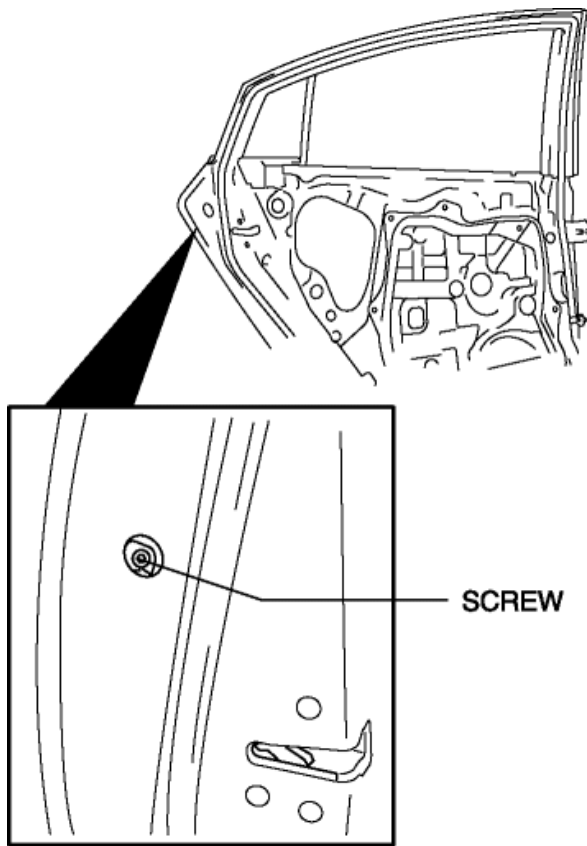


NOTE:

- The screw cannot be removed because of the stopper.

7. Press the tab on the rear outer handle bracket in the direction of the arrow.

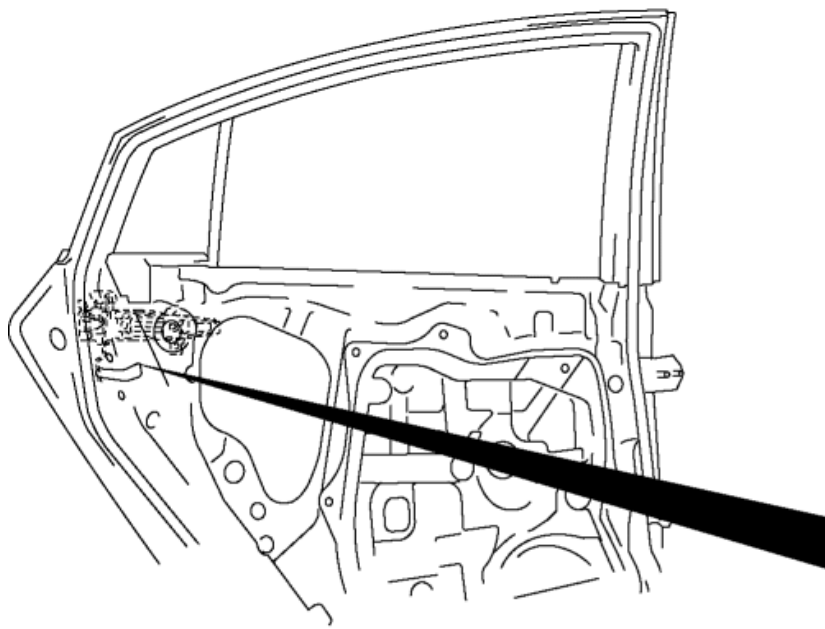


REAR OUTER HANDLE BRACKET

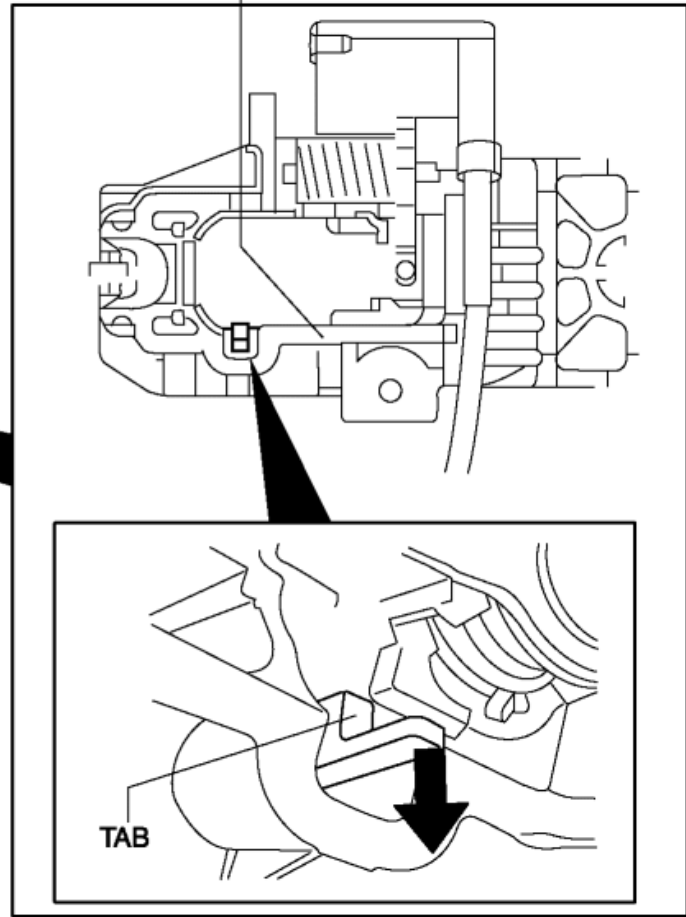


8. Maintaining the condition in procedure 7, remove the outer handle garnish.


OUTER HANDLE GARNISH

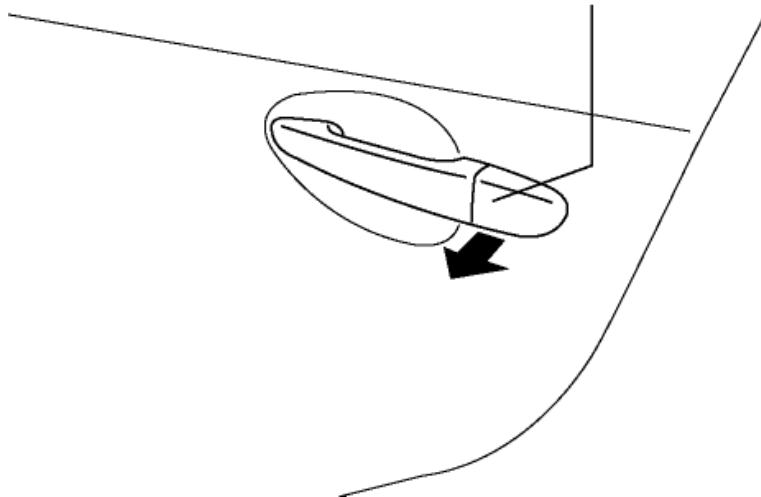

9. Remove the rear outer handle.


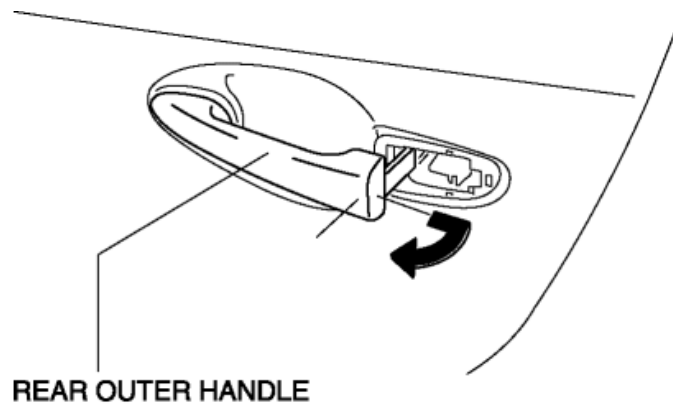


10. Loosen the screw.

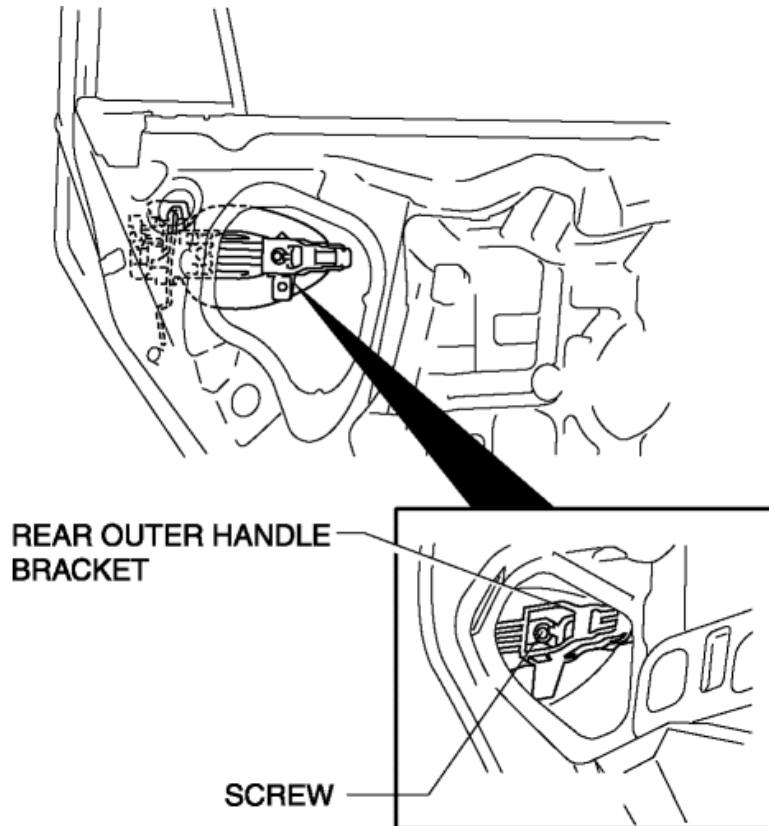

11. Press down the rod holder in the direction of arrow (1) and remove the rear outer handle bracket in the direction of arrow (2).

REAR OUTER HANDLE
BRACKET

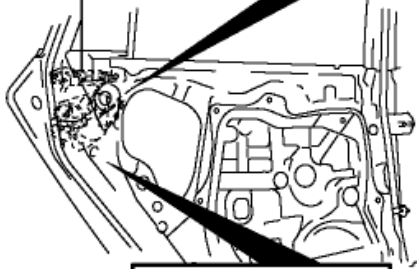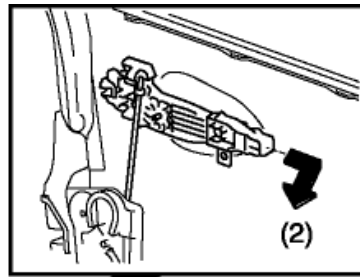

ROD HOLDER



12. Install in the reverse order of removal.

[< Previous](#) [Next >](#)


© 2012 Mazda North American Operations, U.S.A.

[Back to Top](#)


2012 - Mazda6 - Body and Accessories

REAR OUTER HANDLE REMOVAL/ INSTALLATION


1. Fully close the rear door glass.
2. Disconnect the negative battery cable.
3. Remove the rear door trim. (See [REAR DOOR TRIM REMOVAL/ INSTALLATION.](#))
4. Remove the hole cover.

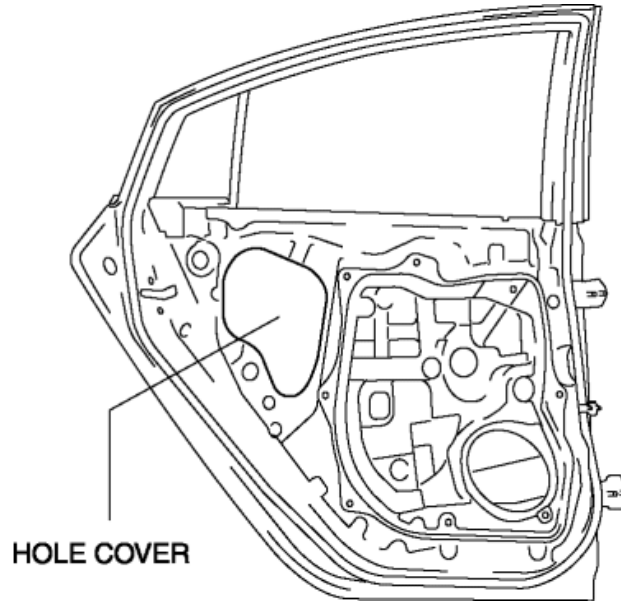

5. Remove the service hole cover.

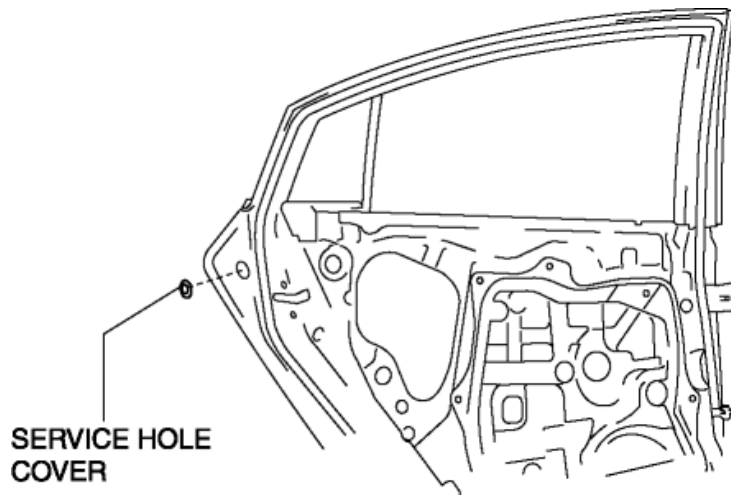


6. Remove the screw from the service hole.

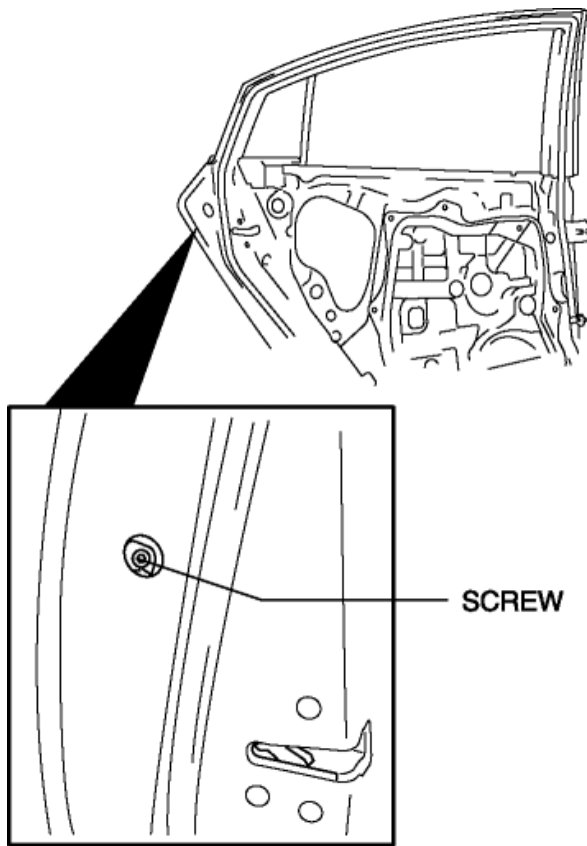


NOTE:

- The screw cannot be removed because of the stopper.

7. Press the tab on the rear outer handle bracket in the direction of the arrow.

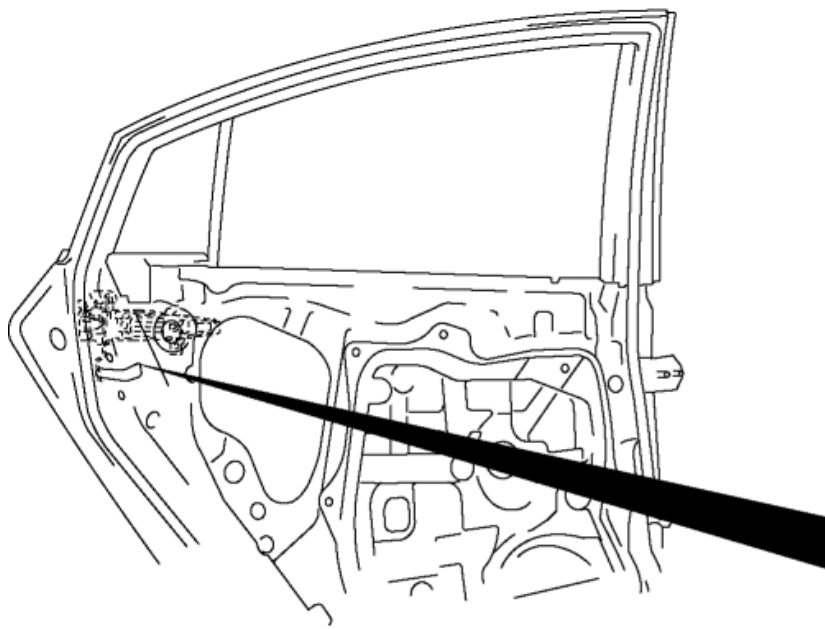


REAR OUTER HANDLE BRACKET

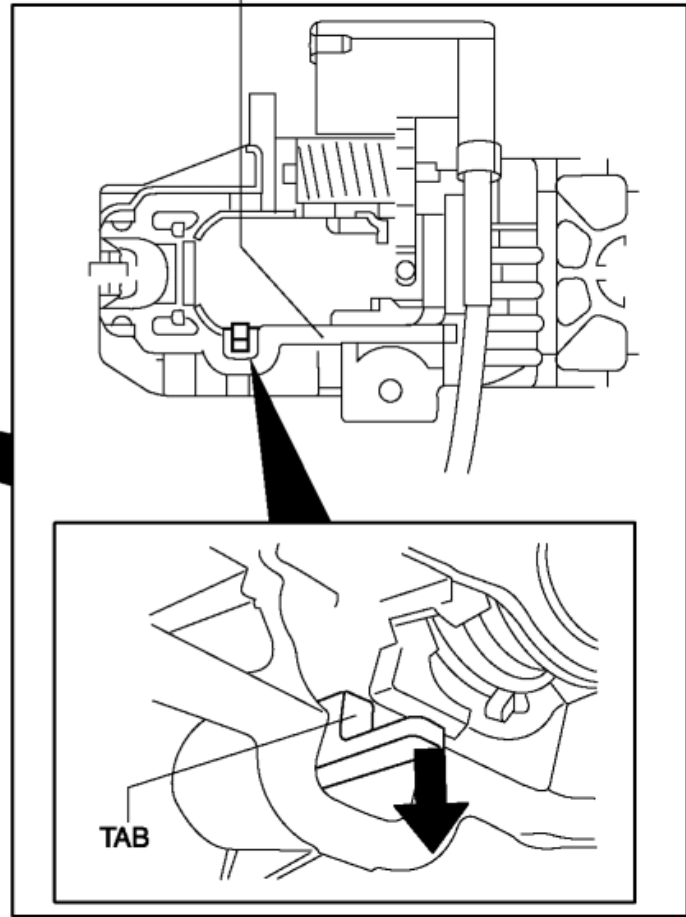


8. Maintaining the condition in procedure 7, remove the outer handle garnish.


OUTER HANDLE GARNISH

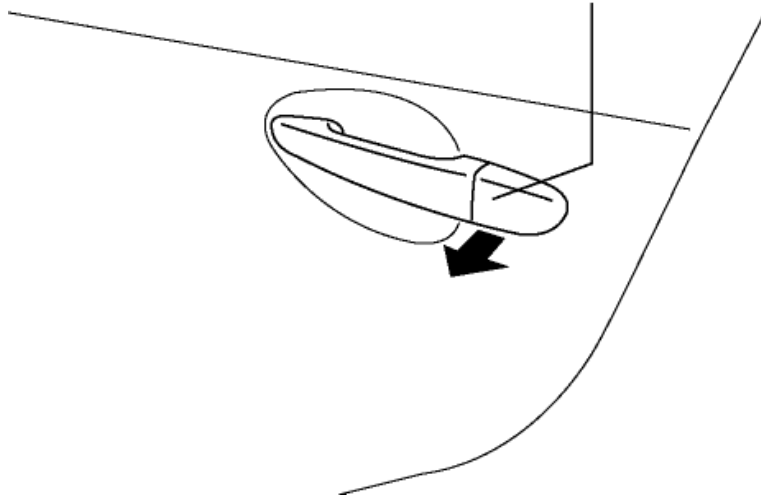

9. Remove the rear outer handle.


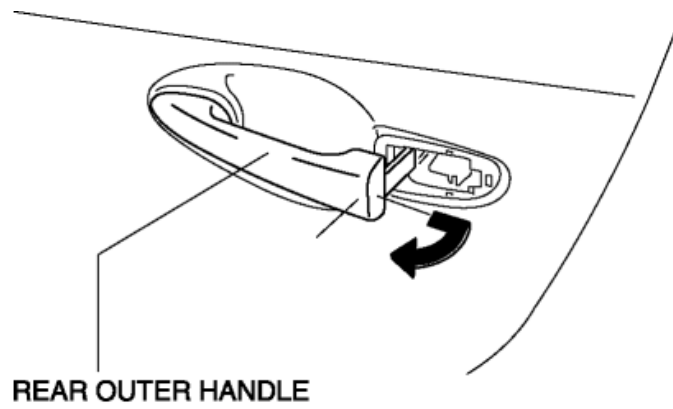


10. Loosen the screw.

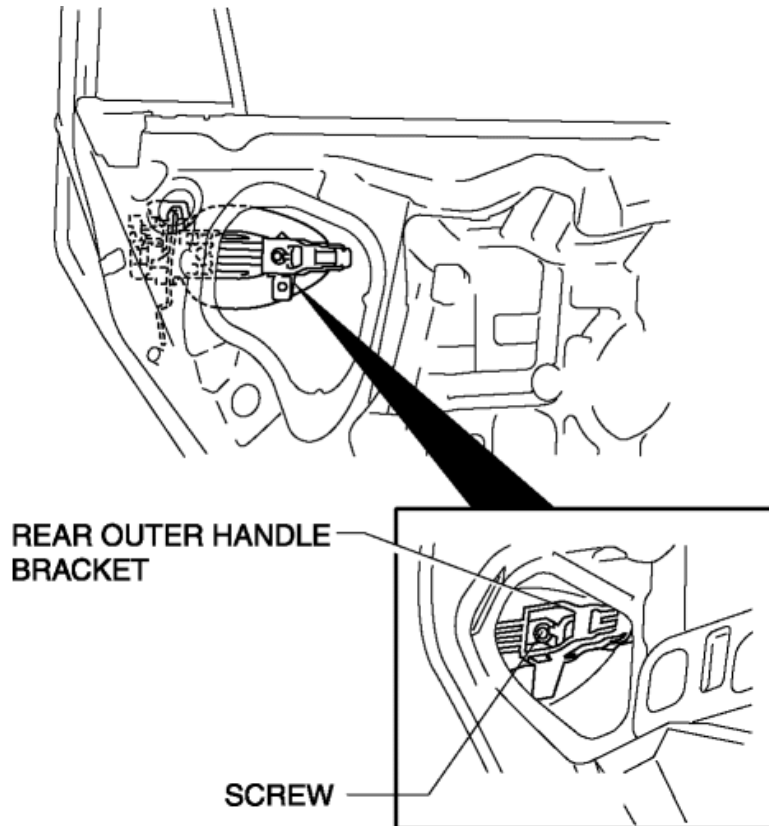

11. Press down the rod holder in the direction of arrow (1) and remove the rear outer handle bracket in the direction of arrow (2).

REAR OUTER HANDLE
BRACKET

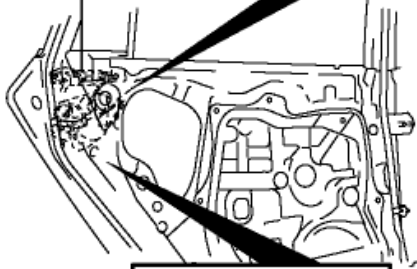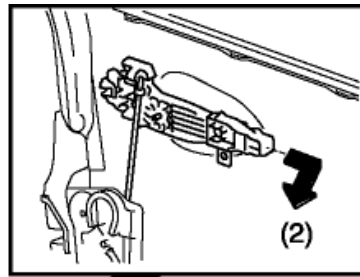

ROD HOLDER



12. Install in the reverse order of removal.

[< Previous](#) [Next >](#)

© 2012 Mazda North American Operations, U.S.A.

[Back to Top](#)