


2012 - Mazda6 - Body and Accessories


INNER HANDLE REMOVAL/ INSTALLATION

Front Inner Handle

1. Disconnect the negative battery cable.
2. Remove the inner garnish. (See [INNER GARNISH REMOVAL/ INSTALLATION.](#))
3. Remove the front door trim. (See [FRONT DOOR TRIM REMOVAL/ INSTALLATION.](#))
4. Disconnect the door lock switch connector.

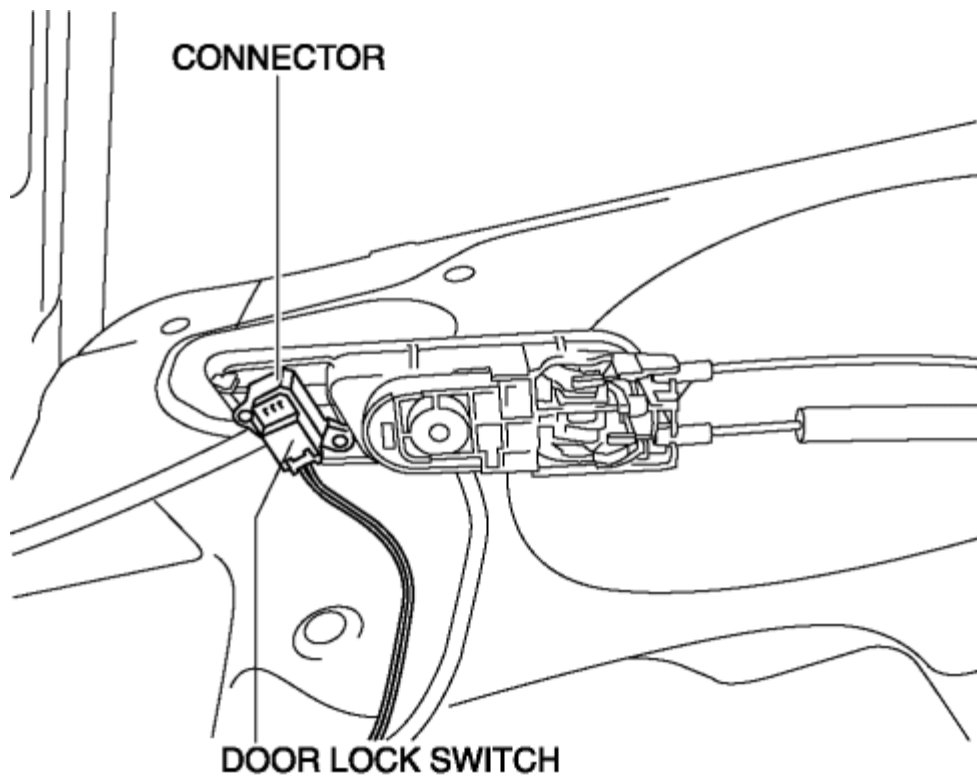


5. Disconnect each cable and remove the front inner handle.

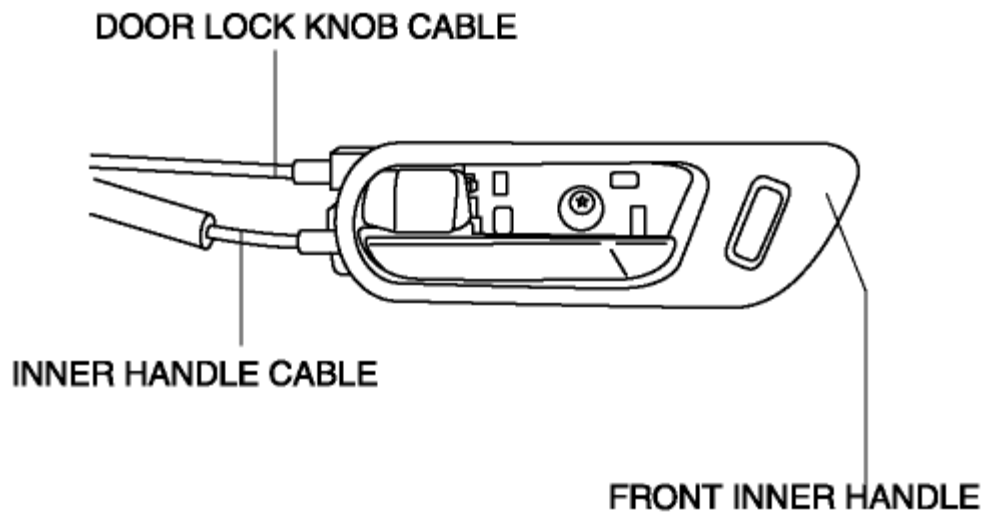

6. Install in the reverse order of removal.

Rear inner handle

1. Disconnect the negative battery cable.
2. Remove the rear door trim. (See [REAR DOOR TRIM REMOVAL/ INSTALLATION.](#))
3. Disconnect each cable and remove the rear inner handle.

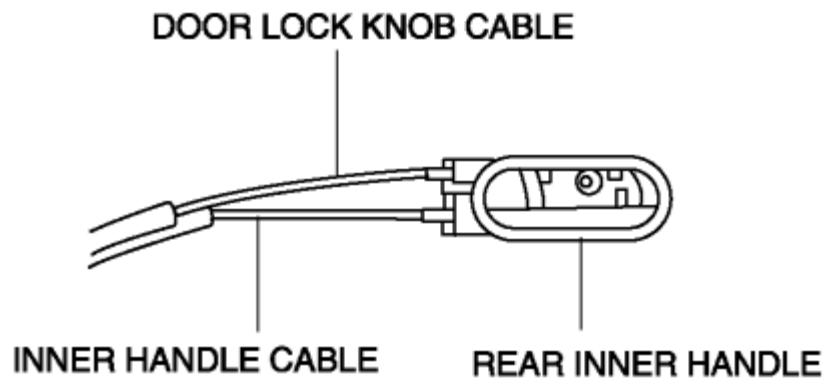

4. Install in the reverse order of removal.

[< Previous](#) [Next >](#)


[Back to Top](#)

2012 - Mazda6 - Body and Accessories


INNER HANDLE REMOVAL/ INSTALLATION

Front Inner Handle

1. Disconnect the negative battery cable.
2. Remove the inner garnish. (See [INNER GARNISH REMOVAL/ INSTALLATION.](#))
3. Remove the front door trim. (See [FRONT DOOR TRIM REMOVAL/ INSTALLATION.](#))
4. Disconnect the door lock switch connector.

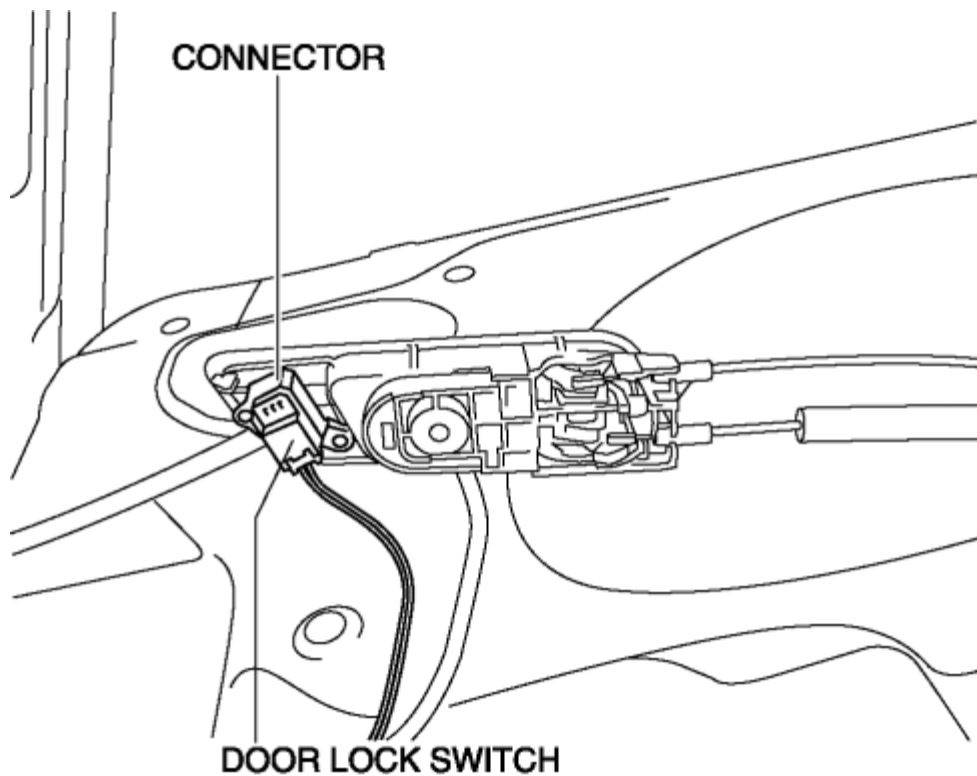


5. Disconnect each cable and remove the front inner handle.

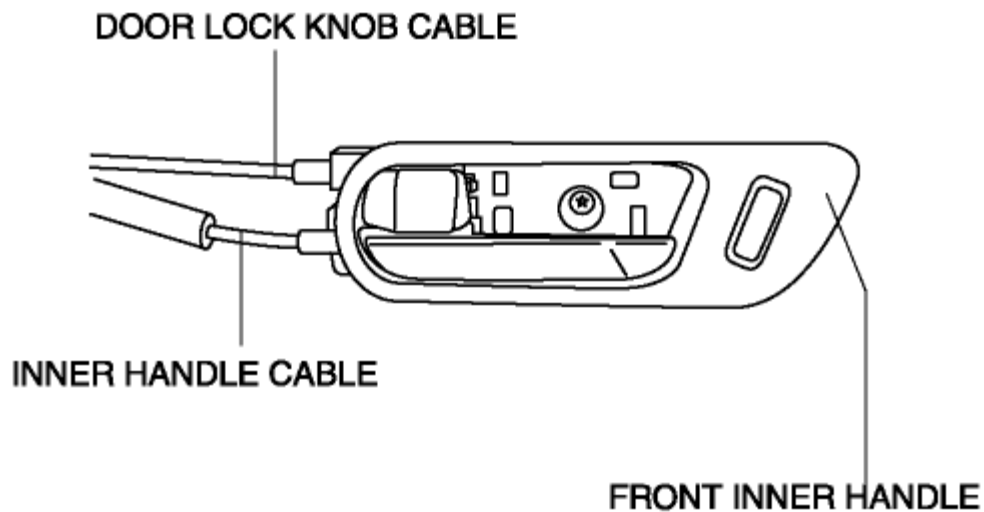

6. Install in the reverse order of removal.

Rear inner handle

1. Disconnect the negative battery cable.
2. Remove the rear door trim. (See [REAR DOOR TRIM REMOVAL/ INSTALLATION.](#))
3. Disconnect each cable and remove the rear inner handle.

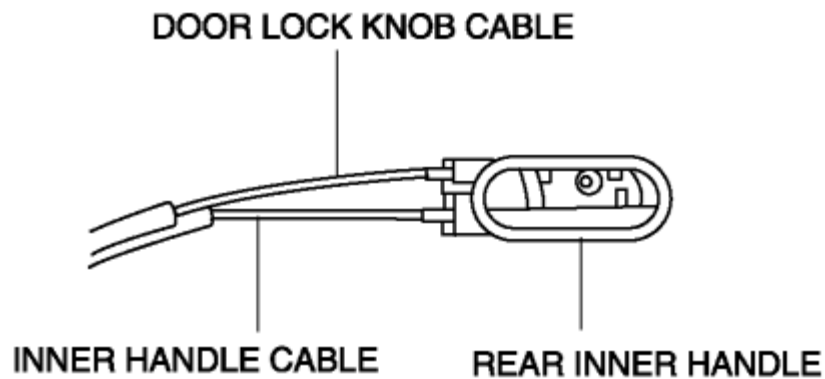

4. Install in the reverse order of removal.

[< Previous](#) [Next >](#)

[Back to Top](#)