


2012 - Mazda6 - Body and Accessories


FUEL-FILLER LID OPENER AND LEVER REMOVAL/ INSTALLATION

Fuel-filler Lid Opener


1. Open the fuel-filler lid.
2. Remove the following parts:
 - a. Rear scuff plate (driver's side) (See [REAR SCUFF PLATE REMOVAL/ INSTALLATION.](#))
 - b. Rear seat cushion (See [REAR SEAT CUSHION REMOVAL/ INSTALLATION.](#))
 - c. Rear seat back (See [REAR SEAT BACK REMOVAL/ INSTALLATION.](#))
 - d. Tire house trim
 - e. Trunk end trim (See [TRUNK END TRIM REMOVAL/ INSTALLATION.](#))
 - f. Trunk side trim (driver's side) (See [TRUNK SIDE TRIM REMOVAL/ INSTALLATION.](#))
3. Open the fuel-filler lid opener cable cover.

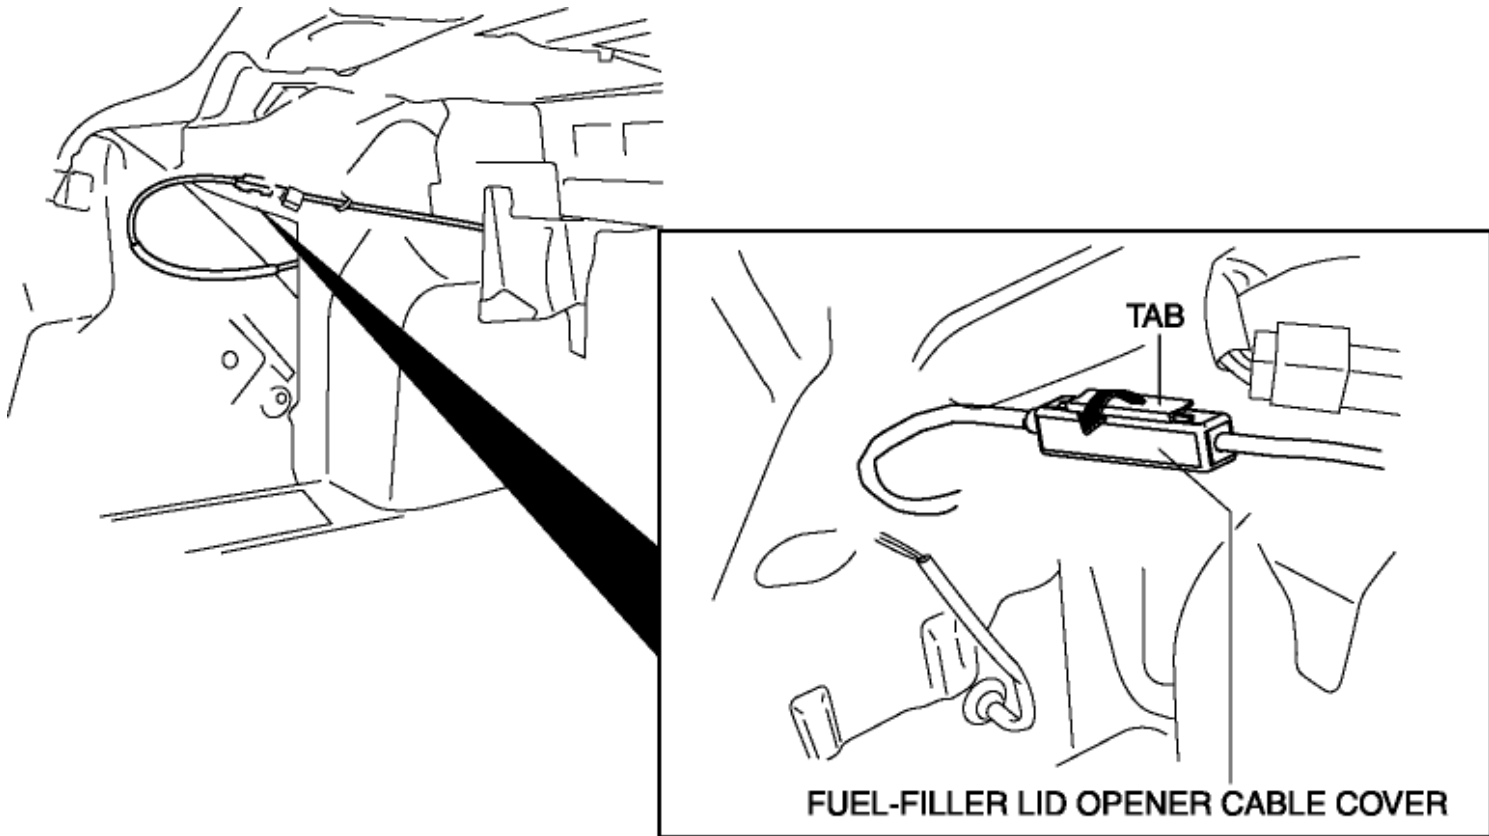

4. Disconnect the release cable from the fuel-filler lid opener cable cover.

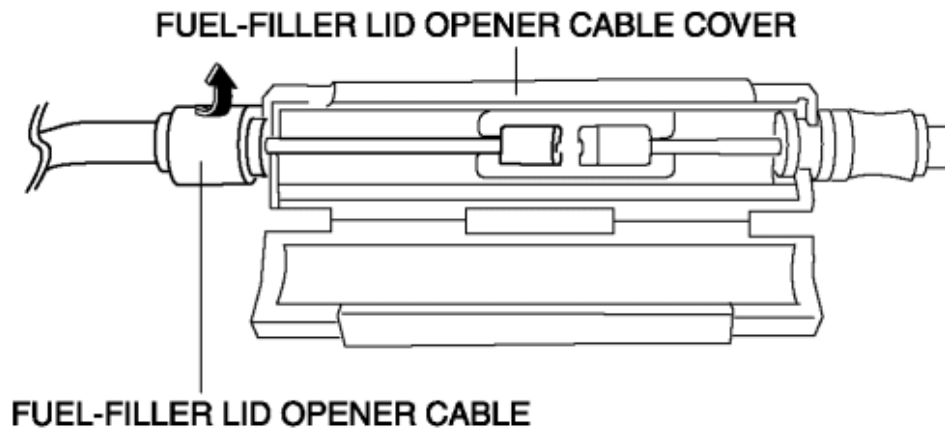


5. Rotate the fuel-filler lid opener in the direction of the arrow (1) as shown in the figure and pull it out in the direction of the arrow (2).

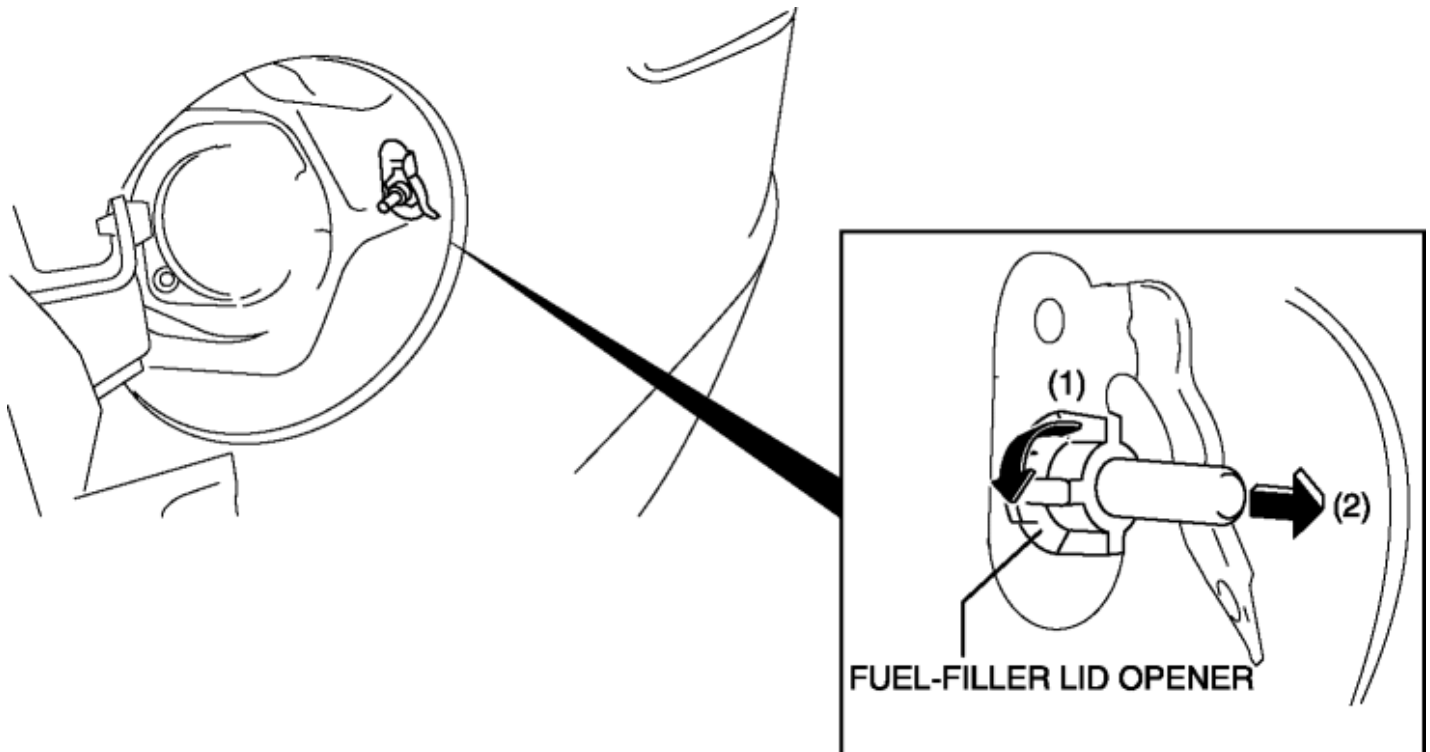

6. Install in the reverse order of removal.

Fuel-filler Lid Opener Lever

1. Remove the fuel-filler lid opener bezel. (See [FUEL-FILLER LID OPENER BEZEL REMOVAL/ INSTALLATION.](#))
2. Remove the bolts.

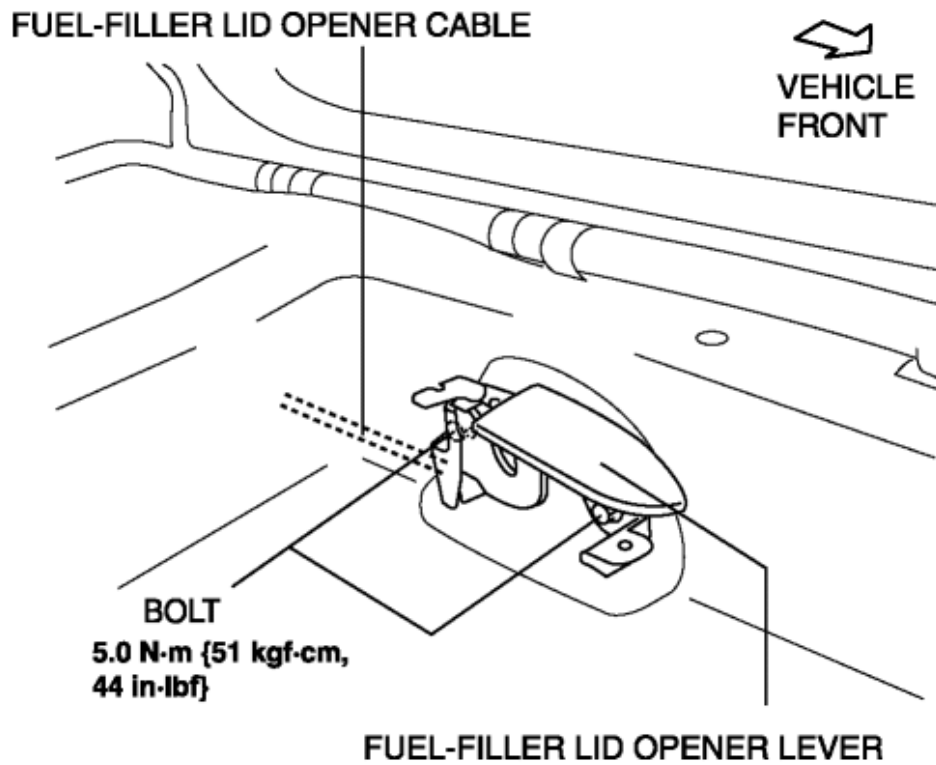

3. Disconnect the cable and fuel-filler lid opener lever.
4. Install in the reverse order of removal.

[< Previous](#) [Next >](#)

[Back to Top](#)


© 2012 Mazda North American Operations, U.S.A.

2012 - Mazda6 - Body and Accessories


FUEL-FILLER LID OPENER AND LEVER REMOVAL/ INSTALLATION

Fuel-filler Lid Opener


1. Open the fuel-filler lid.
2. Remove the following parts:
 - a. Rear scuff plate (driver's side) (See [REAR SCUFF PLATE REMOVAL/ INSTALLATION.](#))
 - b. Rear seat cushion (See [REAR SEAT CUSHION REMOVAL/ INSTALLATION.](#))
 - c. Rear seat back (See [REAR SEAT BACK REMOVAL/ INSTALLATION.](#))
 - d. Tire house trim
 - e. Trunk end trim (See [TRUNK END TRIM REMOVAL/ INSTALLATION.](#))
 - f. Trunk side trim (driver's side) (See [TRUNK SIDE TRIM REMOVAL/ INSTALLATION.](#))
3. Open the fuel-filler lid opener cable cover.

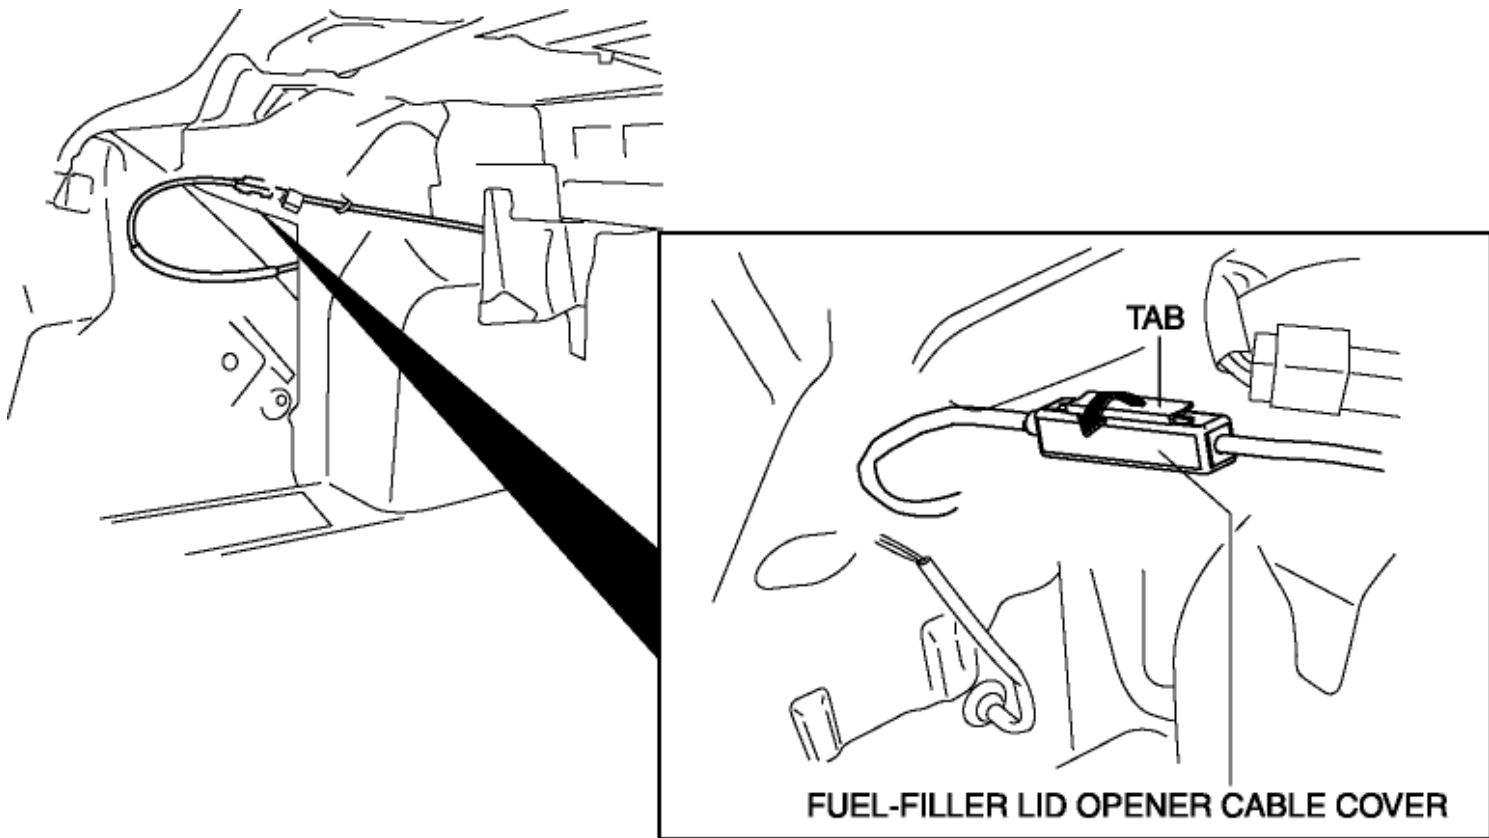

4. Disconnect the release cable from the fuel-filler lid opener cable cover.

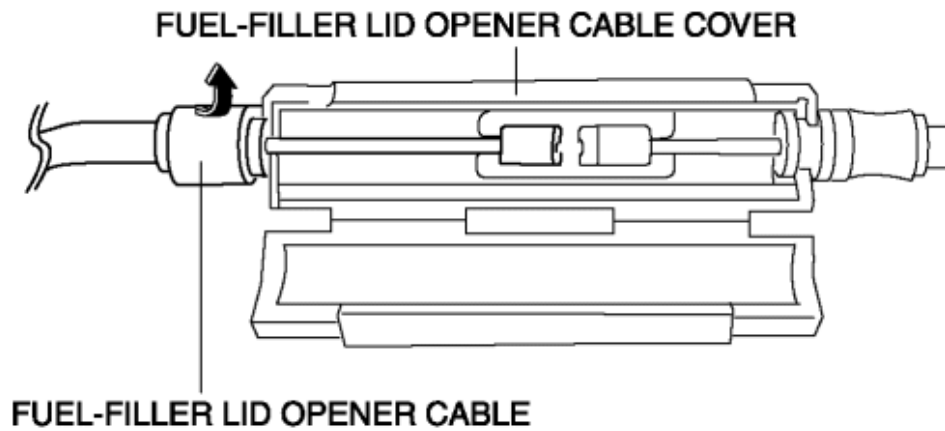


5. Rotate the fuel-filler lid opener in the direction of the arrow (1) as shown in the figure and pull it out in the direction of the arrow (2).

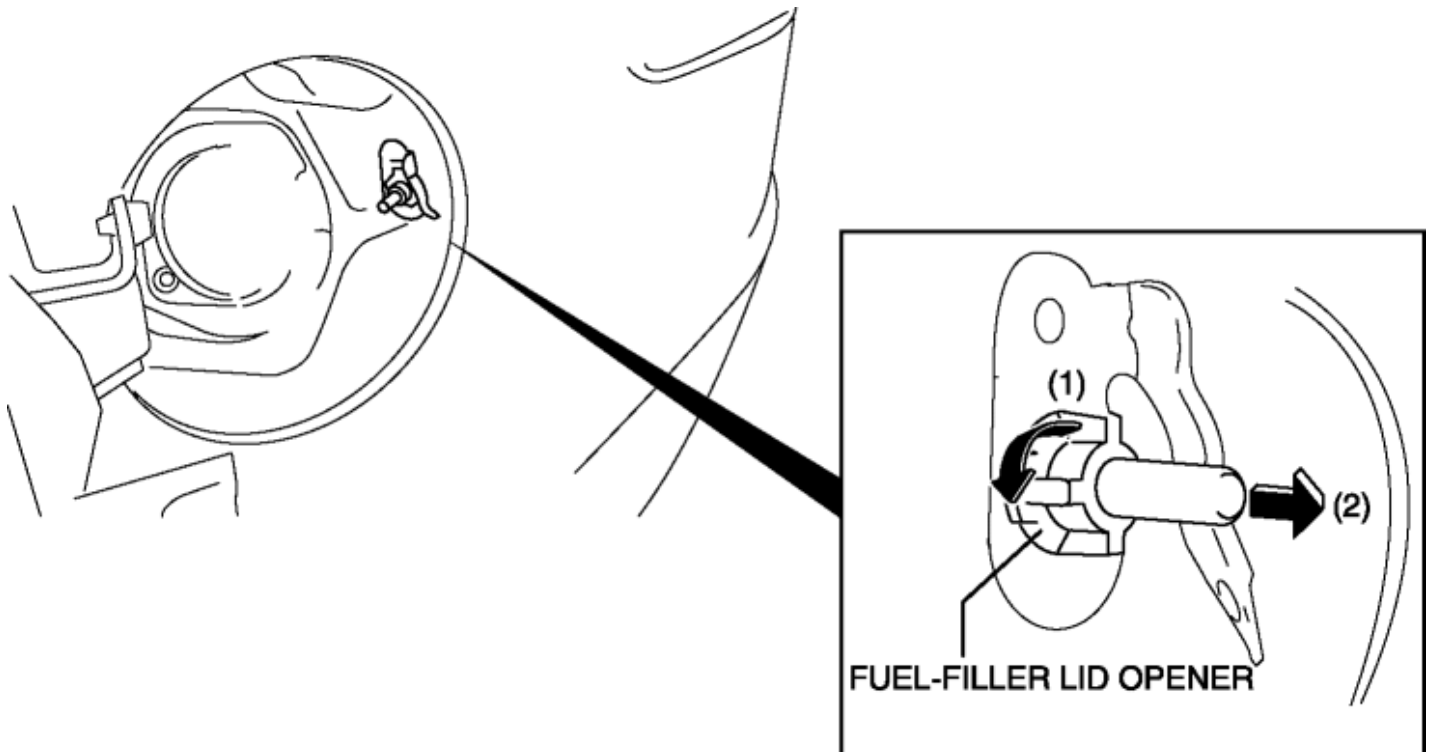

6. Install in the reverse order of removal.

Fuel-filler Lid Opener Lever

1. Remove the fuel-filler lid opener bezel. (See [FUEL-FILLER LID OPENER BEZEL REMOVAL/ INSTALLATION.](#))
2. Remove the bolts.

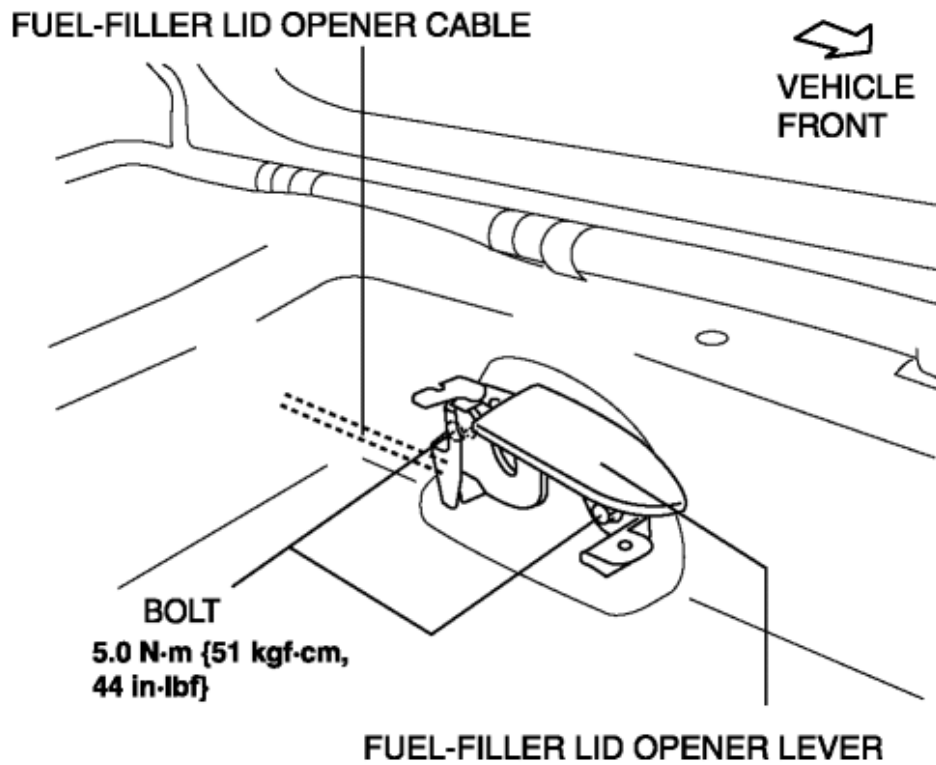

3. Disconnect the cable and fuel-filler lid opener lever.
4. Install in the reverse order of removal.

[< Previous](#) [Next >](#)

[Back to Top](#)

© 2012 Mazda North American Operations, U.S.A.