


2012 - Mazda6 - Body and Accessories

TRUNK LID OPENER SWITCH REMOVAL/ INSTALLATION

Vehicle Interior


1. Disconnect the negative battery cable.
2. Remove the lower panel. (See [LOWER PANEL REMOVAL/ INSTALLATION](#).)
3. Remove the trunk lid opener switch in the direction of the arrow (2) shown in the figure while pressing the trunk lid opener switch tabs in the direction of the arrow (1).

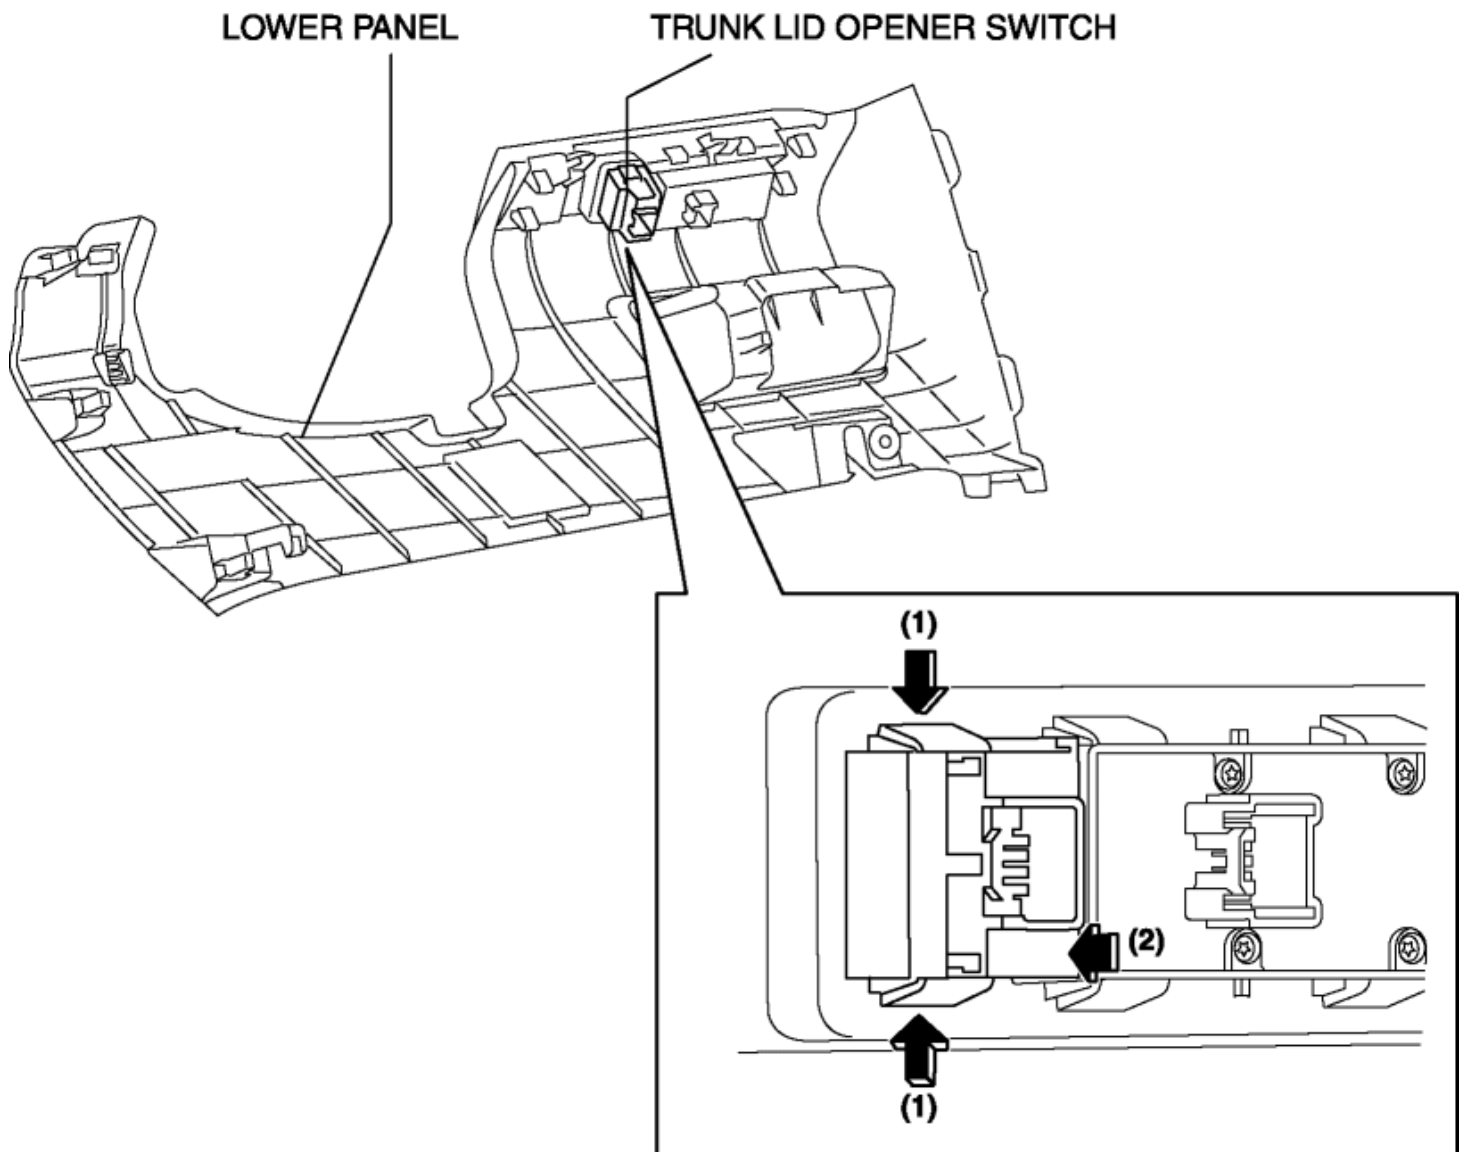


4. Install in the reverse order of removal.

Vehicle Exterior (With Advanced Keyless Entry And Push Button Start System)


1. Disconnect the negative battery cable.
2. Remove the rear finisher. (See [REAR FINISHER REMOVAL/ INSTALLATION.](#))
3. Disconnect the rear mount camera connector. (with rear mount camera)

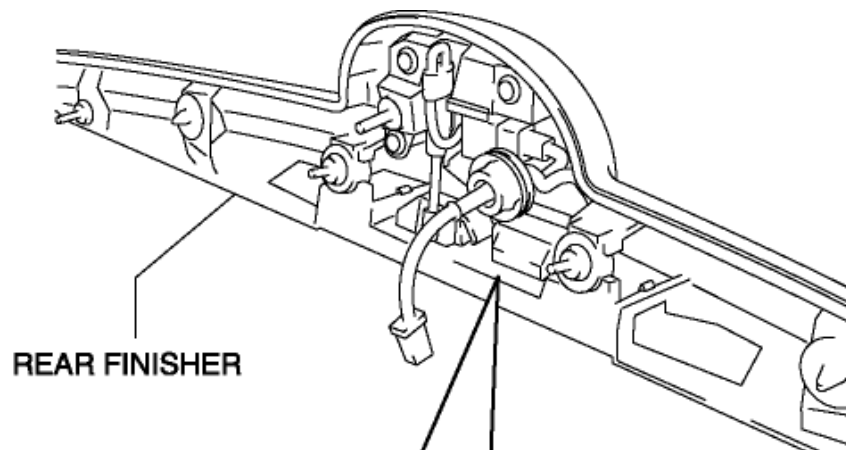

WITHOUT REAR MOUNT CAMERA

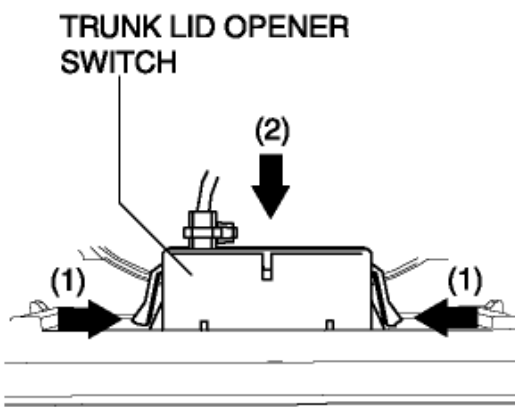

WITH REAR MOUNT CAMERA

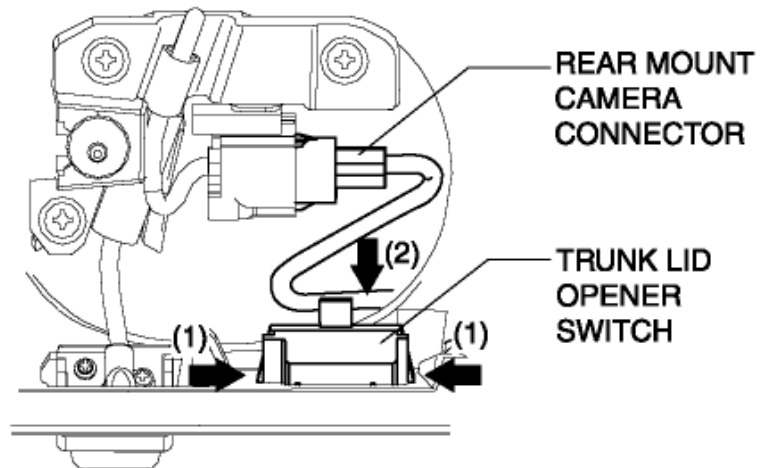


4. Remove the trunk lid opener switch in the direction of the arrow (2) shown in the figure while pressing the trunk lid opener switch tabs in the direction of the arrow (1).
5. Install in the reverse order of removal.

Vehicle Interior


-
- Diagram illustrating the lower panel and trunk lid opener switch assembly. The diagram shows the lower panel (labeled LOWER PANEL) and the trunk lid opener switch (labeled TRUNK LID OPENER SWITCH) connected to the vehicle's electrical system.




1. Disconnect the negative battery cable.
2. Remove the rear finisher. (See [REAR FINISHER REMOVAL/ INSTALLATION.](#))
3. Disconnect the rear mount camera connector. (with rear mount camera)

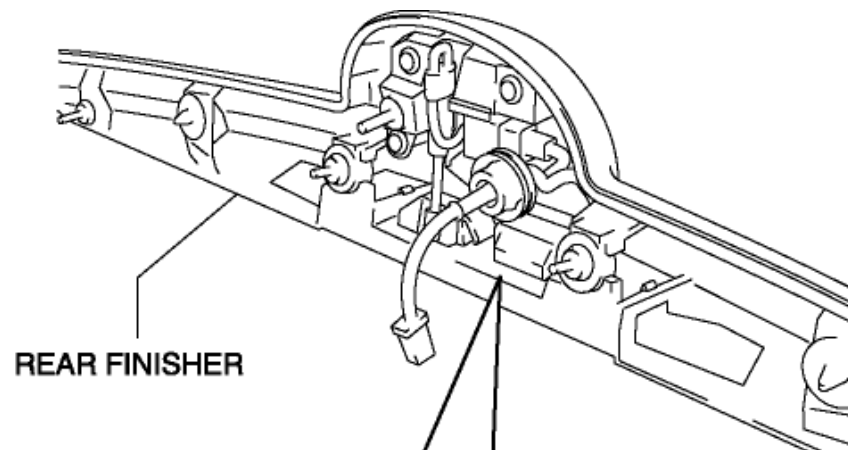

WITHOUT REAR MOUNT CAMERA

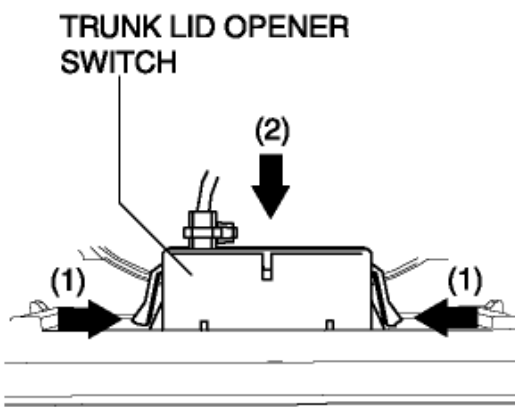

WITH REAR MOUNT CAMERA

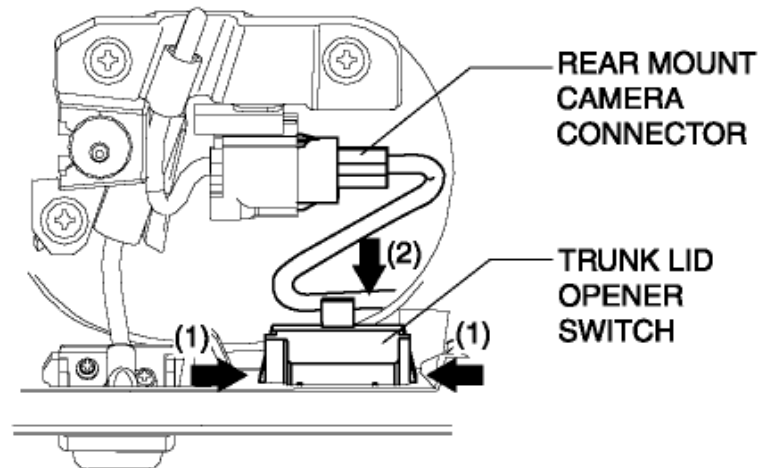

4. Remove the trunk lid opener switch in the direction of the arrow (2) shown in the figure while pressing the trunk lid opener switch tabs in the direction of the arrow (1).
5. Install in the reverse order of removal.