


2012 - Mazda6 - Body and Accessories

TRUNK LID OPENER SWITCH INSPECTION

Vehicle Interior

- 1. Disconnect the negative battery cable.
- 2. Remove the lower panel. (See LOWER PANEL REMOVAL/ INSTALLATION.)
- 3. Remove the trunk lid opener switch. (See TRUNK LID OPENER SWITCH REMOVAL/ INSTALLATION.)
- 4. Verify the continuity of trunk lid opener switch terminals F and H.

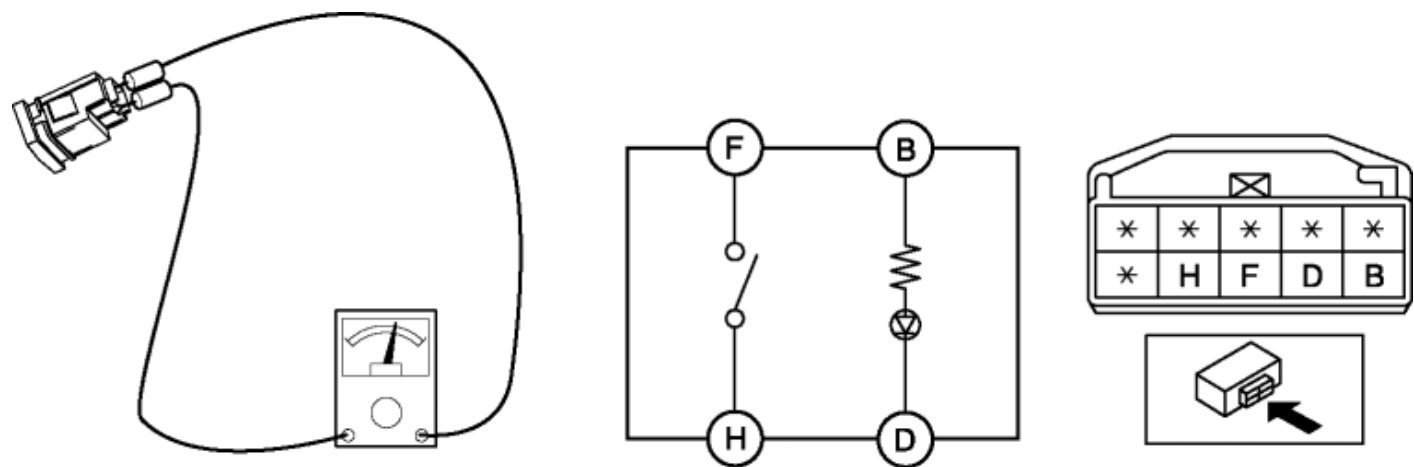

○—○: CONTINUITY

SWITCH POSITION	TERMINAL	
	F	H
ON (PUSH)	○—○	○—○
OFF (RELEASE)		


- If not as indicated in the table, replace the trunk lid opener switch.
- 5. Apply battery voltage to hazard switch terminal B, and connect terminal D to ground.
 - 6. Verify that the LED illuminates.
 - If there is any malfunction, replace the trunk lid opener switch.

Vehicle Exterior (With Advanced Keyless Entry And Push Button Start System)

Without rear mount camera

- 1. Disconnect the negative battery cable.

2. Remove the rear finisher. (See [REAR FINISHER REMOVAL/ INSTALLATION.](#))
3. Remove the trunk lid opener switch. (See [TRUNK LID OPENER SWITCH REMOVAL/ INSTALLATION.](#))
4. Verify the continuity of trunk lid opener switch terminals A and B.

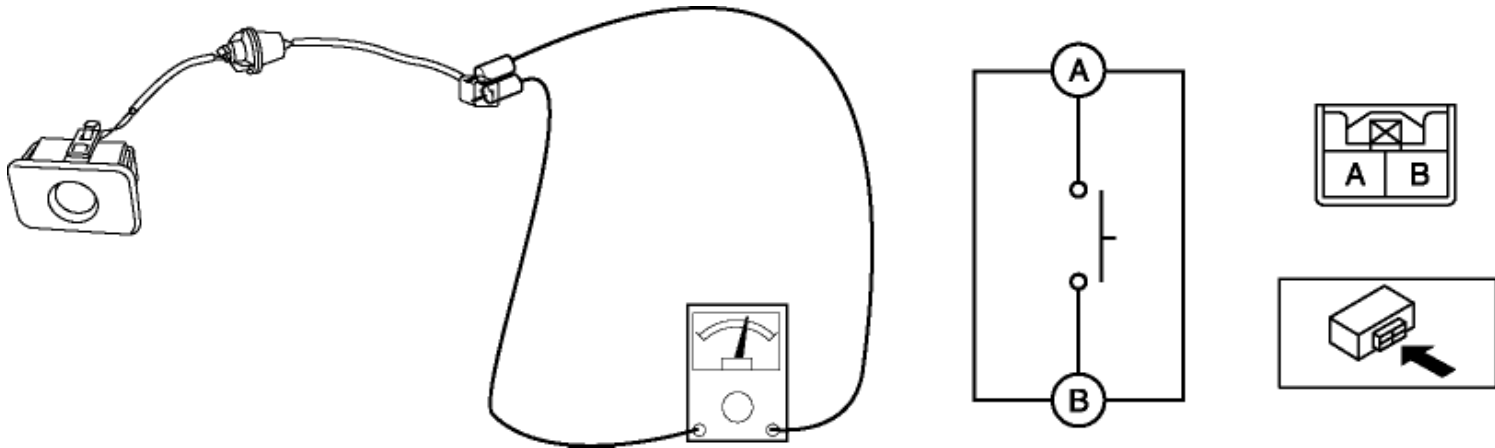

5. Verify that the continuity is as indicated in the table.


○—○: CONTINUITY

SWITCH POSITION	TERMINAL	
	A	B
ON (PUSH)	○—○	○—○
OFF (RELEASE)		

- If not as indicated in the table, replace the trunk lid opener switch.

With rear mount camera

1. Disconnect the negative battery cable.
2. Remove the rear finisher. (See [REAR FINISHER REMOVAL/ INSTALLATION.](#))
3. Remove the trunk lid opener switch. (See [TRUNK LID OPENER SWITCH REMOVAL/ INSTALLATION.](#))
4. Verify the continuity of trunk lid opener switch terminals C and F.

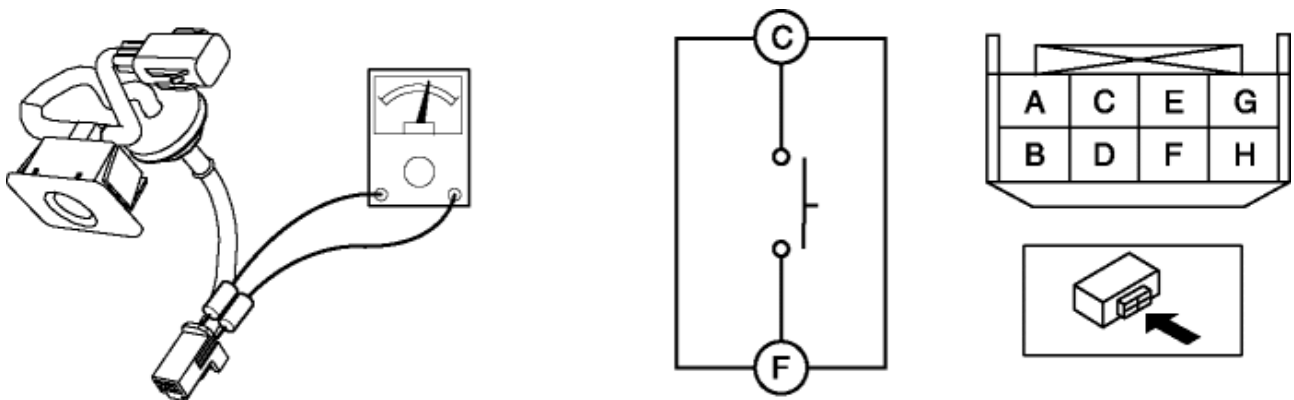

5. Verify that the continuity is as indicated in the table.

○—○: CONTINUITY

SWITCH POSITION	TERMINAL	
	C	F
ON (PUSH)	○—	—○
OFF (RELEASE)		

- If not as indicated in the table, replace the trunk lid opener switch.

[< Previous](#) [Next >](#)

[Back to Top](#)


© 2012 Mazda North American Operations, U.S.A.

2012 - Mazda6 - Body and Accessories

TRUNK LID OPENER SWITCH INSPECTION

Vehicle Interior

- 1. Disconnect the negative battery cable.
- 2. Remove the lower panel. (See LOWER PANEL REMOVAL/ INSTALLATION.)
- 3. Remove the trunk lid opener switch. (See TRUNK LID OPENER SWITCH REMOVAL/ INSTALLATION.)
- 4. Verify the continuity of trunk lid opener switch terminals F and H.

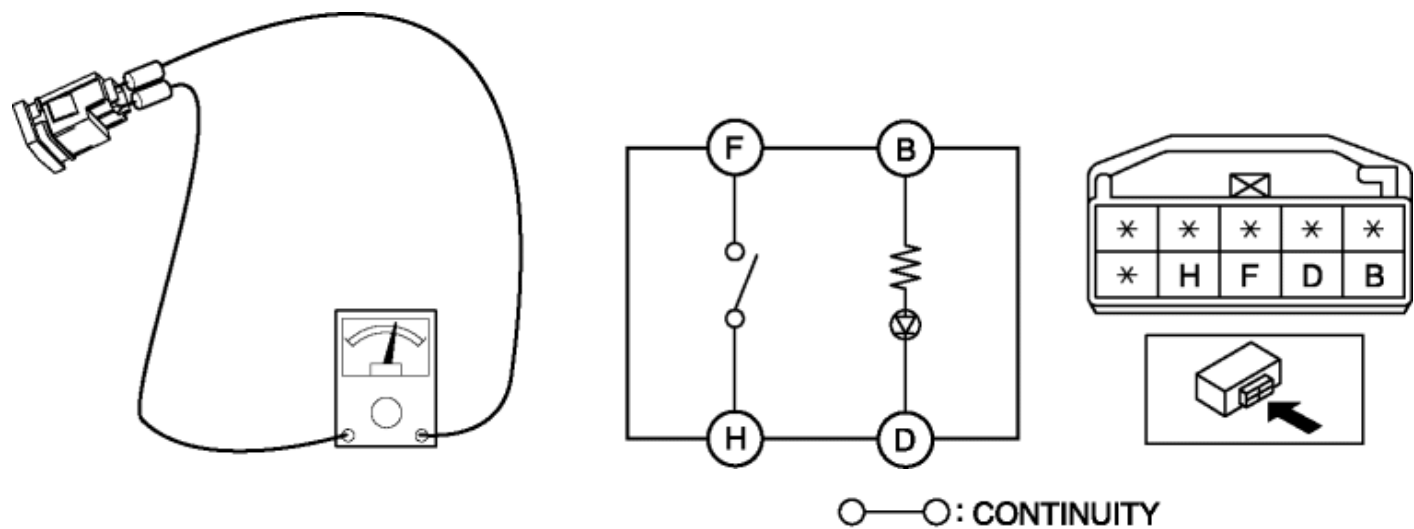

○—○: CONTINUITY

SWITCH POSITION	TERMINAL	
	F	H
ON (PUSH)	○—○	○—○
OFF (RELEASE)		


- If not as indicated in the table, replace the trunk lid opener switch.
- 5. Apply battery voltage to hazard switch terminal B, and connect terminal D to ground.
 - 6. Verify that the LED illuminates.
 - If there is any malfunction, replace the trunk lid opener switch.

Vehicle Exterior (With Advanced Keyless Entry And Push Button Start System)

Without rear mount camera

- 1. Disconnect the negative battery cable.

2. Remove the rear finisher. (See [REAR FINISHER REMOVAL/ INSTALLATION.](#))
3. Remove the trunk lid opener switch. (See [TRUNK LID OPENER SWITCH REMOVAL/ INSTALLATION.](#))
4. Verify the continuity of trunk lid opener switch terminals A and B.

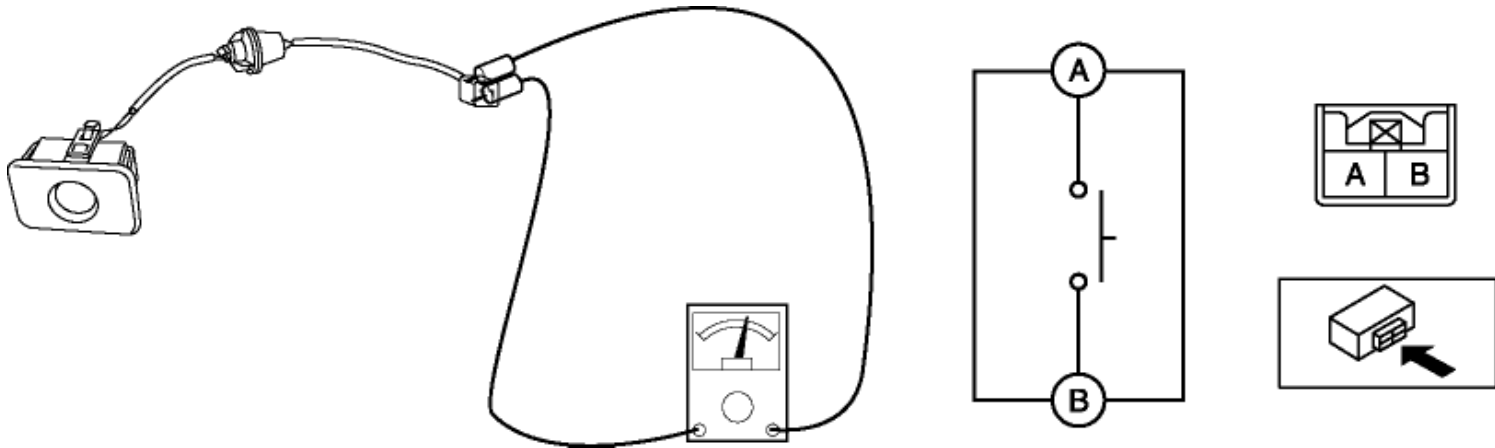

5. Verify that the continuity is as indicated in the table.


○—○: CONTINUITY

SWITCH POSITION	TERMINAL	
	A	B
ON (PUSH)	○—○	○—○
OFF (RELEASE)		

- If not as indicated in the table, replace the trunk lid opener switch.

With rear mount camera

1. Disconnect the negative battery cable.
2. Remove the rear finisher. (See [REAR FINISHER REMOVAL/ INSTALLATION.](#))
3. Remove the trunk lid opener switch. (See [TRUNK LID OPENER SWITCH REMOVAL/ INSTALLATION.](#))
4. Verify the continuity of trunk lid opener switch terminals C and F.

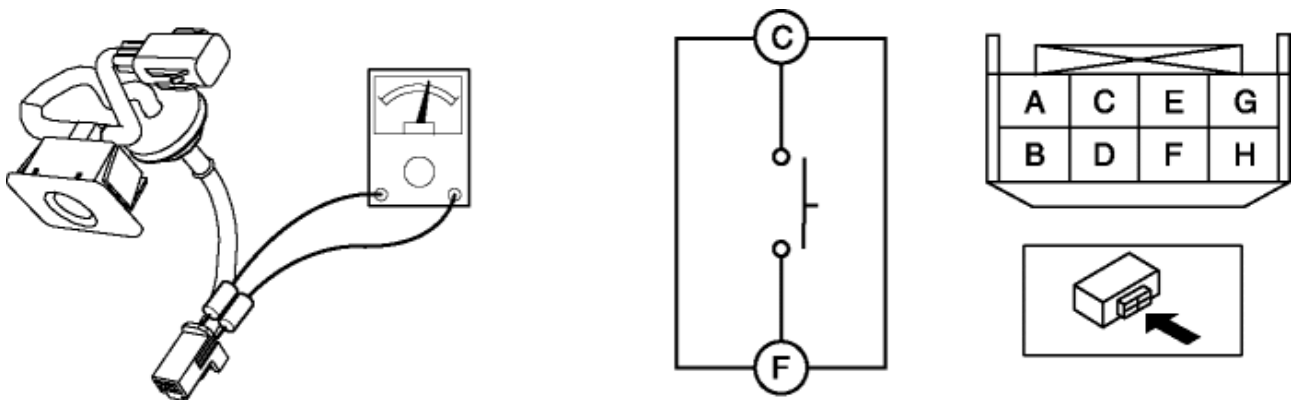

5. Verify that the continuity is as indicated in the table.

○—○: CONTINUITY

SWITCH POSITION	TERMINAL	
	C	F
ON (PUSH)	○—	—○
OFF (RELEASE)		

- If not as indicated in the table, replace the trunk lid opener switch.

[< Previous](#) [Next >](#)

[Back to Top](#)

© 2012 Mazda North American Operations, U.S.A.