
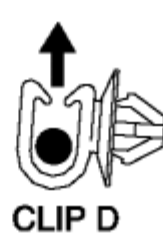
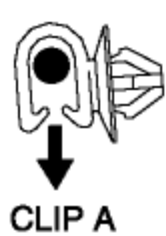


## 2012 - Mazda6 - Body and Accessories

### FUEL-FILLER LID OPENER CABLE REMOVAL/ INSTALLATION

1. Disconnect the negative battery cable.
2. Remove the following parts:
  - a. Front seat (driver's seat) (See [FRONT SEAT REMOVAL/ INSTALLATION.](#))
  - b. Front scuff plate (driver's side) (See [FRONT SCUFF PLATE REMOVAL/ INSTALLATION.](#))
  - c. Rear scuff plate (driver's side) (See [REAR SCUFF PLATE REMOVAL/ INSTALLATION.](#))
  - d. Rear seat cushion (See [REAR SEAT CUSHION REMOVAL/ INSTALLATION.](#))
  - e. Rear side seat back (See [REAR SIDE SEAT BACK REMOVAL/ INSTALLATION.](#))
  - f. Trunk end trim (See [TRUNK END TRIM REMOVAL/ INSTALLATION.](#))
  - g. Trunk side trim (driver's side) (See [TRUNK SIDE TRIM REMOVAL/ INSTALLATION.](#))
  - h. Fuel-filler lid opener (See [FUEL-FILLER LID OPENER AND LEVER REMOVAL/ INSTALLATION.](#))
  - i. Fuel-filler lid opener lever (See [FUEL-FILLER LID OPENER AND LEVER REMOVAL/ INSTALLATION.](#))
3. Remove the fuel-filler lid opener cable.

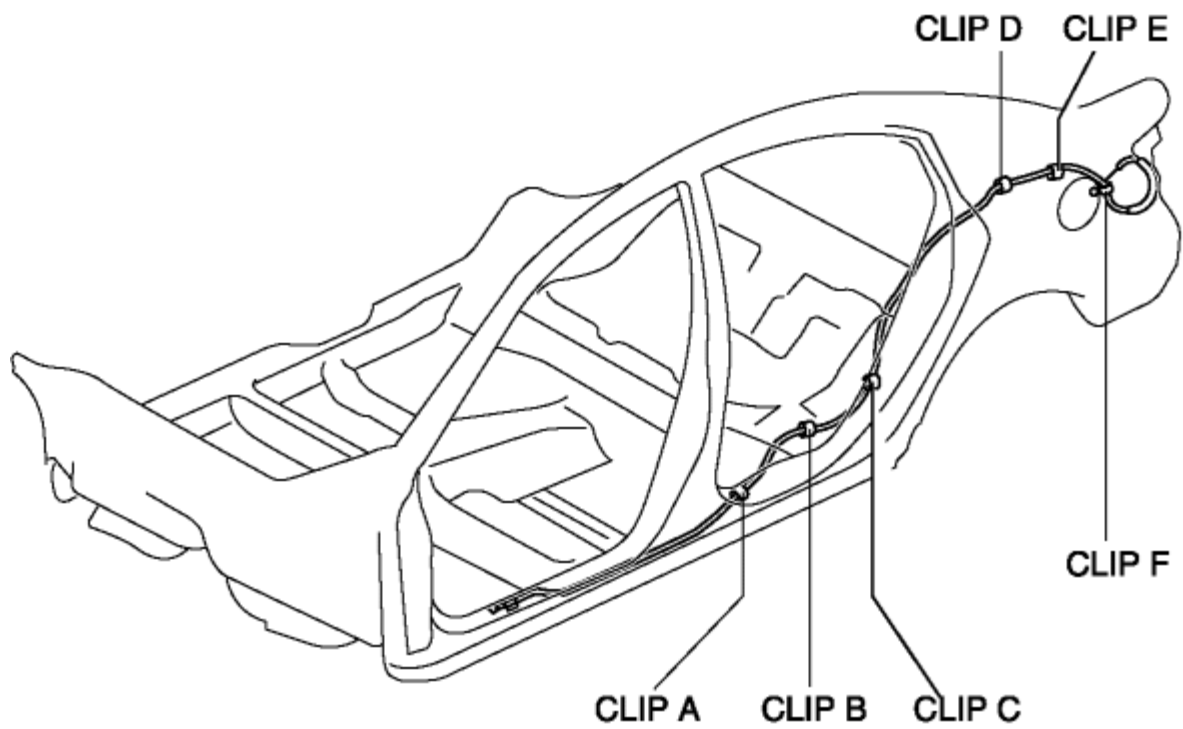

4. Install in the reverse order of removal.

[< Previous](#) [Next >](#)




[Back to Top](#)

© 2012 Mazda North American Operations, U.S.A.

## 2012 - Mazda6 - Body and Accessories

### FUEL-FILLER LID OPENER CABLE REMOVAL/ INSTALLATION

1. Disconnect the negative battery cable.
2. Remove the following parts:
  - a. Front seat (driver's seat) (See [FRONT SEAT REMOVAL/ INSTALLATION.](#))
  - b. Front scuff plate (driver's side) (See [FRONT SCUFF PLATE REMOVAL/ INSTALLATION.](#))
  - c. Rear scuff plate (driver's side) (See [REAR SCUFF PLATE REMOVAL/ INSTALLATION.](#))
  - d. Rear seat cushion (See [REAR SEAT CUSHION REMOVAL/ INSTALLATION.](#))
  - e. Rear side seat back (See [REAR SIDE SEAT BACK REMOVAL/ INSTALLATION.](#))
  - f. Trunk end trim (See [TRUNK END TRIM REMOVAL/ INSTALLATION.](#))
  - g. Trunk side trim (driver's side) (See [TRUNK SIDE TRIM REMOVAL/ INSTALLATION.](#))
  - h. Fuel-filler lid opener (See [FUEL-FILLER LID OPENER AND LEVER REMOVAL/ INSTALLATION.](#))
  - i. Fuel-filler lid opener lever (See [FUEL-FILLER LID OPENER AND LEVER REMOVAL/ INSTALLATION.](#))
3. Remove the fuel-filler lid opener cable.

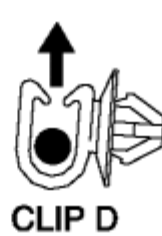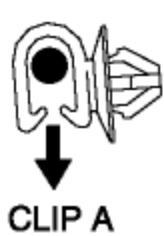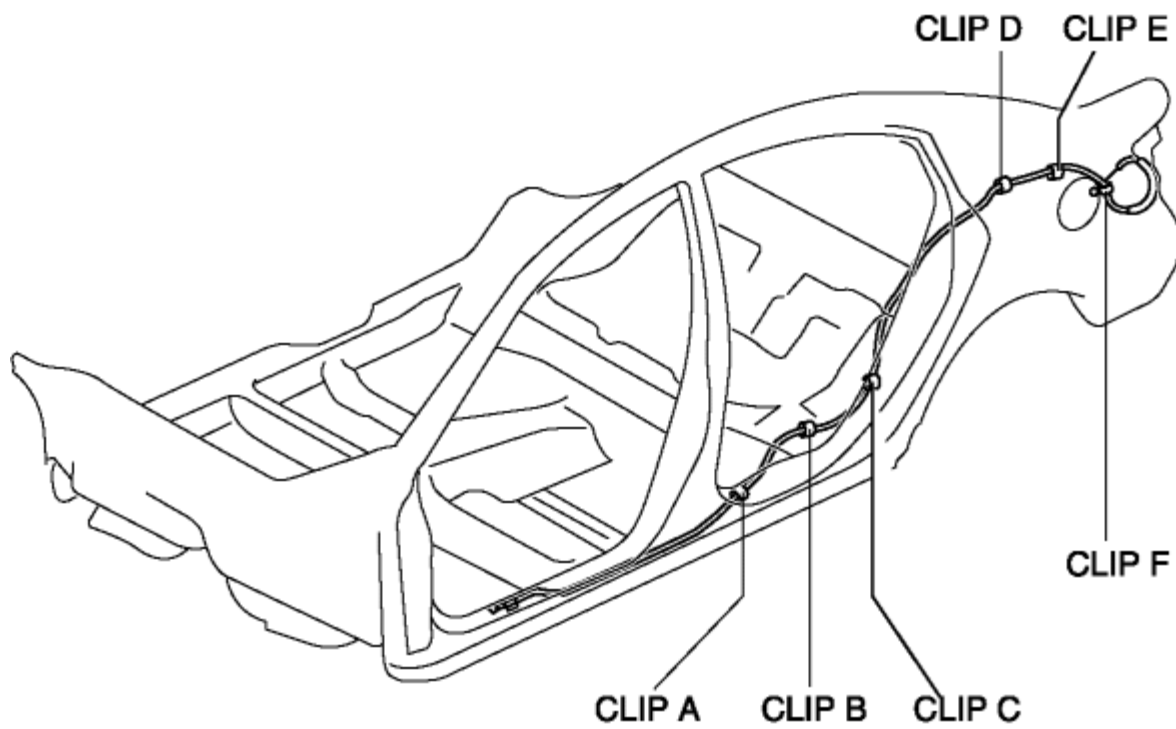

4. Install in the reverse order of removal.

[< Previous](#) [Next >](#)

[Back to Top](#)

© 2012 Mazda North American Operations, U.S.A.