


2012 - Mazda6 - Body and Accessories

TRUNK LID RELEASE ACTUATOR INSPECTION

- 1. Disconnect the negative battery cable.
- 2. Remove the recess. (See [RECESS REMOVAL/ INSTALLATION.](#))
- 3. Remove the trunk lid trim. (See [TRUNK LID TRIM REMOVAL/ INSTALLATION.](#))
- 4. Remove the trunk lid latch and release actuator. (See [TRUNK LID LATCH AND RELEASE ACTUATOR REMOVAL/ INSTALLATION.](#))
- 5. Apply battery positive voltage and connect the ground to each terminal, and then verify the operation.

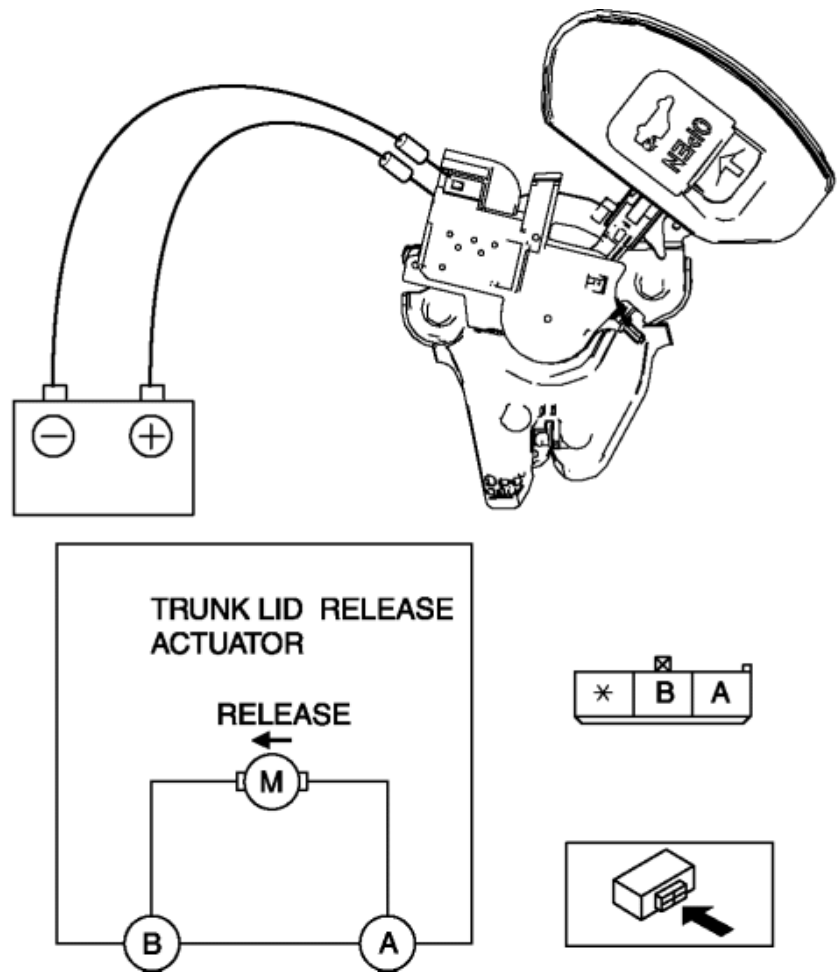


- If not as indicated in the table, replace the trunk lid latch and release actuator.

Release actuator operation	Terminal	
	B+	Ground
RELEASE	A	B

2012 - Mazda6 - Body and Accessories

TRUNK LID RELEASE ACTUATOR INSPECTION

- 1. Disconnect the negative battery cable.
- 2. Remove the recess. (See RECESS REMOVAL/ INSTALLATION.)
- 3. Remove the trunk lid trim. (See TRUNK LID TRIM REMOVAL/ INSTALLATION.)
- 4. Remove the trunk lid latch and release actuator. (See TRUNK LID LATCH AND RELEASE ACTUATOR REMOVAL/ INSTALLATION.)
- 5. Apply battery positive voltage and connect the ground to each terminal, and then verify the operation.

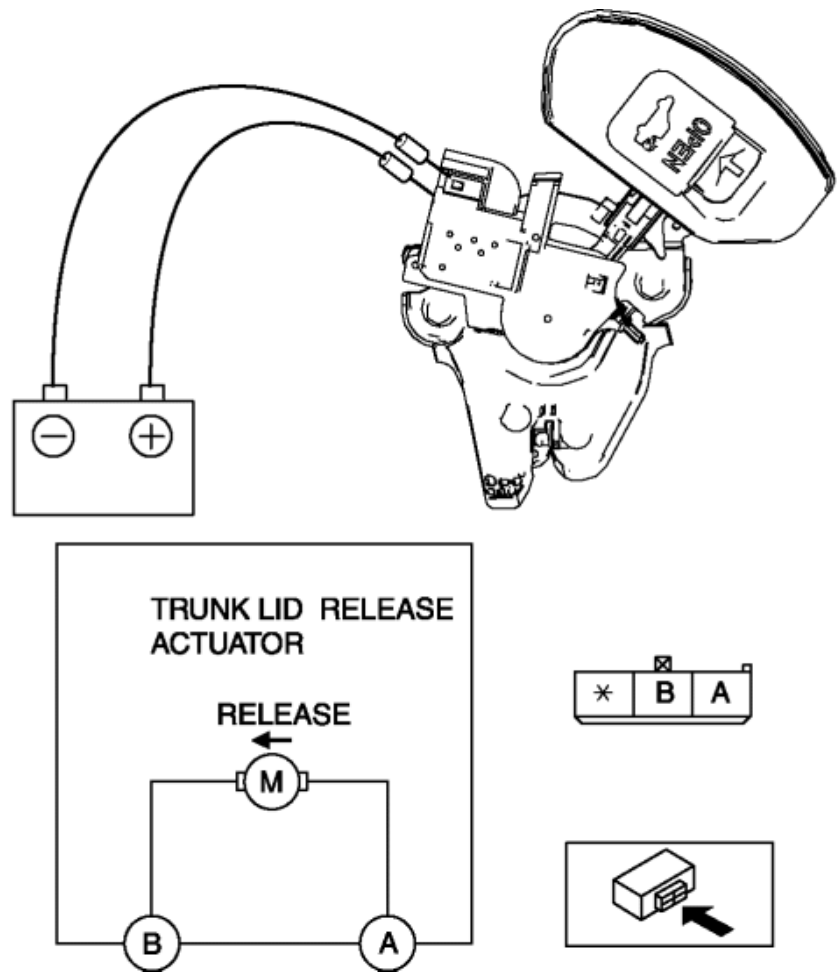

- If not as indicated in the table, replace the trunk lid latch and release actuator.

Release actuator operation	Terminal	
	B+	Ground
RELEASE	A	B

