


2012 - Mazda6 - Body and Accessories

DOOR LOCK SWITCH REMOVAL/ INSTALLATION

1. Disconnect the negative battery cable.
2. Remove the inner garnish. (See [INNER GARNISH REMOVAL/ INSTALLATION.](#))
3. Remove the front door trim. (See [FRONT DOOR TRIM REMOVAL/ INSTALLATION.](#))
4. Remove the inner handle. (See [INNER HANDLE REMOVAL/ INSTALLATION.](#))
5. Remove the screws, then remove the door lock switch.

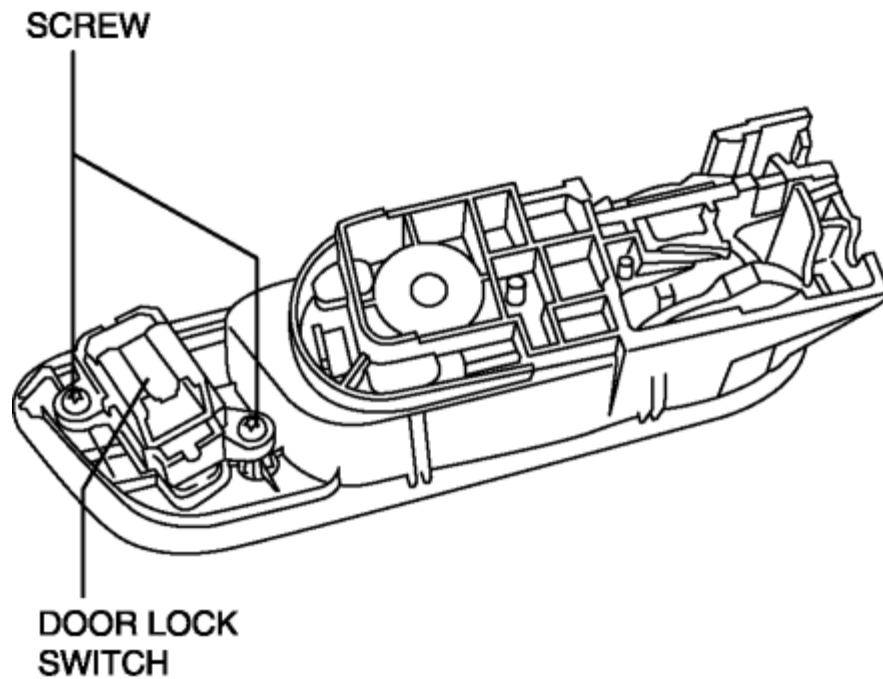


6. Install in the reverse order of removal.

2012 - Mazda6 - Body and Accessories

DOOR LOCK SWITCH REMOVAL/ INSTALLATION

1. Disconnect the negative battery cable.
2. Remove the inner garnish. (See [INNER GARNISH REMOVAL/ INSTALLATION.](#))
3. Remove the front door trim. (See [FRONT DOOR TRIM REMOVAL/ INSTALLATION.](#))
4. Remove the inner handle. (See [INNER HANDLE REMOVAL/ INSTALLATION.](#))
5. Remove the screws, then remove the door lock switch.

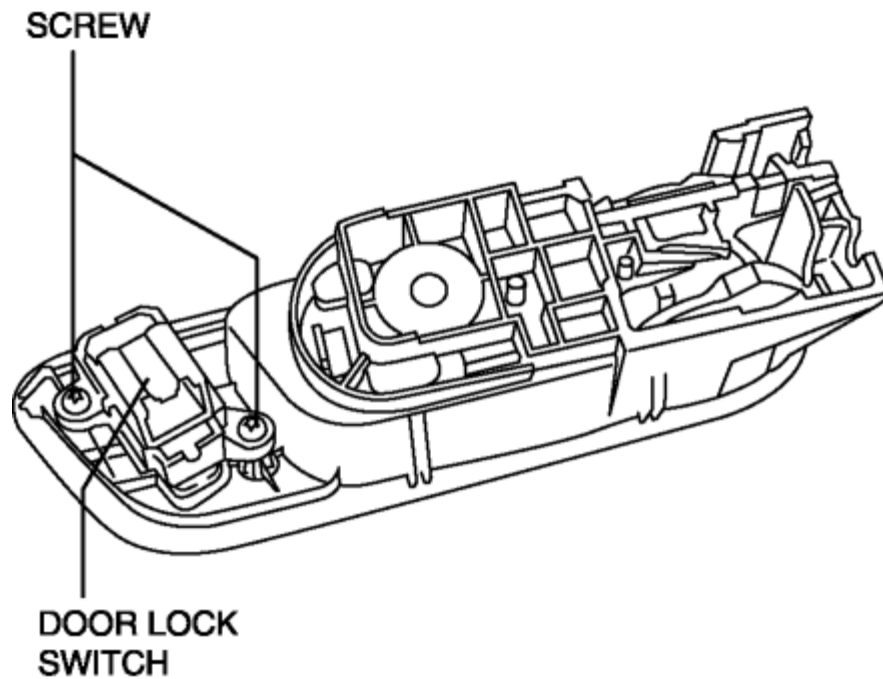

6. Install in the reverse order of removal.