



2012 - Mazda6 - Body and Accessories

HOOD LATCH SWITCH INSPECTION

- 1. Disconnect the negative battery cable.
- 2. Remove the hood latch. (See [HOOD LATCH AND RELEASE LEVER REMOVAL/ INSTALLATION](#).)
- 3. Press the latch in using a flathead screwdriver to inspect the latch lever condition.

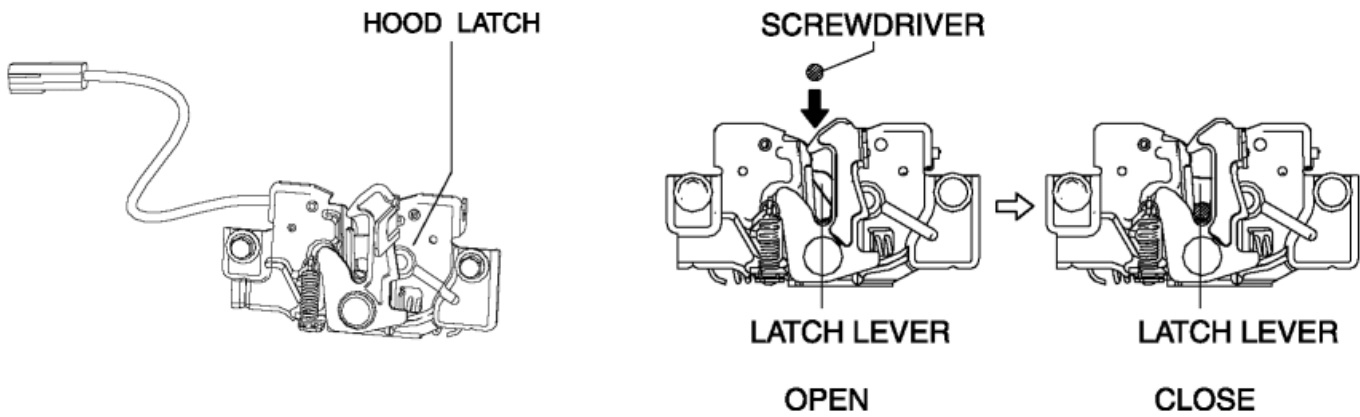

- 4. Verify that the continuity is as indicated in the table.

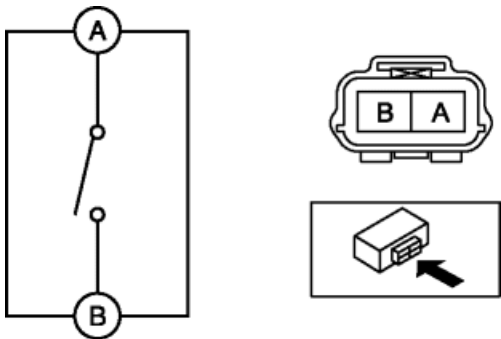


- If not as indicated in the table, replace the hood latch.

HOOD LATCH SWITCH	○—○ CONTINUITY	
	TERMINAL	
	A	B
OPEN		
CLOSE	○—○	○—○


2012 - Mazda6 - Body and Accessories

HOOD LATCH SWITCH INSPECTION

- 1. Disconnect the negative battery cable.
- 2. Remove the hood latch. (See [HOOD LATCH AND RELEASE LEVER REMOVAL/ INSTALLATION](#).)
- 3. Press the latch in using a flathead screwdriver to inspect the latch lever condition.

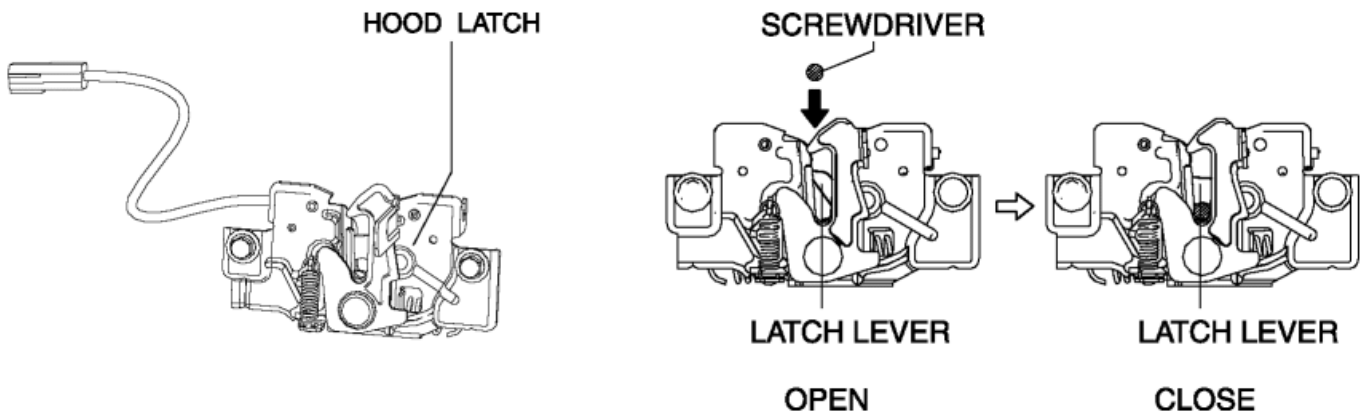

- 4. Verify that the continuity is as indicated in the table.

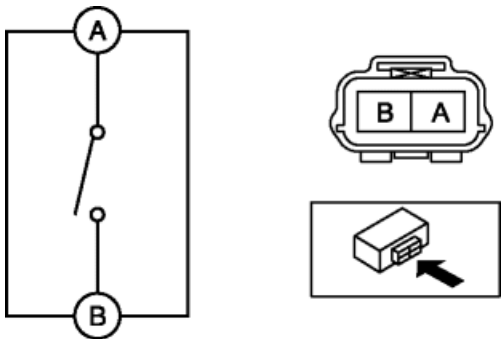

- If not as indicated in the table, replace the hood latch.

○—○ CONTINUITY

HOOD LATCH SWITCH	TERMINAL	
	A	B
OPEN		
CLOSE	○—○	○—○