



2012 - Mazda6 - Body and Accessories

TRUNK LID LATCH SWITCH INSPECTION

1. Disconnect the negative battery cable.
2. Remove the recess. (See [RECESS REMOVAL/ INSTALLATION.](#))
3. Remove the trunk lid trim. (See [TRUNK LID TRIM REMOVAL/ INSTALLATION.](#))
4. Remove the trunk lid latch and lock actuator. (See [TRUNK LID LATCH AND RELEASE ACTUATOR REMOVAL/ INSTALLATION.](#))
5. Press the latch in using a flathead screwdriver to inspect the latch lever condition.

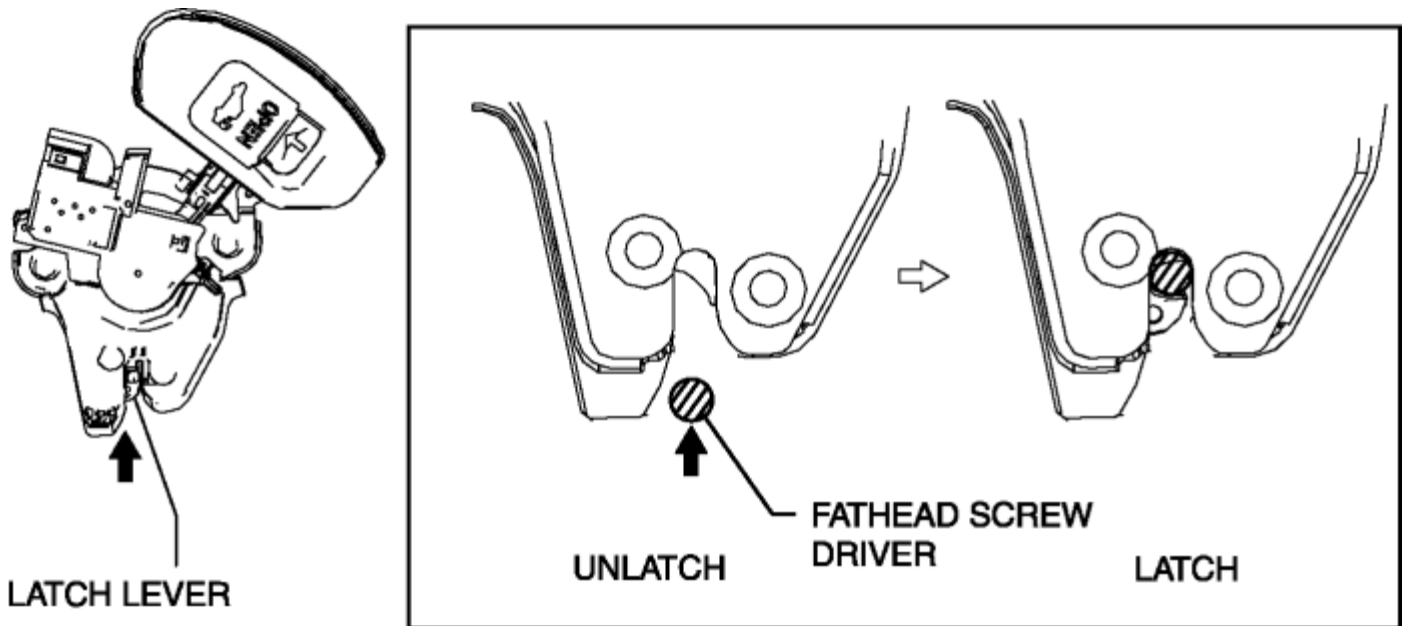

6. Verify that the continuity is as indicated in the table.

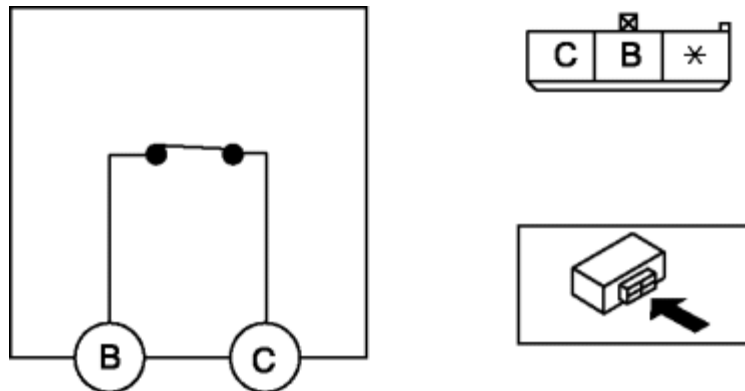

- If not as indicated in the table, replace the trunk lid latch and lock actuator.

○—○: CONTINUITY

LATCH CONDITION	TERMINAL	
	B	C
LATCH (TRUNK LID CLOSE)		
UNLATCH (TRUNK LID OPEN)	○—	—○

[< Previous](#) [Next >](#)


[Back to Top](#)

© 2012 Mazda North American Operations, U.S.A.


2012 - Mazda6 - Body and Accessories

TRUNK LID LATCH SWITCH INSPECTION

1. Disconnect the negative battery cable.
2. Remove the recess. (See [RECESS REMOVAL/ INSTALLATION.](#))
3. Remove the trunk lid trim. (See [TRUNK LID TRIM REMOVAL/ INSTALLATION.](#))
4. Remove the trunk lid latch and lock actuator. (See [TRUNK LID LATCH AND RELEASE ACTUATOR REMOVAL/ INSTALLATION.](#))
5. Press the latch in using a flathead screwdriver to inspect the latch lever condition.

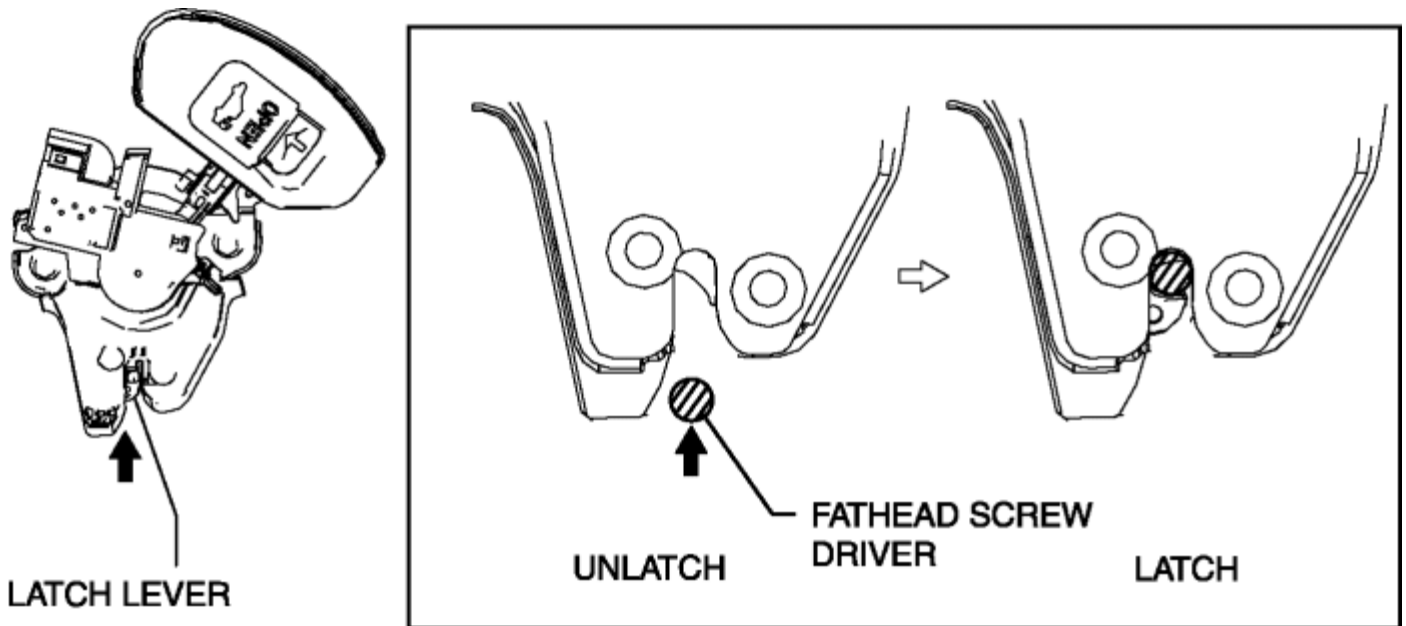

6. Verify that the continuity is as indicated in the table.

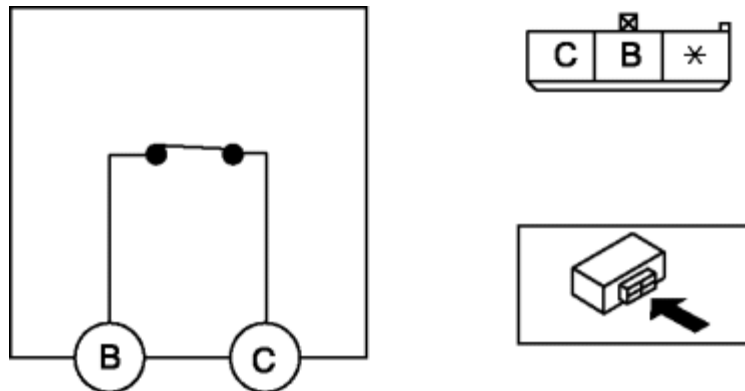

- If not as indicated in the table, replace the trunk lid latch and lock actuator.

○—○: CONTINUITY

LATCH CONDITION	TERMINAL	
	B	C
LATCH (TRUNK LID CLOSE)		
UNLATCH (TRUNK LID OPEN)	○—	—○

[< Previous](#) [Next >](#)

[Back to Top](#)

© 2012 Mazda North American Operations, U.S.A.