



2012 - Mazda6 - Body and Accessories

TRUNK LID LATCH AND RELEASE ACTUATOR REMOVAL/ INSTALLATION

1. Disconnect the negative battery cable.
2. Remove the recess. (See [RECESS REMOVAL/ INSTALLATION](#).)
3. Remove the trunk lid trim. (See [TRUNK LID TRIM REMOVAL/ INSTALLATION](#).)
4. Disconnect the connector.

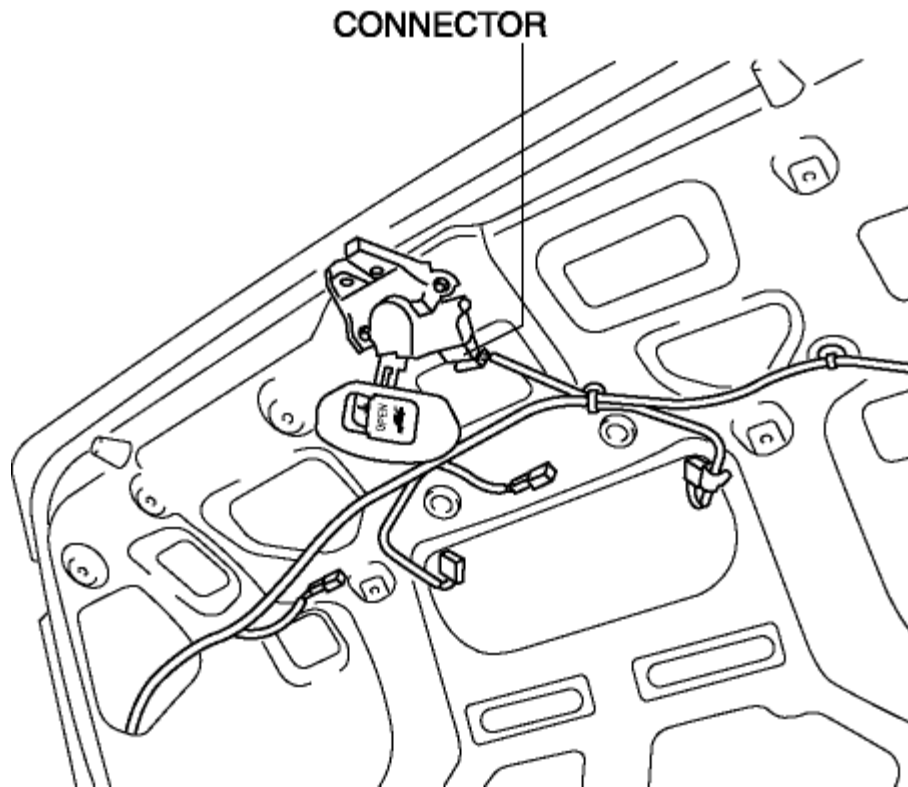

5. Remove the bolts.

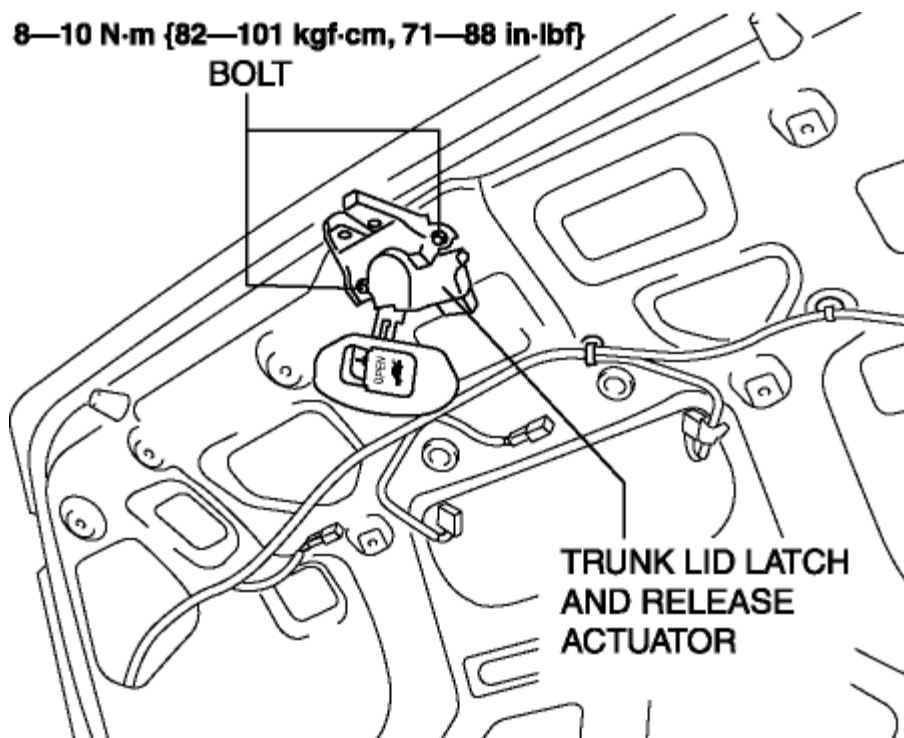

6. Remove the trunk lid latch and release actuator.

7. Install in the reverse order of removal.

[< Previous](#) [Next >](#)


[Back to Top](#)

© 2012 Mazda North American Operations, U.S.A.


2012 - Mazda6 - Body and Accessories

TRUNK LID LATCH AND RELEASE ACTUATOR REMOVAL/ INSTALLATION

1. Disconnect the negative battery cable.
2. Remove the recess. (See [RECESS REMOVAL/ INSTALLATION](#).)
3. Remove the trunk lid trim. (See [TRUNK LID TRIM REMOVAL/ INSTALLATION](#).)
4. Disconnect the connector.

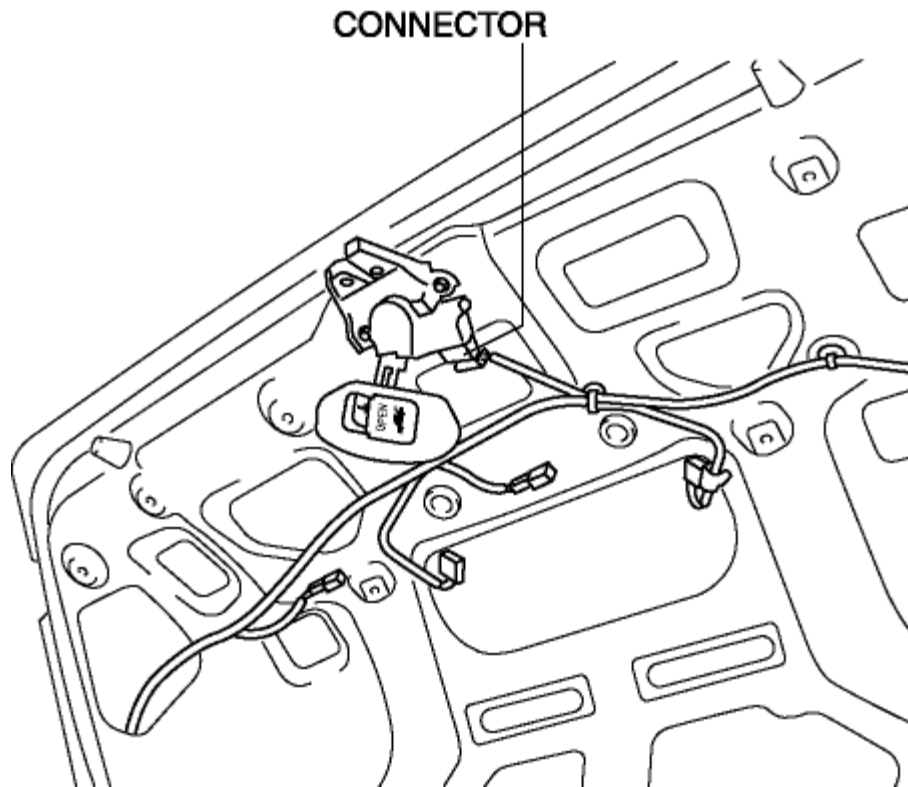

5. Remove the bolts.

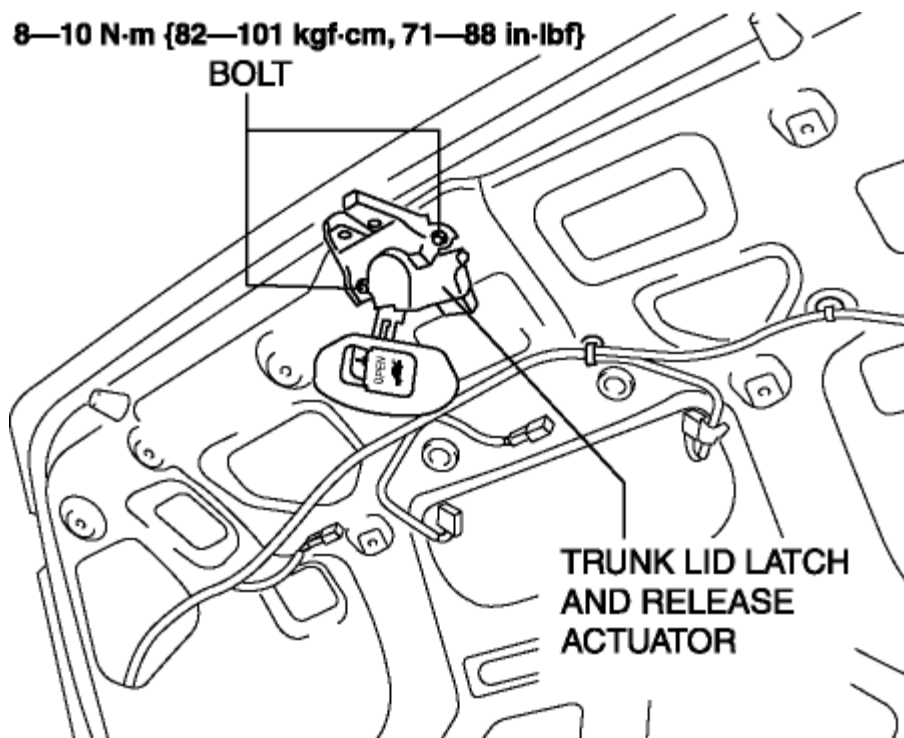

6. Remove the trunk lid latch and release actuator.

7. Install in the reverse order of removal.

[< Previous](#) [Next >](#)

[Back to Top](#)

© 2012 Mazda North American Operations, U.S.A.