


2012 - Mazda6 - Body and Accessories

SUNROOF SWITCH INSPECTION

- 1. Disconnect the negative battery cable.
- 2. Open the overhead console.
- 3. Remove the map light from the headliner. (See [MAP LIGHT REMOVAL/ INSTALLATION](#).)
- 4. Remove the sunroof switch. (See [SUNROOF SWITCH REMOVAL/ INSTALLATION](#).)
- 5. Inspect for continuity between the sunroof switch terminals using an ohmmeter.

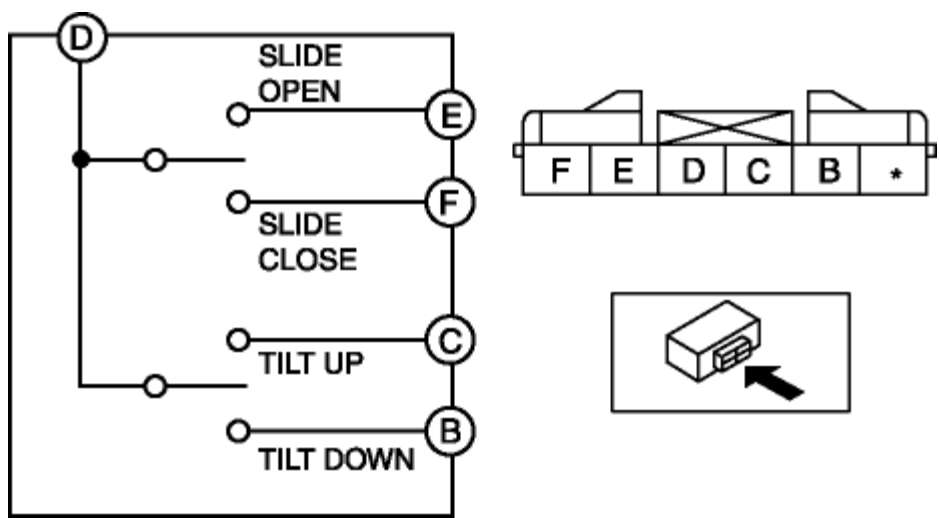

- If not as specified, replace the sunroof switch. (See [SUNROOF SWITCH REMOVAL/ INSTALLATION](#).)


○—○ : Continuity

Switch position	Terminal				
	B	C	D	E	F
Slide open			○—○		
Slide close			○—○—○		
Tilt up		○—○			
Tilt down	○—○				
Off					

2012 - Mazda6 - Body and Accessories

SUNROOF SWITCH INSPECTION

- 1. Disconnect the negative battery cable.
- 2. Open the overhead console.
- 3. Remove the map light from the headliner. (See [MAP LIGHT REMOVAL/ INSTALLATION](#).)
- 4. Remove the sunroof switch. (See [SUNROOF SWITCH REMOVAL/ INSTALLATION](#).)
- 5. Inspect for continuity between the sunroof switch terminals using an ohmmeter.

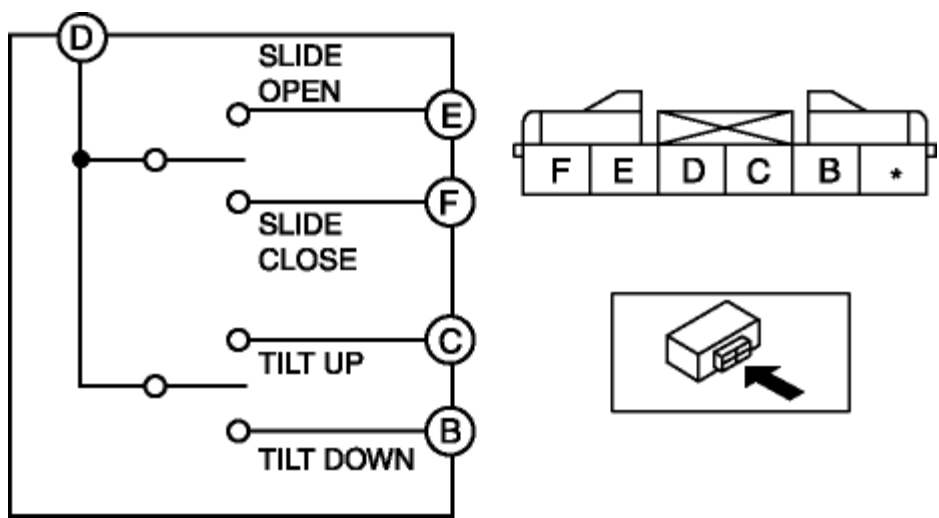

- If not as specified, replace the sunroof switch. (See [SUNROOF SWITCH REMOVAL/ INSTALLATION](#).)

○—○ : Continuity

Switch position	Terminal				
	B	C	D	E	F
Slide open			○—○		
Slide close			○—○—○		
Tilt up		○—○			
Tilt down	○—○				
Off					

