

2012 - Mazda6 - Body and Accessories

FRONT DRAIN HOSE REMOVAL

1. Disconnect the negative battery cable.
2. Partially peel back the seaming welt.
3. Remove the rain sensor cover. (Vehicles with auto light/wiper system) (See [RAIN SENSOR REMOVAL/ INSTALLATION.](#))
4. Disconnect the rain sensor connector. (Vehicles with auto light/wiper system)
5. Remove the following parts:
 - a. Glove compartment (See [GLOVE COMPARTMENT REMOVAL/ INSTALLATION.](#))
 - b. Dashboard under cover (See [DASHBOARD UNDER COVER REMOVAL/ INSTALLATION.](#))
 - c. Front scuff plates (See [FRONT SCUFF PLATE REMOVAL/ INSTALLATION.](#))
 - d. Front side trims (See [FRONT SIDE TRIM REMOVAL/ INSTALLATION.](#))
 - e. Upper panel (See [UPPER PANEL REMOVAL/ INSTALLATION.](#))
 - f. Decoration panel (See [DECORATION PANEL REMOVAL/ INSTALLATION.](#))
 - g. Shift knob (MTX) (See [MANUAL TRANSAXLE SHIFT MECHANISM LOCATION INDEX.](#))
 - h. Shift panel (See [SHIFT PANEL REMOVAL/ INSTALLATION.](#))
 - i. Center panel lower (See [CENTER PANEL LOWER REMOVAL/ INSTALLATION.](#))
 - j. Climate control unit (See [CLIMATE CONTROL UNIT REMOVAL/ INSTALLATION \[FULL-AUTO AIR CONDITIONER\].](#)) (See [CLIMATE CONTROL UNIT REMOVAL/ INSTALLATION \[MANUAL AIR CONDITIONER\].](#))
 - k. Rear console (See [REAR CONSOLE REMOVAL/ INSTALLATION.](#))
 - l. Hood release lever (See [HOOD LATCH AND RELEASE LEVER REMOVAL/ INSTALLATION.](#))
 - m. Lower panel (See [LOWER PANEL REMOVAL/ INSTALLATION.](#))
 - n. Driver-side air bag module (See [DRIVER-SIDE AIR BAG MODULE REMOVAL/ INSTALLATION.](#))
 - o. Steering wheel (See [STEERING WHEEL AND COLUMN REMOVAL/ INSTALLATION \[WITHOUT ADVANCED KEYLESS ENTRY AND PUSH BUTTON START SYSTEM\].](#)) (See [STEERING WHEEL AND COLUMN REMOVAL/ INSTALLATION \[WITH ADVANCED KEYLESS ENTRY AND PUSH BUTTON START SYSTEM\].](#))
 - p. Column cover (See [COLUMN COVER REMOVAL/ INSTALLATION.](#))
 - q. Combination switch (See [COMBINATION SWITCH REMOVAL/ INSTALLATION.](#))


- r. Meter hood (See [METER HOOD REMOVAL/ INSTALLATION.](#))
- s. Instrument cluster (See [INSTRUMENT CLUSTER REMOVAL/ INSTALLATION.](#))
- t. Center panel upper (See [CENTER PANEL UPPER REMOVAL/ INSTALLATION.](#))
- u. Audio unit (See [AUDIO UNIT REMOVAL/ INSTALLATION.](#))
- v. Steering shaft cover (See [STEERING WHEEL AND COLUMN REMOVAL/ INSTALLATION \[WITHOUT ADVANCED KEYLESS ENTRY AND PUSH BUTTON START SYSTEM\] .](#))(See [STEERING WHEEL AND COLUMN REMOVAL/ INSTALLATION \[WITH ADVANCED KEYLESS ENTRY AND PUSH BUTTON START SYSTEM\] .](#))
- w. Steering shaft (See [STEERING WHEEL AND COLUMN REMOVAL/ INSTALLATION \[WITHOUT ADVANCED KEYLESS ENTRY AND PUSH BUTTON START SYSTEM\] .](#))(See [STEERING WHEEL AND COLUMN REMOVAL/ INSTALLATION \[WITH ADVANCED KEYLESS ENTRY AND PUSH BUTTON START SYSTEM\] .](#))
- x. Side panel (See [SIDE PANEL REMOVAL/ INSTALLATION.](#))
- y. SIRIUS satellite radio unit (See [SIRIUS SATELLITE RADIO UNIT REMOVAL/ INSTALLATION.](#))
- z. Passenger-side air bag module (See [PASSENGER-SIDE AIR BAG MODULE REMOVAL/ INSTALLATION.](#))
- aa. A-pillar trims (See [A-PILLAR TRIM REMOVAL/ INSTALLATION.](#))
- ab. Dashboard (See [DASHBOARD REMOVAL/ INSTALLATION.](#))
- ac. Audio amplifier (with Bose®) (See [AUDIO AMPLIFIER REMOVAL/ INSTALLATION.](#))
- ad. Sunroof seaming welt
- ae. A-pillar trims (See [A-PILLAR TRIM REMOVAL/ INSTALLATION.](#))
- af. Upper anchor of the front seat belt (See [FRONT SEAT BELT REMOVAL/ INSTALLATION.](#))
- ag. Rear scuff plate (See [REAR SCUFF PLATE REMOVAL/ INSTALLATION.](#))
- ah. B-pillar lower trims (See [B-PILLAR LOWER TRIM REMOVAL/ INSTALLATION.](#))
- ai. B-pillar upper trims (See [B-PILLAR UPPER TRIM REMOVAL/ INSTALLATION.](#))
- aj. Rear seat cushion (See [REAR SEAT CUSHION REMOVAL/ INSTALLATION.](#))
- ak. Rear side seat back (See [REAR SIDE SEAT BACK REMOVAL/ INSTALLATION.](#))
- al. C-pillar trims (See [C-PILLAR TRIM REMOVAL/ INSTALLATION.](#))
- am. Sunvisors (See [SUNVISOR REMOVAL/ INSTALLATION.](#))
- an. Map light (See [MAP LIGHT REMOVAL/ INSTALLATION.](#))
- ao. Assist handle (See [ASSIST HANDLE REMOVAL/ INSTALLATION.](#))
- ap. Headliner (See [HEADLINER REMOVAL/ INSTALLATION.](#))

6. Disconnect the auto-dimming mirror connector. (vehicles with auto-dimming mirror)

7. Disconnect the roof harness connector, remove the clip, and remove the connector.

8. Disconnect the front drain hose from the sunroof frame.

9. Remove the front drain hose from the clips.

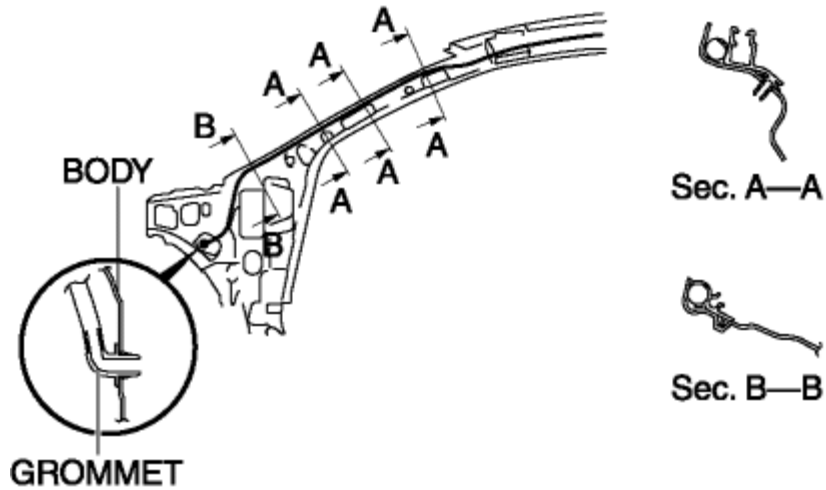

10. Pull the front drain hose into the room side.

11. Remove the front drain hose.

[< Previous](#) [Next >](#)

[Back to Top](#)

© 2012 Mazda North American Operations, U.S.A.

2012 - Mazda6 - Body and Accessories

FRONT DRAIN HOSE REMOVAL

1. Disconnect the negative battery cable.
2. Partially peel back the seaming welt.
3. Remove the rain sensor cover. (Vehicles with auto light/wiper system) (See [RAIN SENSOR REMOVAL/ INSTALLATION.](#))
4. Disconnect the rain sensor connector. (Vehicles with auto light/wiper system)
5. Remove the following parts:
 - a. Glove compartment (See [GLOVE COMPARTMENT REMOVAL/ INSTALLATION.](#))
 - b. Dashboard under cover (See [DASHBOARD UNDER COVER REMOVAL/ INSTALLATION.](#))
 - c. Front scuff plates (See [FRONT SCUFF PLATE REMOVAL/ INSTALLATION.](#))
 - d. Front side trims (See [FRONT SIDE TRIM REMOVAL/ INSTALLATION.](#))
 - e. Upper panel (See [UPPER PANEL REMOVAL/ INSTALLATION.](#))
 - f. Decoration panel (See [DECORATION PANEL REMOVAL/ INSTALLATION.](#))
 - g. Shift knob (MTX) (See [MANUAL TRANSAXLE SHIFT MECHANISM LOCATION INDEX.](#))
 - h. Shift panel (See [SHIFT PANEL REMOVAL/ INSTALLATION.](#))
 - i. Center panel lower (See [CENTER PANEL LOWER REMOVAL/ INSTALLATION.](#))
 - j. Climate control unit (See [CLIMATE CONTROL UNIT REMOVAL/ INSTALLATION \[FULL-AUTO AIR CONDITIONER\].](#)) (See [CLIMATE CONTROL UNIT REMOVAL/ INSTALLATION \[MANUAL AIR CONDITIONER\].](#))
 - k. Rear console (See [REAR CONSOLE REMOVAL/ INSTALLATION.](#))
 - l. Hood release lever (See [HOOD LATCH AND RELEASE LEVER REMOVAL/ INSTALLATION.](#))
 - m. Lower panel (See [LOWER PANEL REMOVAL/ INSTALLATION.](#))
 - n. Driver-side air bag module (See [DRIVER-SIDE AIR BAG MODULE REMOVAL/ INSTALLATION.](#))
 - o. Steering wheel (See [STEERING WHEEL AND COLUMN REMOVAL/ INSTALLATION \[WITHOUT ADVANCED KEYLESS ENTRY AND PUSH BUTTON START SYSTEM\].](#)) (See [STEERING WHEEL AND COLUMN REMOVAL/ INSTALLATION \[WITH ADVANCED KEYLESS ENTRY AND PUSH BUTTON START SYSTEM\].](#))
 - p. Column cover (See [COLUMN COVER REMOVAL/ INSTALLATION.](#))
 - q. Combination switch (See [COMBINATION SWITCH REMOVAL/ INSTALLATION.](#))


- r. Meter hood (See [METER HOOD REMOVAL/ INSTALLATION.](#))
- s. Instrument cluster (See [INSTRUMENT CLUSTER REMOVAL/ INSTALLATION.](#))
- t. Center panel upper (See [CENTER PANEL UPPER REMOVAL/ INSTALLATION.](#))
- u. Audio unit (See [AUDIO UNIT REMOVAL/ INSTALLATION.](#))
- v. Steering shaft cover (See [STEERING WHEEL AND COLUMN REMOVAL/ INSTALLATION \[WITHOUT ADVANCED KEYLESS ENTRY AND PUSH BUTTON START SYSTEM\] .](#))(See [STEERING WHEEL AND COLUMN REMOVAL/ INSTALLATION \[WITH ADVANCED KEYLESS ENTRY AND PUSH BUTTON START SYSTEM\] .](#))
- w. Steering shaft (See [STEERING WHEEL AND COLUMN REMOVAL/ INSTALLATION \[WITHOUT ADVANCED KEYLESS ENTRY AND PUSH BUTTON START SYSTEM\] .](#))(See [STEERING WHEEL AND COLUMN REMOVAL/ INSTALLATION \[WITH ADVANCED KEYLESS ENTRY AND PUSH BUTTON START SYSTEM\] .](#))
- x. Side panel (See [SIDE PANEL REMOVAL/ INSTALLATION.](#))
- y. SIRIUS satellite radio unit (See [SIRIUS SATELLITE RADIO UNIT REMOVAL/ INSTALLATION.](#))
- z. Passenger-side air bag module (See [PASSENGER-SIDE AIR BAG MODULE REMOVAL/ INSTALLATION.](#))
- aa. A-pillar trims (See [A-PILLAR TRIM REMOVAL/ INSTALLATION.](#))
- ab. Dashboard (See [DASHBOARD REMOVAL/ INSTALLATION.](#))
- ac. Audio amplifier (with Bose®) (See [AUDIO AMPLIFIER REMOVAL/ INSTALLATION.](#))
- ad. Sunroof seaming welt
- ae. A-pillar trims (See [A-PILLAR TRIM REMOVAL/ INSTALLATION.](#))
- af. Upper anchor of the front seat belt (See [FRONT SEAT BELT REMOVAL/ INSTALLATION.](#))
- ag. Rear scuff plate (See [REAR SCUFF PLATE REMOVAL/ INSTALLATION.](#))
- ah. B-pillar lower trims (See [B-PILLAR LOWER TRIM REMOVAL/ INSTALLATION.](#))
- ai. B-pillar upper trims (See [B-PILLAR UPPER TRIM REMOVAL/ INSTALLATION.](#))
- aj. Rear seat cushion (See [REAR SEAT CUSHION REMOVAL/ INSTALLATION.](#))
- ak. Rear side seat back (See [REAR SIDE SEAT BACK REMOVAL/ INSTALLATION.](#))
- al. C-pillar trims (See [C-PILLAR TRIM REMOVAL/ INSTALLATION.](#))
- am. Sunvisors (See [SUNVISOR REMOVAL/ INSTALLATION.](#))
- an. Map light (See [MAP LIGHT REMOVAL/ INSTALLATION.](#))
- ao. Assist handle (See [ASSIST HANDLE REMOVAL/ INSTALLATION.](#))
- ap. Headliner (See [HEADLINER REMOVAL/ INSTALLATION.](#))

6. Disconnect the auto-dimming mirror connector. (vehicles with auto-dimming mirror)

7. Disconnect the roof harness connector, remove the clip, and remove the connector.

8. Disconnect the front drain hose from the sunroof frame.

9. Remove the front drain hose from the clips.

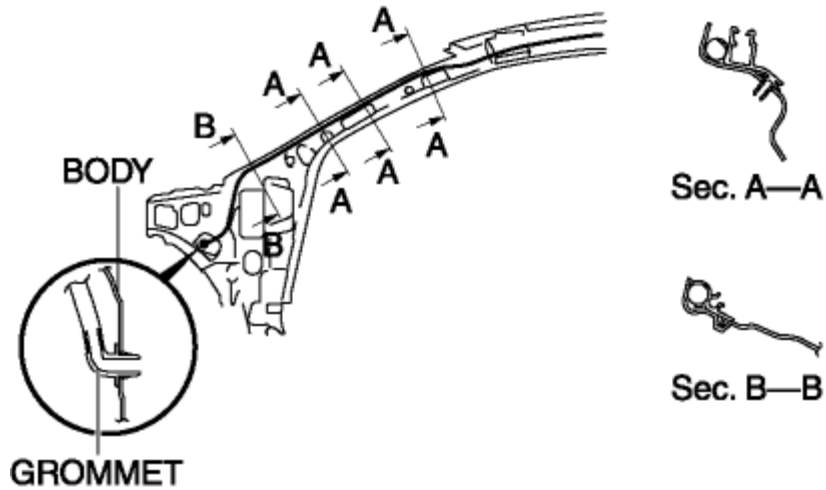

10. Pull the front drain hose into the room side.

11. Remove the front drain hose.

[< Previous](#) [Next >](#)

[Back to Top](#)

© 2012 Mazda North American Operations, U.S.A.