

2012 - Mazda6 - Body and Accessories

FRONT DRAIN HOSE INSTALLATION

CAUTION:

- If the front drain hose is pinched or bent anywhere, the water in the hose may not discharge and enter the inside of the vehicle. During and after installation of the trims and the headliner, always make sure there is no interference with the front drain hose. Fix any problem if found.

1. Apply soapy water to the front drain hose inserting area.
2. Insert one end (the wider end) of the front drain hose into the sunroof frame.
3. Install the front drain hose to the clips, parallel to the pillar and free of slack.
4. Insert the front drain hose joint into the hinge pillar inner hole.
5. Connect the auto-dimming mirror connector. (vehicles with auto-dimming mirror)
6. Install the following parts:
 - a. Headliner (See [HEADLINER REMOVAL/ INSTALLATION.](#))
 - b. Assist handle (See [ASSIST HANDLE REMOVAL/ INSTALLATION.](#))
 - c. Map light (See [MAP LIGHT REMOVAL/ INSTALLATION.](#))
 - d. Sunvisors (See [SUNVISOR REMOVAL/ INSTALLATION.](#))
 - e. C-pillar trims (See [C-PILLAR TRIM REMOVAL/ INSTALLATION.](#))
 - f. Rear side seat back (See [REAR SIDE SEAT BACK REMOVAL/ INSTALLATION.](#))
 - g. Rear seat cushion (See [REAR SEAT CUSHION REMOVAL/ INSTALLATION.](#))
 - h. B-pillar upper trims (See [B-PILLAR UPPER TRIM REMOVAL/ INSTALLATION.](#))
 - i. B-pillar lower trims (See [B-PILLAR LOWER TRIM REMOVAL/ INSTALLATION.](#))
 - j. Rear scuff plate (See [REAR SCUFF PLATE REMOVAL/ INSTALLATION.](#))
 - k. Upper anchor of the front seat belt (See [FRONT SEAT BELT REMOVAL/ INSTALLATION.](#))
 - l. A-pillar trims (See [A-PILLAR TRIM REMOVAL/ INSTALLATION.](#))
 - m. Sunroof seaming welt
 - n. Audio amplifier (with Bose®) (See [AUDIO AMPLIFIER REMOVAL/ INSTALLATION.](#))
 - o. Dashboard (See [DASHBOARD REMOVAL/ INSTALLATION.](#))
 - p. A-pillar trims (See [A-PILLAR TRIM REMOVAL/ INSTALLATION.](#))

- q. Passenger-side air bag module (See **PASSENGER-SIDE AIR BAG MODULE REMOVAL/ INSTALLATION.**)
- r. SIRIUS satellite radio unit (See **SIRIUS SATELLITE RADIO UNIT REMOVAL/ INSTALLATION.**)
- s. Side panel (See **SIDE PANEL REMOVAL/ INSTALLATION.**)
- t. Steering shaft (See **STEERING WHEEL AND COLUMN REMOVAL/ INSTALLATION [WITHOUT ADVANCED KEYLESS ENTRY AND PUSH BUTTON START SYSTEM] .**) (See **STEERING WHEEL AND COLUMN REMOVAL/ INSTALLATION [WITH ADVANCED KEYLESS ENTRY AND PUSH BUTTON START SYSTEM] .**)
- u. Steering shaft cover (See **STEERING WHEEL AND COLUMN REMOVAL/ INSTALLATION [WITHOUT ADVANCED KEYLESS ENTRY AND PUSH BUTTON START SYSTEM] .**) (See **STEERING WHEEL AND COLUMN REMOVAL/ INSTALLATION [WITH ADVANCED KEYLESS ENTRY AND PUSH BUTTON START SYSTEM] .**)
- v. Audio unit (See **AUDIO UNIT REMOVAL/ INSTALLATION.**)
- w. Center panel upper (See **CENTER PANEL UPPER REMOVAL/ INSTALLATION.**)
- x. Instrument cluster (See **INSTRUMENT CLUSTER REMOVAL/ INSTALLATION.**)
- y. Meter hood (See **METER HOOD REMOVAL/ INSTALLATION.**)
- z. Combination switch (See **COMBINATION SWITCH REMOVAL/ INSTALLATION.**)
- aa. Column cover (See **COLUMN COVER REMOVAL/ INSTALLATION.**)
- ab. Steering wheel (See **STEERING WHEEL AND COLUMN REMOVAL/ INSTALLATION [WITHOUT ADVANCED KEYLESS ENTRY AND PUSH BUTTON START SYSTEM] .**) (See **STEERING WHEEL AND COLUMN REMOVAL/ INSTALLATION [WITH ADVANCED KEYLESS ENTRY AND PUSH BUTTON START SYSTEM] .**)
- ac. Driver-side air bag module (See **DRIVER-SIDE AIR BAG MODULE REMOVAL/ INSTALLATION.**)
- ad. Lower panel (See **LOWER PANEL REMOVAL/ INSTALLATION.**)
- ae. Hood release lever (See **HOOD LATCH AND RELEASE LEVER REMOVAL/ INSTALLATION.**)
- af. Rear console (See **REAR CONSOLE REMOVAL/ INSTALLATION.**)
- ag. Climate control unit (See **CLIMATE CONTROL UNIT REMOVAL/ INSTALLATION [FULL-AUTO AIR CONDITIONER] .**) (See **CLIMATE CONTROL UNIT REMOVAL/ INSTALLATION [MANUAL AIR CONDITIONER] .**)
- ah. Center panel lower (See **CENTER PANEL LOWER REMOVAL/ INSTALLATION.**)
- ai. Shift panel (See **SHIFT PANEL REMOVAL/ INSTALLATION.**)
- aj. Shift knob (MTX) (See **MANUAL TRANSAXLE SHIFT MECHANISM LOCATION INDEX.**)
- ak. Decoration panel (See **DECORATION PANEL REMOVAL/ INSTALLATION.**)
- al. Upper panel (See **UPPER PANEL REMOVAL/ INSTALLATION.**)
- am. Front side trims (See **FRONT SIDE TRIM REMOVAL/ INSTALLATION.**)
- an. Front scuff plates (See **FRONT SCUFF PLATE REMOVAL/ INSTALLATION.**)

ao. Dashboard under cover (See [DASHBOARD UNDER COVER REMOVAL/ INSTALLATION.](#))

ap. Glove compartment (See [GLOVE COMPARTMENT REMOVAL/ INSTALLATION.](#))

7. Connect the rain sensor connector. (Vehicles with auto light/wiper system)

8. Install the rain sensor cover. (Vehicles with auto light/wiper system) (See [RAIN SENSOR REMOVAL/ INSTALLATION.](#))

9. Install the seaming welt.

10. Connect the negative battery cable.

[< Previous](#) [Next >](#)

[Back to Top](#)

© 2012 Mazda North American Operations, U.S.A.

2012 - Mazda6 - Body and Accessories

FRONT DRAIN HOSE INSTALLATION

CAUTION:

- If the front drain hose is pinched or bent anywhere, the water in the hose may not discharge and enter the inside of the vehicle. During and after installation of the trims and the headliner, always make sure there is no interference with the front drain hose. Fix any problem if found.

1. Apply soapy water to the front drain hose inserting area.
2. Insert one end (the wider end) of the front drain hose into the sunroof frame.
3. Install the front drain hose to the clips, parallel to the pillar and free of slack.
4. Insert the front drain hose joint into the hinge pillar inner hole.
5. Connect the auto-dimming mirror connector. (vehicles with auto-dimming mirror)
6. Install the following parts:
 - a. Headliner (See [HEADLINER REMOVAL/ INSTALLATION.](#))
 - b. Assist handle (See [ASSIST HANDLE REMOVAL/ INSTALLATION.](#))
 - c. Map light (See [MAP LIGHT REMOVAL/ INSTALLATION.](#))
 - d. Sunvisors (See [SUNVISOR REMOVAL/ INSTALLATION.](#))
 - e. C-pillar trims (See [C-PILLAR TRIM REMOVAL/ INSTALLATION.](#))
 - f. Rear side seat back (See [REAR SIDE SEAT BACK REMOVAL/ INSTALLATION.](#))
 - g. Rear seat cushion (See [REAR SEAT CUSHION REMOVAL/ INSTALLATION.](#))
 - h. B-pillar upper trims (See [B-PILLAR UPPER TRIM REMOVAL/ INSTALLATION.](#))
 - i. B-pillar lower trims (See [B-PILLAR LOWER TRIM REMOVAL/ INSTALLATION.](#))
 - j. Rear scuff plate (See [REAR SCUFF PLATE REMOVAL/ INSTALLATION.](#))
 - k. Upper anchor of the front seat belt (See [FRONT SEAT BELT REMOVAL/ INSTALLATION.](#))
 - l. A-pillar trims (See [A-PILLAR TRIM REMOVAL/ INSTALLATION.](#))
 - m. Sunroof seaming welt
 - n. Audio amplifier (with Bose®) (See [AUDIO AMPLIFIER REMOVAL/ INSTALLATION.](#))
 - o. Dashboard (See [DASHBOARD REMOVAL/ INSTALLATION.](#))
 - p. A-pillar trims (See [A-PILLAR TRIM REMOVAL/ INSTALLATION.](#))

- q. Passenger-side air bag module (See **PASSENGER-SIDE AIR BAG MODULE REMOVAL/ INSTALLATION.**)
- r. SIRIUS satellite radio unit (See **SIRIUS SATELLITE RADIO UNIT REMOVAL/ INSTALLATION.**)
- s. Side panel (See **SIDE PANEL REMOVAL/ INSTALLATION.**)
- t. Steering shaft (See **STEERING WHEEL AND COLUMN REMOVAL/ INSTALLATION [WITHOUT ADVANCED KEYLESS ENTRY AND PUSH BUTTON START SYSTEM] .**) (See **STEERING WHEEL AND COLUMN REMOVAL/ INSTALLATION [WITH ADVANCED KEYLESS ENTRY AND PUSH BUTTON START SYSTEM] .**)
- u. Steering shaft cover (See **STEERING WHEEL AND COLUMN REMOVAL/ INSTALLATION [WITHOUT ADVANCED KEYLESS ENTRY AND PUSH BUTTON START SYSTEM] .**) (See **STEERING WHEEL AND COLUMN REMOVAL/ INSTALLATION [WITH ADVANCED KEYLESS ENTRY AND PUSH BUTTON START SYSTEM] .**)
- v. Audio unit (See **AUDIO UNIT REMOVAL/ INSTALLATION.**)
- w. Center panel upper (See **CENTER PANEL UPPER REMOVAL/ INSTALLATION.**)
- x. Instrument cluster (See **INSTRUMENT CLUSTER REMOVAL/ INSTALLATION.**)
- y. Meter hood (See **METER HOOD REMOVAL/ INSTALLATION.**)
- z. Combination switch (See **COMBINATION SWITCH REMOVAL/ INSTALLATION.**)
- aa. Column cover (See **COLUMN COVER REMOVAL/ INSTALLATION.**)
- ab. Steering wheel (See **STEERING WHEEL AND COLUMN REMOVAL/ INSTALLATION [WITHOUT ADVANCED KEYLESS ENTRY AND PUSH BUTTON START SYSTEM] .**) (See **STEERING WHEEL AND COLUMN REMOVAL/ INSTALLATION [WITH ADVANCED KEYLESS ENTRY AND PUSH BUTTON START SYSTEM] .**)
- ac. Driver-side air bag module (See **DRIVER-SIDE AIR BAG MODULE REMOVAL/ INSTALLATION.**)
- ad. Lower panel (See **LOWER PANEL REMOVAL/ INSTALLATION.**)
- ae. Hood release lever (See **HOOD LATCH AND RELEASE LEVER REMOVAL/ INSTALLATION.**)
- af. Rear console (See **REAR CONSOLE REMOVAL/ INSTALLATION.**)
- ag. Climate control unit (See **CLIMATE CONTROL UNIT REMOVAL/ INSTALLATION [FULL-AUTO AIR CONDITIONER] .**) (See **CLIMATE CONTROL UNIT REMOVAL/ INSTALLATION [MANUAL AIR CONDITIONER] .**)
- ah. Center panel lower (See **CENTER PANEL LOWER REMOVAL/ INSTALLATION.**)
- ai. Shift panel (See **SHIFT PANEL REMOVAL/ INSTALLATION.**)
- aj. Shift knob (MTX) (See **MANUAL TRANSAXLE SHIFT MECHANISM LOCATION INDEX.**)
- ak. Decoration panel (See **DECORATION PANEL REMOVAL/ INSTALLATION.**)
- al. Upper panel (See **UPPER PANEL REMOVAL/ INSTALLATION.**)
- am. Front side trims (See **FRONT SIDE TRIM REMOVAL/ INSTALLATION.**)
- an. Front scuff plates (See **FRONT SCUFF PLATE REMOVAL/ INSTALLATION.**)

ao. Dashboard under cover (See [DASHBOARD UNDER COVER REMOVAL/ INSTALLATION.](#))

ap. Glove compartment (See [GLOVE COMPARTMENT REMOVAL/ INSTALLATION.](#))

7. Connect the rain sensor connector. (Vehicles with auto light/wiper system)

8. Install the rain sensor cover. (Vehicles with auto light/wiper system) (See [RAIN SENSOR REMOVAL/ INSTALLATION.](#))

9. Install the seaming welt.

10. Connect the negative battery cable.

[< Previous](#) [Next >](#)

[Back to Top](#)

© 2012 Mazda North American Operations, U.S.A.