
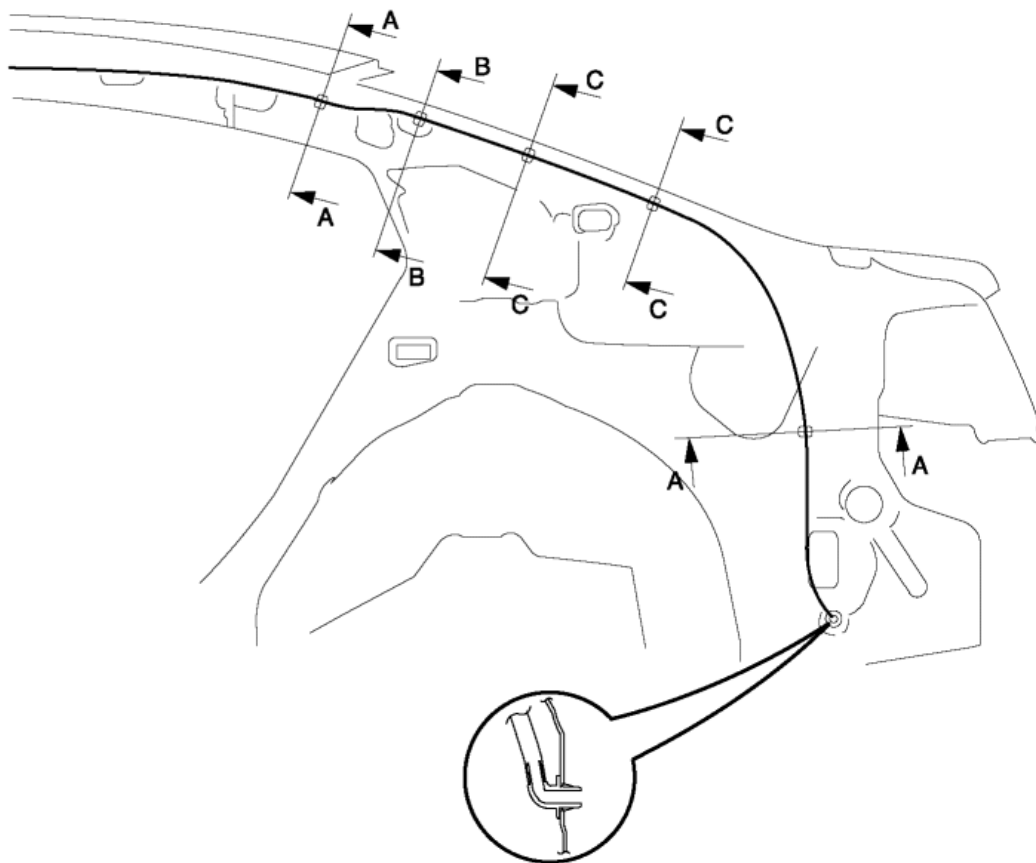
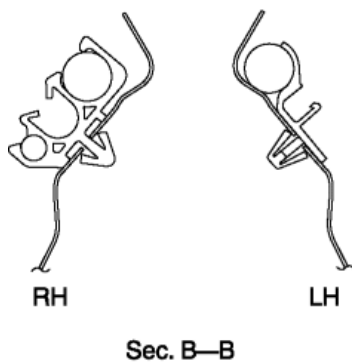


2012 - Mazda6 - Body and Accessories

REAR DRAIN HOSE REMOVAL

1. Disconnect the negative battery cable.
2. Partially peel back the seaming welt.
3. Remove the following parts:
 - a. Sunroof seaming welt
 - b. A-pillar trims (See [A-PILLAR TRIM REMOVAL/ INSTALLATION.](#))
 - c. Upper anchor of the front seat belt (See [FRONT SEAT BELT REMOVAL/ INSTALLATION.](#))
 - d. Front scuff plate (See [FRONT SCUFF PLATE REMOVAL/ INSTALLATION.](#))
 - e. Rear scuff plate inner (See [REAR SCUFF PLATE REMOVAL/ INSTALLATION.](#))
 - f. B-pillar lower trims (See [B-PILLAR LOWER TRIM REMOVAL/ INSTALLATION.](#))
 - g. B-pillar upper trims (See [B-PILLAR UPPER TRIM REMOVAL/ INSTALLATION.](#))
 - h. Rear seat cushion (See [REAR SEAT CUSHION REMOVAL/ INSTALLATION.](#))
 - i. Rear side seat back (See [REAR SIDE SEAT BACK REMOVAL/ INSTALLATION.](#))
 - j. C-pillar trims (See [C-PILLAR TRIM REMOVAL/ INSTALLATION.](#))
4. Disconnect the dimming mirror connector. (vehicles with dimming mirror)
5. Disconnect the rain sensor connector. (vehicles with rain sensor)
6. Remove the sunvisors. (See [SUNVISOR REMOVAL/ INSTALLATION.](#))
7. Remove the map light. (See [MAP LIGHT REMOVAL/ INSTALLATION.](#))
8. Remove the assist handle. (See [ASSIST HANDLE REMOVAL/ INSTALLATION.](#))
9. Remove the headliner. (See [HEADLINER REMOVAL/ INSTALLATION.](#))
10. Remove the trunk end trim. (See [TRUNK END TRIM REMOVAL/ INSTALLATION.](#))
11. Remove the trunk side trim. (See [TRUNK SIDE TRIM REMOVAL/ INSTALLATION.](#))
12. Disconnect the rear drain hose from the sunroof frame.
13. Remove the rear drain hose from the clips.

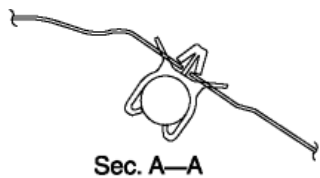




14. Pull the rear drain hose into the room side.
15. Remove the rear drain hose.

[< Previous](#) [Next >](#)

2012 - Mazda6 - Body and Accessories

REAR DRAIN HOSE REMOVAL

1. Disconnect the negative battery cable.
2. Partially peel back the seaming welt.
3. Remove the following parts:
 - a. Sunroof seaming welt
 - b. A-pillar trims (See [A-PILLAR TRIM REMOVAL/ INSTALLATION.](#))
 - c. Upper anchor of the front seat belt (See [FRONT SEAT BELT REMOVAL/ INSTALLATION.](#))
 - d. Front scuff plate (See [FRONT SCUFF PLATE REMOVAL/ INSTALLATION.](#))
 - e. Rear scuff plate inner (See [REAR SCUFF PLATE REMOVAL/ INSTALLATION.](#))
 - f. B-pillar lower trims (See [B-PILLAR LOWER TRIM REMOVAL/ INSTALLATION.](#))
 - g. B-pillar upper trims (See [B-PILLAR UPPER TRIM REMOVAL/ INSTALLATION.](#))
 - h. Rear seat cushion (See [REAR SEAT CUSHION REMOVAL/ INSTALLATION.](#))
 - i. Rear side seat back (See [REAR SIDE SEAT BACK REMOVAL/ INSTALLATION.](#))
 - j. C-pillar trims (See [C-PILLAR TRIM REMOVAL/ INSTALLATION.](#))
4. Disconnect the dimming mirror connector. (vehicles with dimming mirror)
5. Disconnect the rain sensor connector. (vehicles with rain sensor)
6. Remove the sunvisors. (See [SUNVISOR REMOVAL/ INSTALLATION.](#))
7. Remove the map light. (See [MAP LIGHT REMOVAL/ INSTALLATION.](#))
8. Remove the assist handle. (See [ASSIST HANDLE REMOVAL/ INSTALLATION.](#))
9. Remove the headliner. (See [HEADLINER REMOVAL/ INSTALLATION.](#))
10. Remove the trunk end trim. (See [TRUNK END TRIM REMOVAL/ INSTALLATION.](#))
11. Remove the trunk side trim. (See [TRUNK SIDE TRIM REMOVAL/ INSTALLATION.](#))
12. Disconnect the rear drain hose from the sunroof frame.
13. Remove the rear drain hose from the clips.

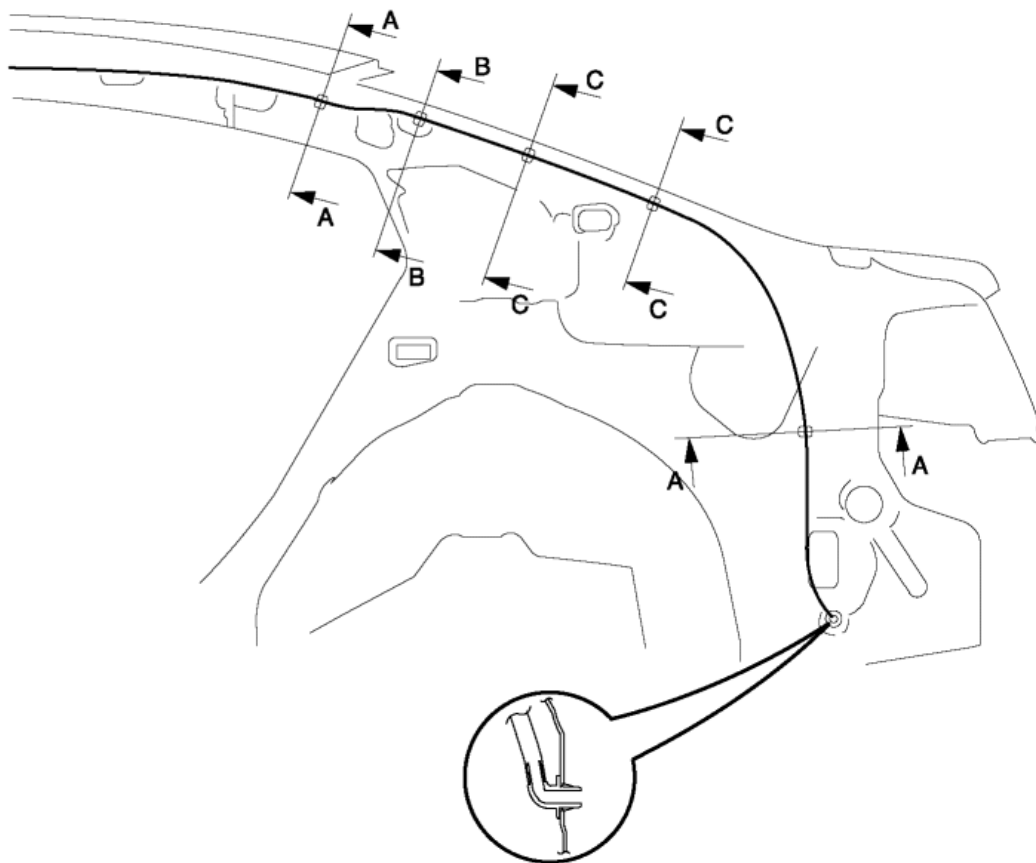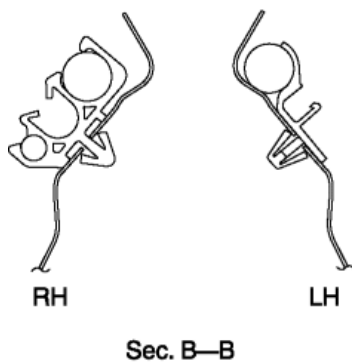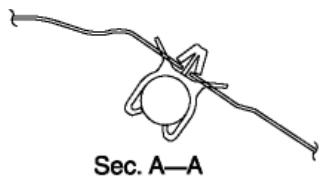

14. Pull the rear drain hose into the room side.
15. Remove the rear drain hose.

[< Previous](#) [Next >](#)