


2012 - Mazda6 - Body and Accessories

ROOF MOLDING REMOVAL

1. Insert a flathead screwdriver in the position shown in the figure.
2. Rotate the fastener remover in the direction of the arrow (1) shown in the figure and remove the roof molding from the T-stud (figure A).
3. Rotate the roof molding in the direction of the arrow (2) shown in the figure, pull up the roof molding in the direction of the arrow (3) while detaching it from the clip (figure B), and then remove the roof molding.

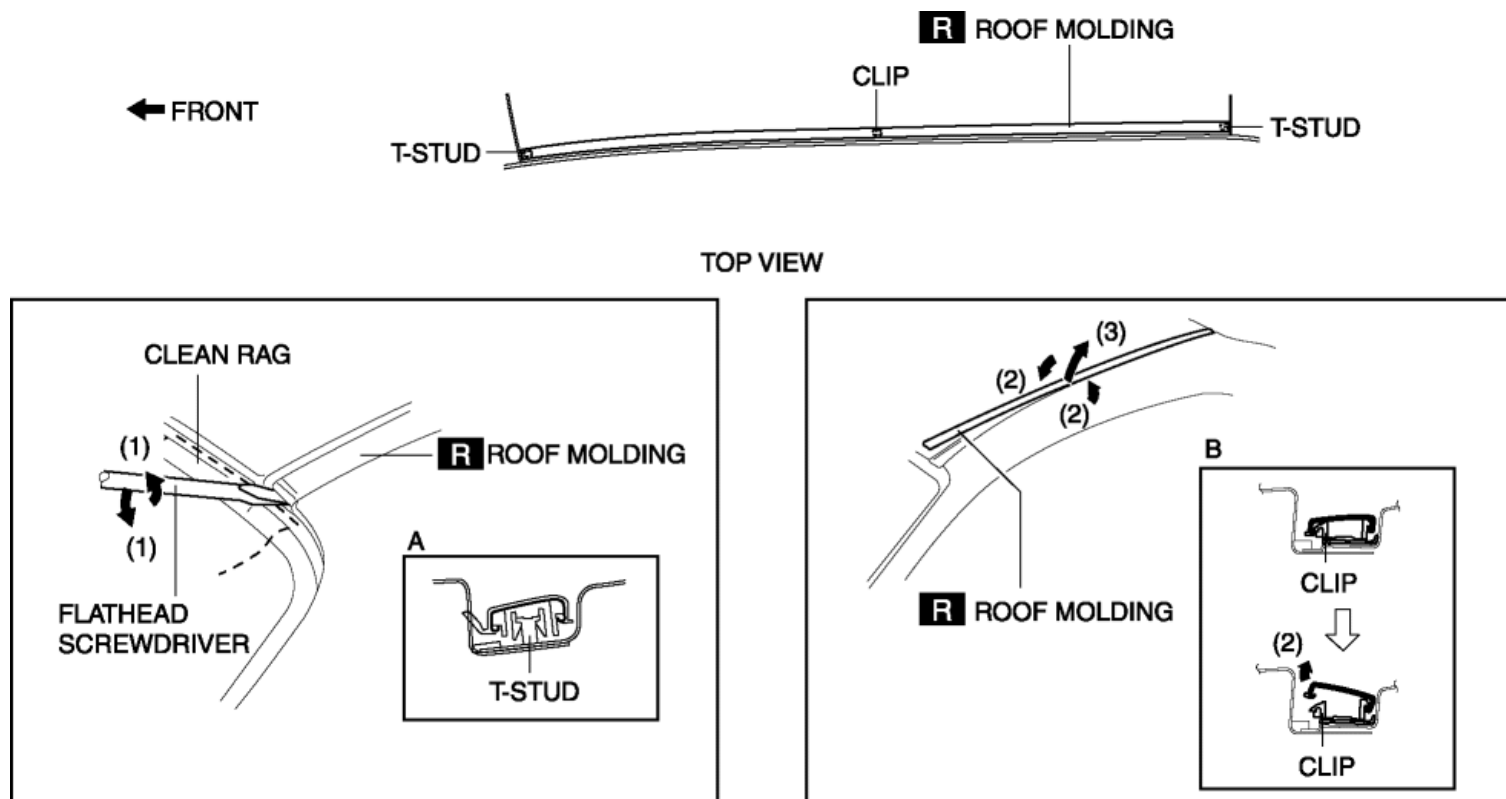

2012 - Mazda6 - Body and Accessories

ROOF MOLDING REMOVAL

1. Insert a flathead screwdriver in the position shown in the figure.
2. Rotate the fastener remover in the direction of the arrow (1) shown in the figure and remove the roof molding from the T-stud (figure A).
3. Rotate the roof molding in the direction of the arrow (2) shown in the figure, pull up the roof molding in the direction of the arrow (3) while detaching it from the clip (figure B), and then remove the roof molding.

