


## 2012 - Mazda6 - Body and Accessories

### REAR FINISHER REMOVAL/ INSTALLATION

1. Disconnect the negative battery cable.
2. Remove the trunk lid trim. (See [TRUNK LID TRIM REMOVAL/ INSTALLATION](#).)
3. Disconnect the request switch connector.
4. Remove the nuts A and nut C.

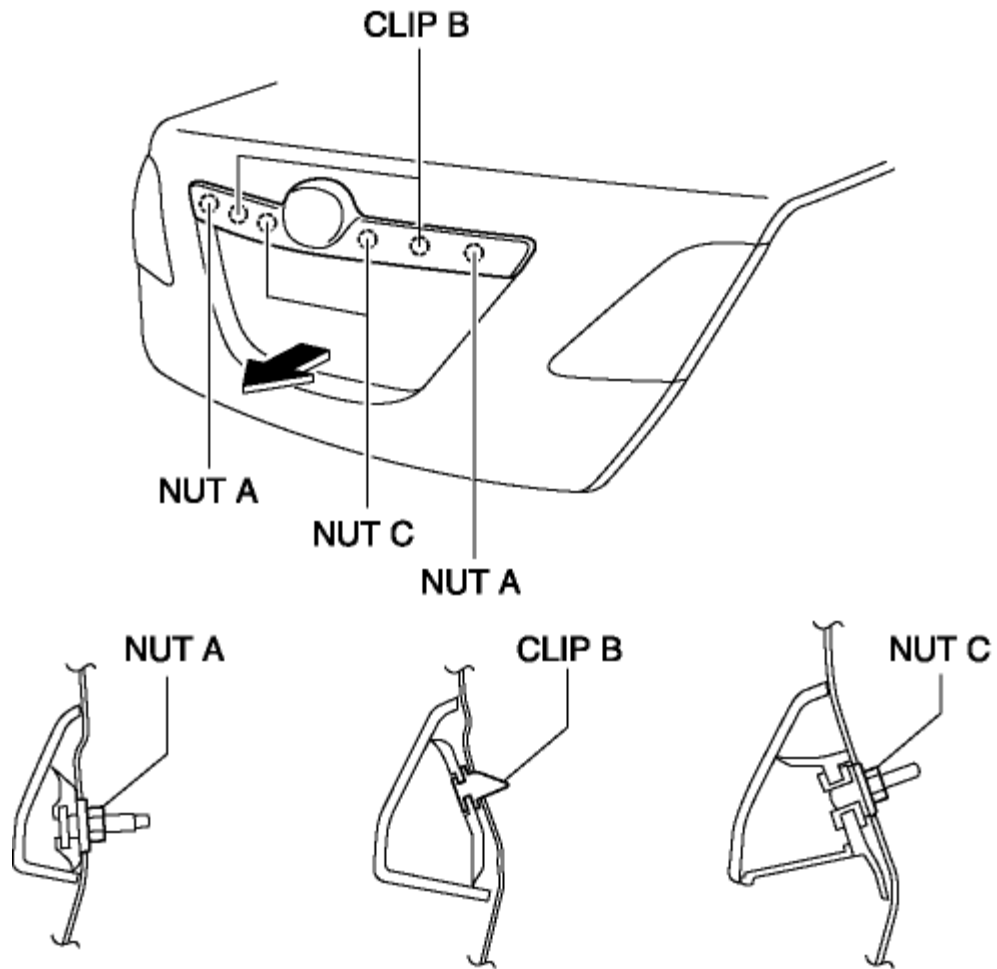

**NUT A, B :4.0—5.8 N·m {41—59 kgf·cm,36—51 in·lbf}**


5. Pull the rear finisher outward, then disengage clip B.
6. Remove the rear finisher.
7. Install in the reverse order of removal.



## 2012 - Mazda6 - Body and Accessories

### REAR FINISHER REMOVAL/ INSTALLATION

1. Disconnect the negative battery cable.
2. Remove the trunk lid trim. (See [TRUNK LID TRIM REMOVAL/ INSTALLATION](#).)
3. Disconnect the request switch connector.
4. Remove the nuts A and nut C.

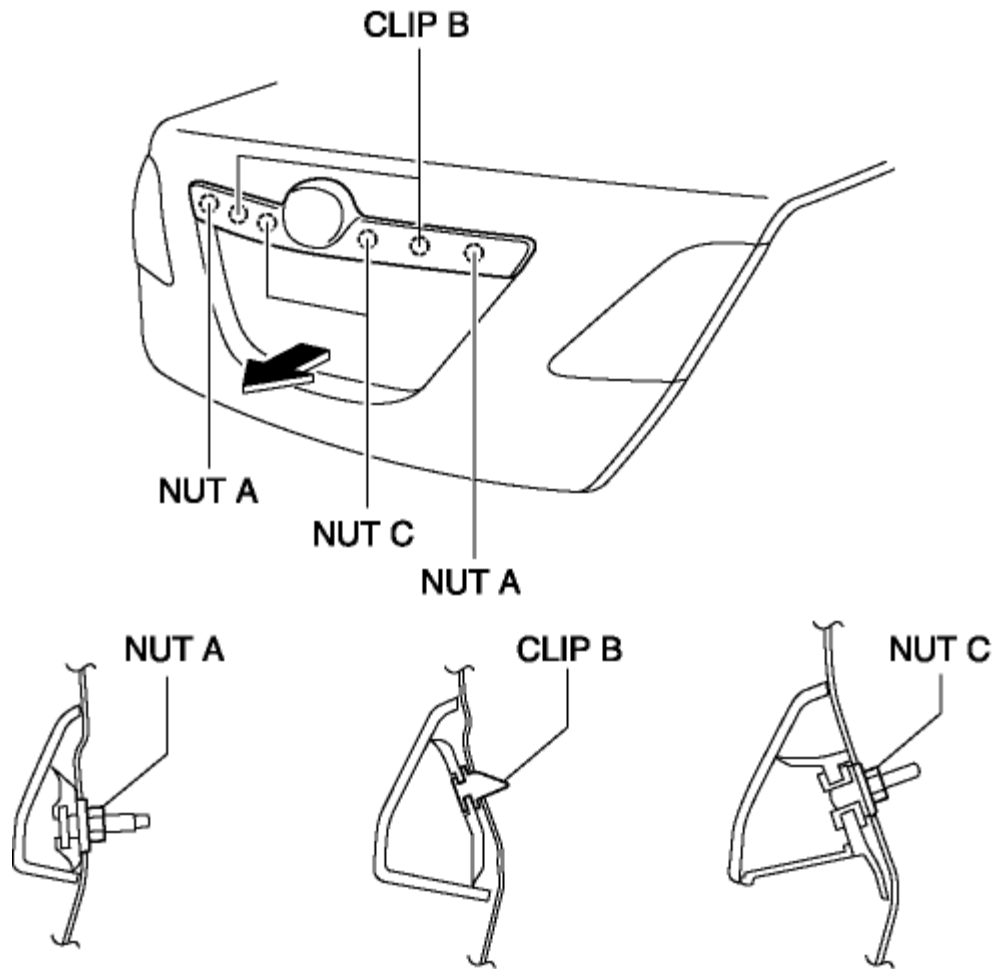

**NUT A, B :4.0—5.8 N·m {41—59 kgf·cm,36—51 in·lbf}**

5. Pull the rear finisher outward, then disengage clip B.
6. Remove the rear finisher.
7. Install in the reverse order of removal.

