


2012 - Mazda6 - Body and Accessories

EXTRACTOR CHAMBER REMOVAL/ INSTALLATION

1. Disconnect the negative battery cable.
2. Remove the rear combination light. (See [REAR COMBINATION LIGHT REMOVAL/ INSTALLATION](#).)
3. Remove the rear bumper. (See [REAR BUMPER REMOVAL/ INSTALLATION](#).)
4. Remove the clip.

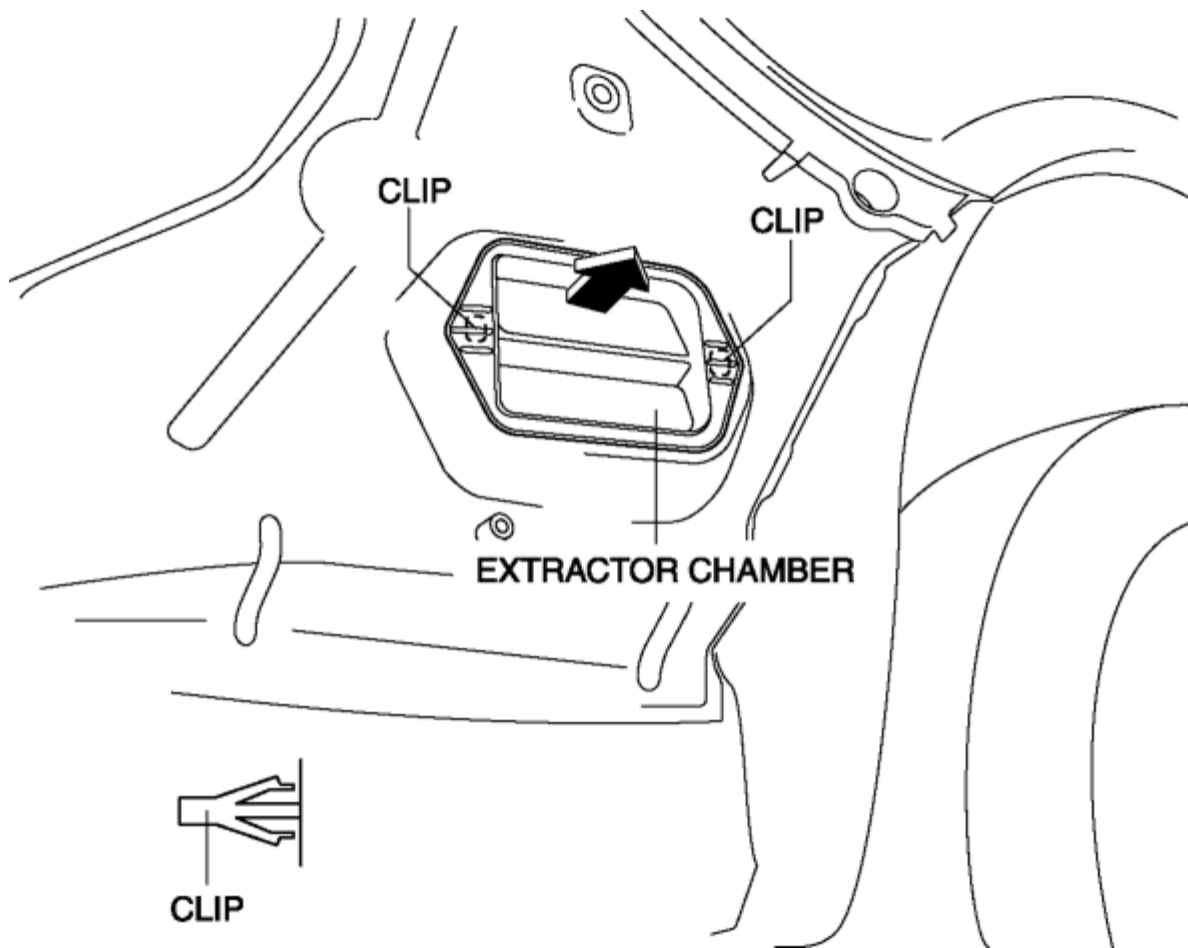


5. Remove the extractor chamber.
6. Install in the reverse order of removal.

2012 - Mazda6 - Body and Accessories

EXTRACTOR CHAMBER REMOVAL/ INSTALLATION

1. Disconnect the negative battery cable.
2. Remove the rear combination light. (See [REAR COMBINATION LIGHT REMOVAL/ INSTALLATION](#).)
3. Remove the rear bumper. (See [REAR BUMPER REMOVAL/ INSTALLATION](#).)
4. Remove the clip.

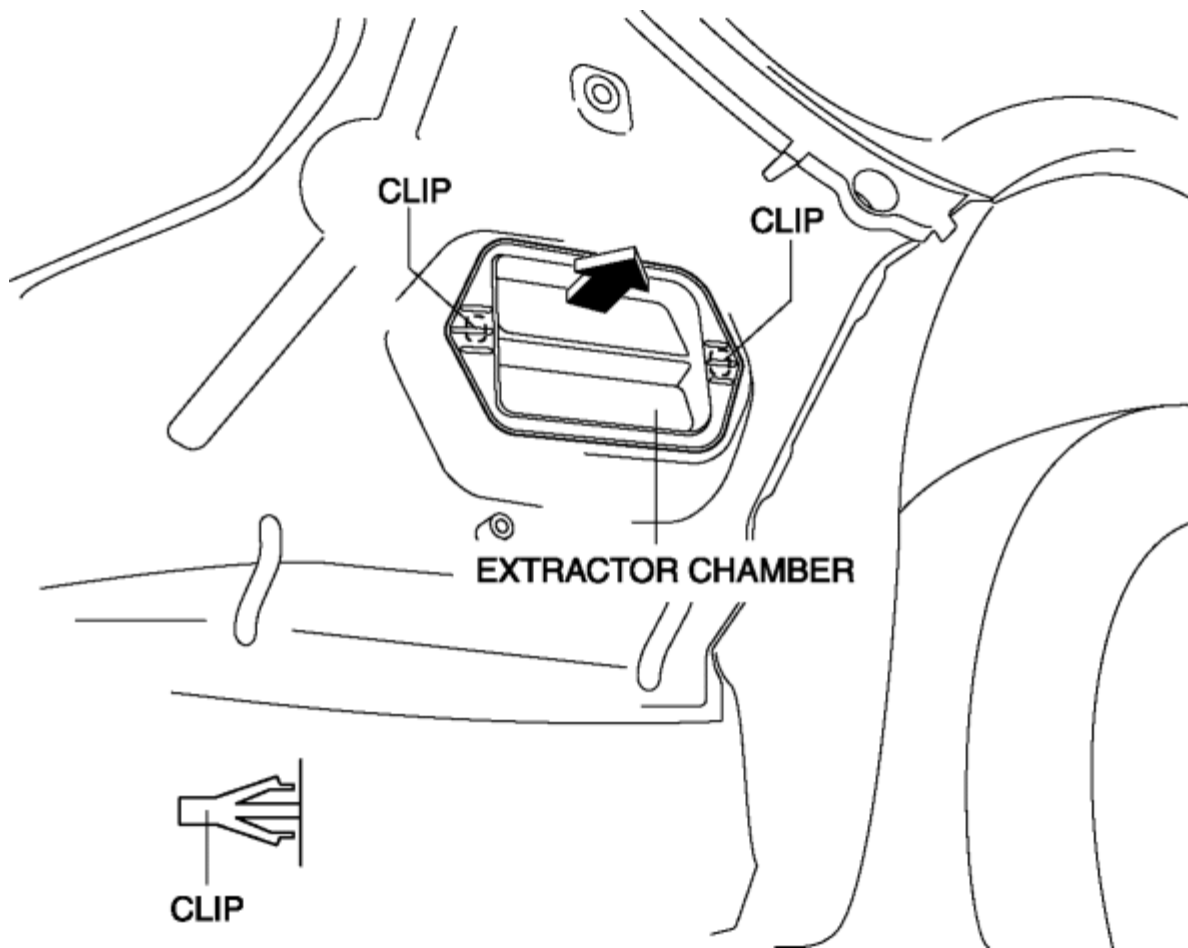

5. Remove the extractor chamber.
6. Install in the reverse order of removal.